

## Quick reference hand sheet for iR16SASER

**\*\* IMPORTANT: REFER TO [www.istoragepro.com](http://www.istoragepro.com) FOR HARDWARE COMPATIBILITY LIST.**

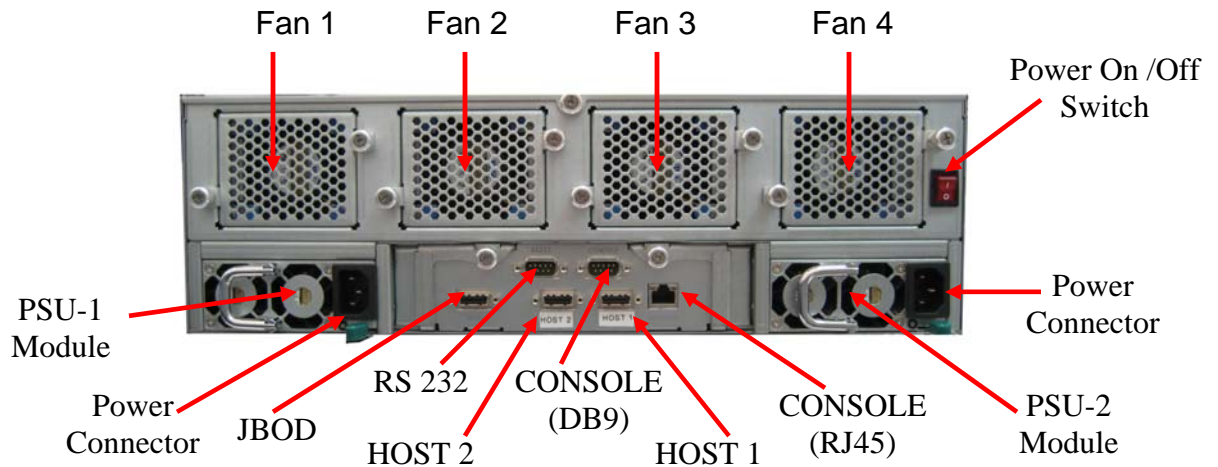


Figure 1 Rear Panel View

- Power On/ Off Switch : The switch to turn On/ Off the system
- Fan 1,2,3,4 : Redundant, hot swappable Fan Modules
- HOST 1,2 : Connect SFF8470 (InfiniBand) cable, the other cable end to HBA
- JBOB : For cascading to iR16SAEJ
- RS 232 : For APC UPS
- CONSOLE : For Web GUI
- PSU-1 Module / PSU2 Module : Redundant, hot swappable power modules
- Power Connector : For power cord connection
- HDD : Hard drive power on status
- FAIL : Hard drive fail status
- ACT : Hard drive activity status

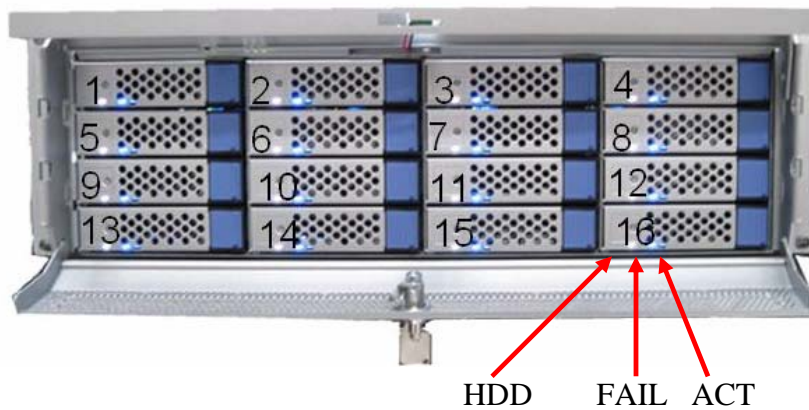


Figure 2 hard drives location

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

\* Number sticker for hard drive tray label

**Note:** Please refer to system operational user manual for further questions.