# Installation Guide

15-4103-01A


### **About this Manual**

#### Intended User

This manual is designed and written for users of the SR208 chassis. Experience in electronic or computer engineering is preferable.


### **Installation Guide**

Remove the chassis from the packaging and slide open the top cover.

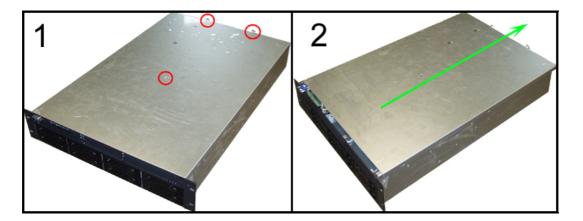


### Removing the top cover:

- 1. Remove the screw and loosen the two thumbscrews in the back of the chassis.
- 2. Slide the cover and lift up to remove the cover.

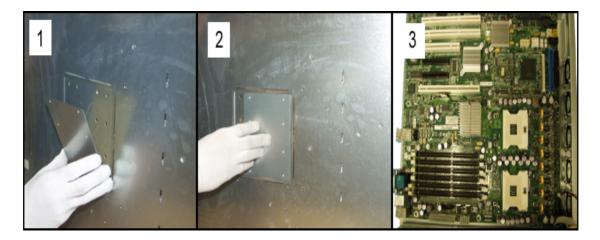

Mounting an Intel® Xeon™ server board:


- 1. Remove the adhesive from the mounting plate.
- 2. Securely fasten the plate onto the bottom of the chassis. (Match the holes that are appropriate to the motherboard you are using.)
- Mount the motherboard inside the chassis so that the plate is aligned with the CPU heatsink holes.

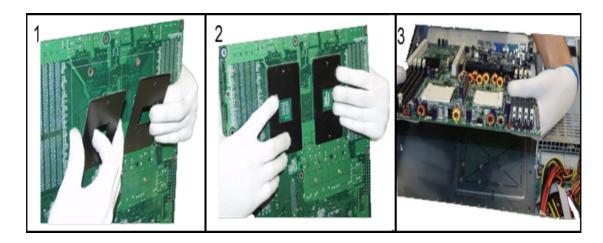


Mounting an AMD® Opteron™ server board:

- 1. Remove the adhesive from the mounting plates.
- 2. Securely fasten the plates onto the board.
- 3. Place the server board down into the chassis.



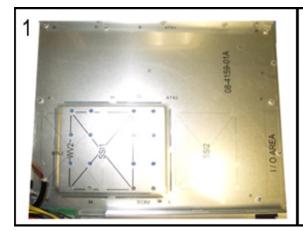

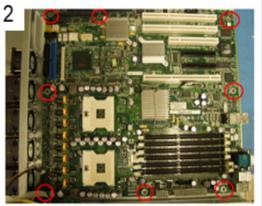

Mounting the motherboard onto the chassis:

- 1. Inside view of the chassis after removing the cover.
- 2. Mounting the motherboard and inserting the screws marked by the red circles.

# **Contact Us**

### **North America**

### Ci Design

E-mail: info@cidesign.com

Web Site: http://www.cidesign.com

Toll free number: 1-800-576-5487

## **Europe**

### Ci Europe

E-mail: info@ci-designeurope.nl

Web Site: http://www.ci-designeurope.nl

Tel: 31 (0)46 477 0640

