


Quick reference hand sheet for iR8SAE00T-A

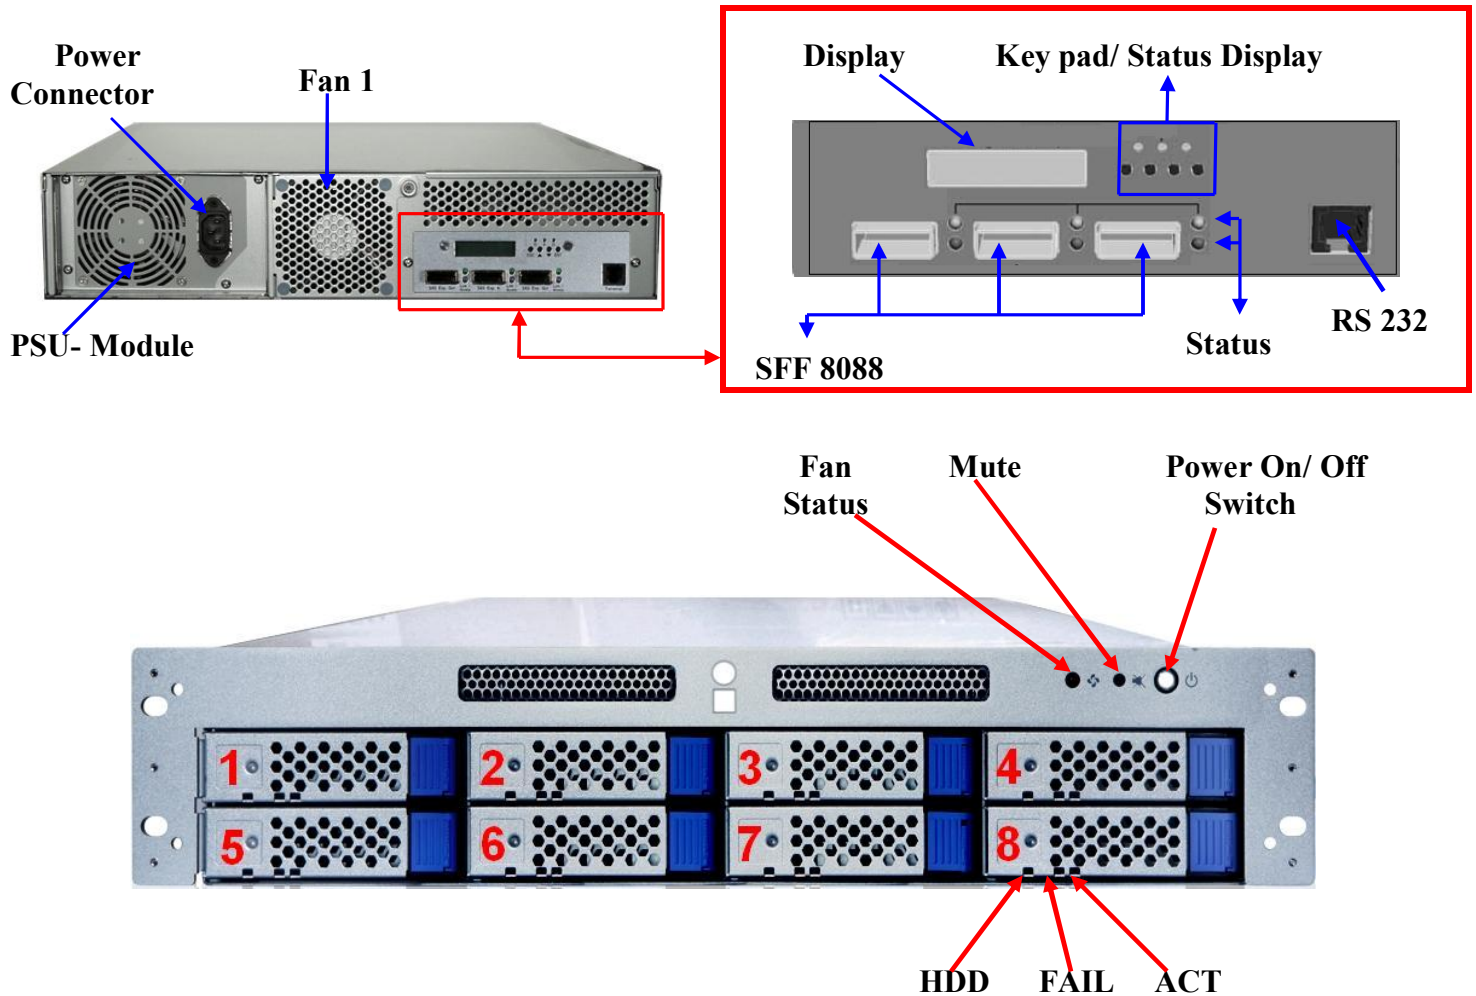

- SFF 8088 : Connection for MiniSAS 8088 connector
- Display : Status information
- Keypad/ Status Display : System keypad and status display for power, busy and fault
- RS 232 : CLI configuration
- Status : Link/ Activity LED for Expander port
- Power Connector : For power cord connection
- Lock : Lock to prevent unauthorized access
- Power ON Status : Power On indicator
- Fan Status : Fan failed indicator
- Power ON / OFF Switch : Switch to turn On/ Off the system
- Mute : Alarm Mute



* Number sticker provided for hard drive tray label.

Note: Please refer to system operational user manual for further questions.