

## Quick reference hand sheet for iR16SAEJ

**\*\* IMPORTANT: REFER TO [www.istoragepro.com](http://www.istoragepro.com) FOR HARDWARE COMPATIBILITY LIST.**

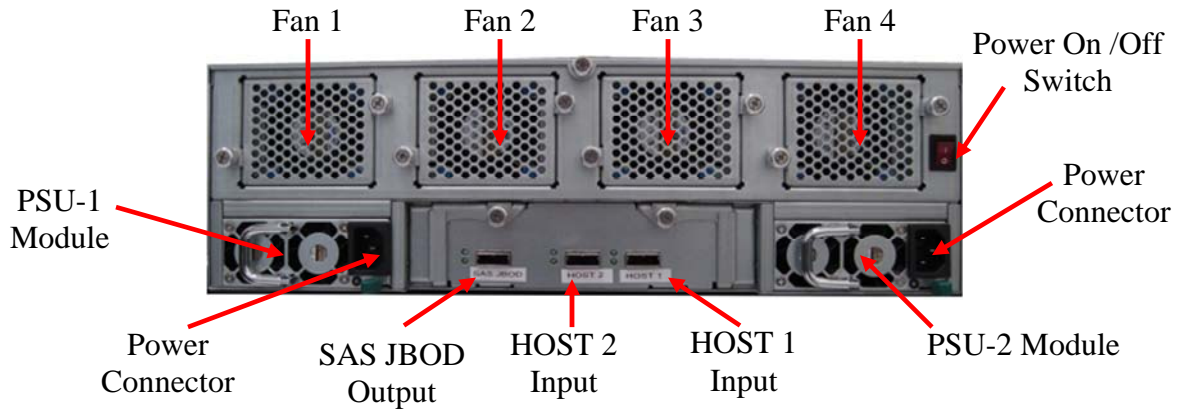


Figure 1 Rear Panel View

- Power On / Off Switch : The switch to turn On/ Off the system
- Fan 1,2,3,4 : Redundant, hot swappable Fan Modules
- HOST 1 : Connect 8470-8088 MiniSAS Cable, the other end to the Raid subsystem / Windows Server
- HOST 2 : For clustering
- SAS JBOD : For cascading to another iR16SAEJ
- PSU-1 Module / PSU2 Module : Redundant, hot swappable power modules
- Power Connector : For power cord connection
- HDD : Hard drive power on status
- FAIL : Hard drive fail status
- ACT : Hard drive activity status

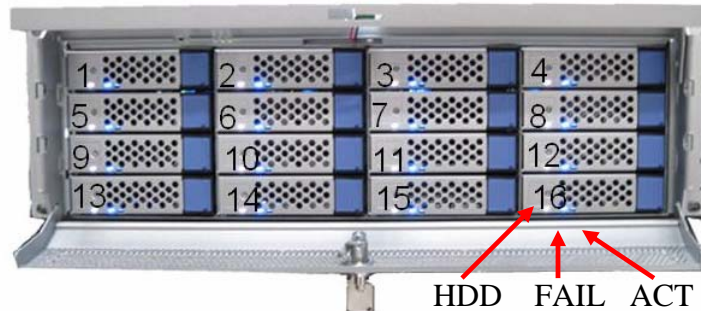


Figure 2 Hard Drive Locations

|   |    |    |    |    |    |    |    |
|---|----|----|----|----|----|----|----|
| 1 | 2  | 3  | 4  | 5  | 6  | 7  | 8  |
| 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |

\* Number sticker for hard drive tray label

**Note:** Please refer to system operational user manual for further questions.