



iR16IS4ER

**iSCSI GbE (4 Ports) to SATA II / SAS
Subsystem**

User Manual

Version 1.4

Limited Warranty

iStoragePro WARRANTS TO THE ORIGINAL PURCHASER THAT ITS EXTERNAL ENCLOSURE PRODUCTS INCLUDING THE COMPONENTS THEREIN, SHALL BE FREE FROM DEFECTS IN MATERIAL AND CRAFTSMANSHIP FOR A LIMITED PERIOD OF THREE (3) YEARS. SHOULD iStoragePro BUNDLE, OFFER, COMBINE OR DISTRIBUTE ANY THIRD PARTY'S HARDWARE, PRODUCTS, COMPONENTS, THE WARRANTY OFFERED BY SUCH MANUFACTURERS OR SUPPLIERS MUST APPLY. ANY SOFTWARE INSTALLED, DISTRIBUTED, OR SOLD BY Ci DESIGN IS NOT COVERED BY iStoragePro's LIMITED WARRANTY AND MUST ONLY REFER TO THE LICENSING AGREEMENT ACCOMPANYING TO THE SOFTWARE FOR THE TERMS AND CONDITIONS OF USING SUCH SOFTWARE. ANY OTHER LIMITED WARRANTY PERIOD OFFERED BY iStoragePro TO DIFFERENT PRODUCTS FREE FROM DEFECTS IN MATERIAL AND CRAFTSMANSHIP TO THE ORIGINAL PURCHASER WILL BE SPECIFIED IN OUR WRITTEN QUOTATION, CONTRACT OR IN ANY OTHER WRITTEN FORM TO PURCHASER. PURCHASER'S PURCHASE ORDER TO Ci DESIGN SHALL BE DEEMED IN ACCEPTANCE OF SUCH LIMITED WARRANTY. iStoragePro's WARRANTY PERIOD STARTS FROM THE DATE OF INVOICE. THESE ARE THE ONLY WARRANTIES Ci DESIGN OFFERS. iStoragePro MAKES NO OTHER WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, WRITTEN, ORAL OR STATUTORY, AND EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING MERCHANTABILITY OR FITNESS FOR ANY SPECIFIC PURPOSE, REGARDLESS OF ORIGIN. iStoragePro DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY FOR CLAIMS OF ACTUAL OR ALLEGED PATENT INFRINGEMENT FOR ANY iStoragePro PRODUCT, INCLUDING iStoragePro PRODUCTS THAT ARE COMBINED WITH HARDWARE, SOFTWARE, EQUIPMENT, OR OTHER MATERIALS NOT FURNISHED BY iStoragePro, INCLUDING ANY COVERAGE FOR COMPENSATORY DAMAGES, PUNITIVE DAMAGES, ATTORNEY FEES, COSTS, CONSEQUENTIAL DAMAGES, OR OTHER LOSSES, EXPENSES, OR DAMAGES. UNDER NO CIRCUMSTANCE IS iStoragePro LIABLE FOR ANY OF THE FOLLOWING EVEN IF PURCHASER HAS BEEN INFORMED OF THEIR POSSIBILITY: (a) LOSS OF, DAMAGE TO DATA, (b) INCIDENTAL OR CONSEQUENTIAL DAMAGES, (c) LOST BUSINESS, REVENUE, PROFIT, GOODWILL OR ANY ANTICIPATED SAVINGS, (d) THIRD PARTY CLAIMS AGAINST PURCHASER FOR DAMAGES.

RMA Procedures

Should it be necessary for any reason to return a product to iStoragePro, an RMA return authorization number must be obtained and the following procedures must be followed: (1) Fax or email a request to a iStoragePro representative stating reason for return and provide: purchase order number, invoice number, iStoragePro's part number, and serial number (when applicable). (2) Purchaser will be faxed or emailed a RMA number and instructions for returning products. (3) The RMA number must appear on the shipping label of each carton and all shipping documents that are being returned. RMA product must be received by iStoragePro within thirty (30) days after authorization date. (4) Purchaser must ship returned products "prepaid" unless iStoragePro has agreed in writing to other arrangements. (5) Under all circumstances, any products being returned to iStoragePro must be authorized via iStoragePro RMA procedures. (6) Items may be returned for replacement or credit only. Cash refunds will not be given without specific written authorization made at the time the RMA is issued by iStoragePro. Items being returned must be original iStoragePro products and covered by an applicable warranty period. The authorized returned products must be packaged in their original packing material with all components included. All returned items must be in resalable condition, new or no usage. If these requirements are not met, iStoragePro will recover the loss via increased restocking charges or return the products to Purchaser. If Purchaser is requesting a credit to its account, Purchaser's written request for RMA must be made within three (3) days after the receipt of the applicable product(s). Upon acceptance of the returned product(s) by iStoragePro, Purchaser's account will be credited, less a 25% "restocking fee". iStoragePro cannot provide cash refunds.

UNDER NORMAL USE, SHOULD THE PRODUCT UNDER WARRANTY FAIL IN MATERIAL OR CRAFTSMANSHIP, iStoragePro WILL, AT ITS SOLE DISCRETION, (1) REPAIR AND RETURN THE PRODUCTS, FREIGHT PREPAID, AND HONOR THE BALANCE OF THE WARRANTY PERIOD OR (2) REPLACE OR SUBSTITUTE THE PRODUCTS, FREIGHT PREPAID, AND HONOR THE BALANCE OF WARRANTY PERIOD. PRODUCTS THAT HAVE BEEN DAMAGED THROUGH NEGLIGENCE, ACCIDENT, ABUSE, MISAPPLICATION, MODIFICATION, MISUSE OF THE PURCHASER OR ITS AGENT OR DAMAGED THROUGH SERVICES, UPGRADES, CHANGE VERSION OR EXPANSIONS PERFORMED BY NOT A iStoragePro's REPRESENTATIVE OR iStoragePro AUTHORIZED SERVICE PROVIDER WILL BE, AT PURCHASER'S DISCRETION, REPLACED AT PURCHASER'S COST OR RETURN TO PURCHASER UN-REPAIRED, FREIGHT COLLECT.

Preface

About this manual

This manual is the introduction of **iStoragePro (iR16IS4ER)** controller and it aims to help users know the operations of the disk array system easily. Information contained in this manual has been reviewed for accuracy, but not for product warranty because of the various environments/OS/settings, Information and specification will be changed without further notice. For any update information, please visit www.istoragepro.com and your contact windows.

Copyright@2009, iStoragePro. All rights reserved.

Thank you for using **iStoragePro** products; if you have any question, please e-mail to "info@istoragepro.com". We will answer your question as soon as possible.

Package content

- One **iR16IS4ER-N**: Gigabit LAN (x4) -to- SATA II/SAS RAID controller.
- One Ethernet Cross over cable
- One Serial 232 Cable

Not included: (Optional) 4 X RJ45 Gbits Straight Ethernet data Cable

Please contact with "info@istoragepro.com" to get the latest user manual and firmware.

iR16IS4ER is recommended **DDR2-533 1GB** or above. Please refer to the certification list in Appendix A.

Important Notice

The support and service provided by iStoragePro applied only for **DIRECT CUSTOMERS** who purchase products from iStoragePro. For end users or indirect customers, please contact your distributor for better support and faster response. Please do not contact iStoragePro since you may not receive any response if YOU ARE NOT A DIRECT CUSTOMER TO iStoragePro.

Table of Contents

Chapter 1	Overview	8
1.1	Features.....	8
1.1.1	Highlights	9
1.1.2	Technical specifications	9
1.2	RAID concepts	11
1.2.1	Terminology	11
1.2.2	RAID levels	13
1.2.3	Volume relationship	14
1.3	iSCSI concepts	14
Chapter 2	Installation	17
2.1	Package contents	17
2.2	The Enclosure Description	17
2.3	Make the system connected	18
Chapter 3	Quick setup	18
3.1	Management interfaces	18
3.1.1	Serial console	18
3.1.2	Remote control.....	18
3.1.3	LCM	19
3.1.4	Web UI.....	21
3.2	How to use the system quickly.....	23
3.2.1	Quick installation.....	23
3.2.2	Volume creation wizard.....	24
Chapter 4	Configuration	27
4.1	Web UI management interface hierarchy	27
4.2	System configuration	28
4.2.1	System Setting.....	28
4.2.2	IP address.....	29
4.2.3	Login setting	29
4.2.4	Mail setting.....	30
4.2.5	Notification setting.....	31
4.3	iSCSI configuration	32
4.3.1	Entity property.....	33
4.3.2	NIC.....	33
4.3.3	Node	35
4.3.4	Session	37
4.3.5	CHAP account	38
4.4	Volume configuration	39
4.4.1	Physical disk	39
4.4.2	RAID group	42
4.4.3	Virtual disk	45
4.4.4	Snapshot.....	50
4.4.5	Logical unit.....	52
4.4.6	Example.....	54
4.5	Enclosure management.....	58
4.5.1	SES configuration	59
4.5.2	Hardware monitor	59
4.5.3	Hard drive S.M.A.R.T. support.....	60
4.5.4	UPS	61
4.6	System maintenance	62

4.6.1	System information	63
4.6.2	Upgrade	63
4.6.3	Reset to factory default	64
4.6.4	Import and export.....	64
4.6.5	Event log.....	65
4.6.6	Reboot and shutdown	66
4.7	Logout.....	66
Chapter 5	Advanced operations	67
5.1	Volume rebuild.....	67
5.2	RG migration.....	69
5.3	VD extension.....	70
5.4	iSnap.....	71
5.4.1	Create snapshot volume	71
5.4.2	Auto snapshot.....	72
5.4.3	Rollback.....	73
5.4.4	iSnap constraint	74
5.5	Disk roaming	76
5.6	VD clone	76
5.7	SAS JBOD expansion.....	82
5.7.1	Connecting JBOD	82
5.7.2	Upgrade firmware of JBOD	84
5.8	MPIO and MC/S.....	84
5.9	Trunking and LACP.....	86
Chapter 6	Troubleshooting	87
6.1	System buzzer	87
6.2	Event notifications.....	87
6.3	How to get support.....	95
Appendix	98
A.	Certification list.....	98
B.	Microsoft iSCSI initiator.....	102

Chapter 1 Overview

1.1 Features

iStoragePro controller can provide non-stop service with a high degree of fault tolerance by using **iStoragePro** RAID technology and advanced array management features.

The controller of iR16IS4ER connects to the host system by iSCSI interface. It can be configured to numerous RAID level. The controller provides reliable data protection for servers by using RAID 6. The RAID 6 allows two HDD failures without any impact on the existing data. Data can be recovered from the existing data and parity drives. (Data can be recovered from the rest drives.)



Figure 1.1.1 iR16IS4ER

Snapshot-on-the-box (iSnap) is a fully usable copy of a defined collection of data that contains an image of the data as it appeared at the point in time, which means a point-in-time data replication. It provides consistent and instant copies of data volumes without any system downtime. Snapshot-on-the-box can keep up to 32 snapshots for one logical volume. **Rollback** feature is provided for restoring the previous-snapshot data easily while continuously using the volume for further data access. The data access which includes read / write is working as usual without any impact to end users. The "on-the-box" implies that it does not require any proprietary agents installed at host side. The snapshot is taken at target side. It will not consume any host CPU time thus the server is dedicated to the specific or other application. The snapshot copies can be taken manually or by schedule every hour or every day, depends on the modification.

iStoragePro controller is the most cost-effective disk array system with completely integrated high-performance and data-protection capabilities which meet or exceed the highest industry standards, and **the best data solution for small / medium business (SMB) users.**

1.1.1 Highlights

- **iStoragePro Controller feature highlights**

1. Front-end 4-ported iSCSI GbE ports with load-balancing and failover for high availability
2. Hardware iSCSI off-load engine enabled
3. RAID 6, 60
4. iSnap without relying on host software
5. iSCSI jumbo frame support
6. Header/Data digest support
7. SATAII drive backward-compatible
8. One logic volume can be shared by as many as 8 hosts
One logic volume can be shared by as many as 16 hosts
9. Host access control
10. Configurable N-way mirror for high data protection
11. On-line volume migration with no system down-time
12. HDD S.M.A.R.T. enabled for SATA drives
13. SAS JBOD expansion support
14. Windows VSS support
15. Disk auto spindown support
16. Virtual disk clone function.(The detail step please refer to The Quick Guide - How_to_perform_VD_clone_function
17. BOOTP support on management port.

1.1.2 Technical specifications

- **Key components**

1. CPU : Intel Xscale IOP 81342
2. Memory : 1GB ~ 2 GB DDRII 533 DIMM supported
3. 32MB flash
4. UARTs : support for serial console management and UPS
5. Fast Ethernet port for web-based management use.
6. Backend : Up to 24 SAS 3.0Gb/s, or SATA 1.0, 1.5Gb/s or SATA 2.0, 3Gb/s disks supported on the controller board
7. Front-end : Two Intel GbE NIC controllers
8. LCM supported for easy management use
9. Battery backup support (optional)

- **RAID and volume operation**

1. RAID level: 0,1,0+1,3,5,6,10,30,50, 60 and JBOD
2. Up to 1024 logical volumes in the system
3. Up to 16 PDs can be included in one volume group
4. Global and dedicated hot spare disks
5. Write-through or write-back cache policy for different application usage
6. Multiple RAID volumes support

7. Configurable RAID stripe size
8. Online volume expansion
9. Instant RAID volume availability
10. Auto volume rebuilding
11. Online volume migration

- **Advanced data protection**

1. iSnap
2. Local N-way mirror
3. On-line disk roaming
4. Smart faulty sector relocation
5. Battery backup support (optional)

- **Enclosure monitoring**

1. S.E.S. support for standard enclosure management
2. UPS management via the specific serial port
3. Fan speed monitoring fan x4
4. Redundant power supply monitor
5. 3.3V, 5V and 12V voltage monitor
6. Thermal sensors x 3 on the controller BOARD (for CPU, bridge and host channel chip)
7. Thermal sensor x 3 (up to 24) in enclosure.
8. Status report of the managed **iR16SAEJ** SAS/SATA JBODs

- **Management interface**

1. Management UI via serial console, SSH telnet, HTTP Web UI, and secured Web (HTTPS)
2. Online system firmware upgrade mechanism
3. Event notification via Email, SNMP trap, browser pop-up windows, Syslog, and Windows Messenger.
4. Run-time IO transactions recording
5. Built-in LCD module to control most enclosure components
6. iSNS and DHCP support
7. CHAP authentication enabled

- **Host connection**

1. 4 x GbE ports support independent access, failover and load-balancing (802.3ad port trunking, LACP)
2. Multiple iSCSI target nodes support
3. Microsoft MPIO enabled
4. iSCSI jumbo frame support
5. Header/Data digest support
6. LUN access control: Read-Write and Read-Only
7. Up to 128 sessions
8. Up to 16 hosts clustered for one volume
9. Support Windows, Linux and Mac OS

- **Drive support**

1. SCSI-3 compliant
2. Multiple IO transaction processing
3. Tagged command queuing
4. Hard drive S.M.A.R.T. enabled for SATA drives
5. Up to 4 **iStoragePro iR16SAEJ** SAS JBODs can be connected to one **iR16IS4ER** by using the SAS JBOD port
6. The overall SAS/SATA drives supported for one controller is up to $16+4*16 = 80$ SAS/SATA drives

- **Chassis integration**

1. Controller Board Assembly of iR16IS4ER form factor
Dimension: 14.5 cm x 28 cm x 3.2 cm (W x D x H)
2. VHDM-HSD connector to customized backplane, designed with all interfaces mounted on-board exposed to external via customized IO bracket

1.2 RAID concepts

RAID is the abbreviation of “Redundant **A**rray of Independent **D**isks”. The basic idea of RAID is to combine multiple drives together to form one large logical drive. This RAID drive obtains performance, capacity and reliability than a single drive. The operating system detects the RAID drive as a single storage device.

1.2.1 Terminology

The document uses the following terms:

- **Part 1: Common**

RAID	Redundant A rray of Independent D isks. There are different RAID levels with different degree of data protection, data availability, and performance to host environment.
PD	The Physical Disk belongs to the member disk of one specific RAID group.
RG	Raid Group . A collection of removable media. One RG consists of a set of VDs and owns one RAID level attribute.
VD	Virtual Disk . Each RD could be divided into several VDs. The VDs from one RG have the same RAID level, but may have different volume capacity.
LUN	Logical Unit Number . A logical unit number (LUN) is a unique

	identifier which enables it to differentiate among separate devices (each one is a logical unit).
GUI	Graphic User Interface.
RAID cell	When creating a RAID group with a compound RAID level, such as 10, 30, 50 and 60, this field indicates the number of subgroups in the RAID group. For example, 8 disks can be grouped into a RAID group of RAID 10 with 2 cells, 4 cells. In the 2-cell case, PD {0, 1, 2, 3} forms one RAID 1 subgroup and PD {4, 5, 6, 7} forms another RAID 1 subgroup. In the 4-cells, the 4 subgroups are PD {0, 1}, PD {2, 3}, PD {4, 5} and PD {6,7}.
WT	Write-Through cache-write policy. A caching technique in which the completion of a write request is not signaled until data is safely stored in non-volatile media. Each data is synchronized in both data cache and accessed physical disks.
WB	Write-Back cache-write policy. A caching technique in which the completion of a write request is signaled as soon as the data is in cache and actual writing to non-volatile media occurs at a later time. It speeds up system write performance but needs to bear the risk where data may be inconsistent between data cache and the physical disks in one short time interval.
RO	Set the volume to be Read-Only .
DS	Dedicated Spare disks. The spare disks are only used by one specific RG. Others could not use these dedicated spare disks for any rebuilding purpose.
GS	Global Spare disks. GS is shared for rebuilding purpose. If some RGs need to use the global spare disks for rebuilding, they could get the spare disks out from the common spare disks pool for such requirement.
DG	DeGraded mode. Not all of the array's member disks are functioning, but the array is able to respond to application read and write requests to its virtual disks.
SCSI	Small Computer Systems Interface.
SAS	Serial Attached SCSI.
S.M.A.R.T.	Self-Monitoring Analysis and Reporting Technology.
WWN	World Wide Name.
HBA	Host Bus Adapter.
SES	SCSI Enclosure Services.

NIC	Network Interface Card.
BBM	Battery Backup Module

- **Part 2: iSCSI**

iSCSI	Internet Small Computer Systems Interface.
LACP	Link Aggregation Control Protocol.
MPIO	Multi-Path Input/Output.
MC/S	Multiple Connections per Session
MTU	Maximum Transmission Unit.
CHAP	Challenge Handshake Authentication Protocol. An optional security mechanism to control access to an iSCSI storage system over the iSCSI data ports.
iSNS	Internet Storage Name Service.

1.2.2 RAID levels

There are different RAID levels with different degree of data protection, data availability, and performance to host environment. The description of RAID levels are on the following:

RAID 0	Disk striping. RAID 0 needs at least one hard drive.
RAID 1	Disk mirroring over two disks. RAID 1 needs at least two hard drives.
N-way mirror	Extension to RAID 1 level. It has N copies of the disk.
RAID 3	Striping with parity on the dedicated disk. RAID 3 needs at least three hard drives.
RAID 5	Striping with interspersed parity over the member disks. RAID 3 needs at least three hard drives.
RAID 6	2-dimensional parity protection over the member disks. RAID 6 needs at least four hard drives.
RAID 0+1	Mirroring of the member RAID 0 volumes. RAID 0+1 needs at least four hard drives.
RAID 10	Striping over the member RAID 1 volumes. RAID 10 needs at least four hard drives.

RAID 30	Striping over the member RAID 3 volumes. RAID 30 needs at least six hard drives.
RAID 50	Striping over the member RAID 5 volumes. RAID 50 needs at least six hard drives.
RAID 60	Striping over the member RAID 6 volumes. RAID 60 needs at least eight hard drives.
JBOD	The abbreviation of “ J ust a B unch O f D isks”. JBOD needs at least one hard drive.

1.2.3 Volume relationship

The below graphic is the volume structure which **iStoragePro** has designed. It describes the relationship of RAID components. One RG (RAID group) consists of a set of VDs (Virtual Disk) and owns one RAID level attribute. Each RG can be divided into several VDs. The VDs in one RG share the same RAID level, but may have different volume capacity. All VDs share the CV (Cache Volume) to execute the data transaction. LUN (Logical Unit Number) is a unique identifier, in which users can access through SCSI commands.

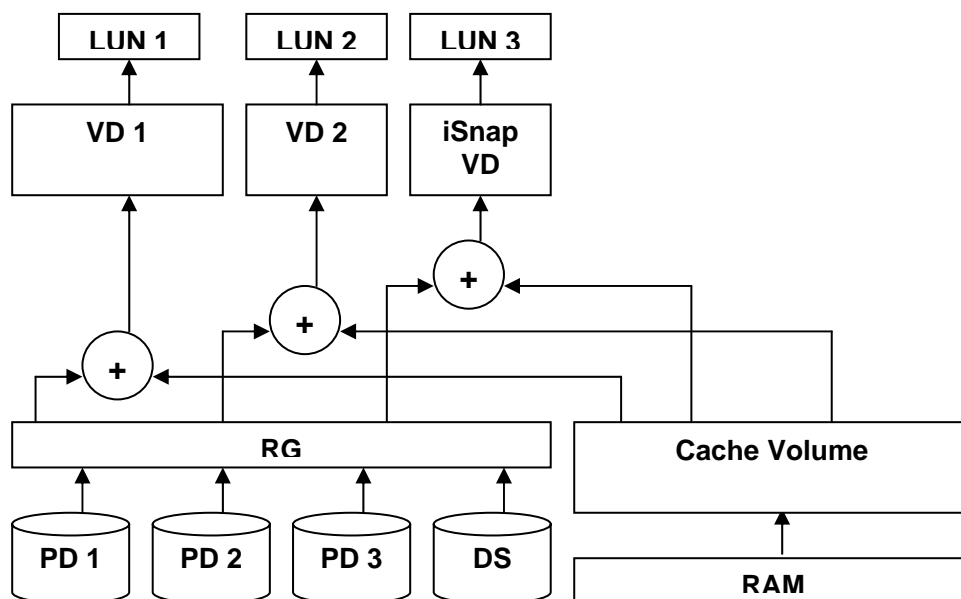


Figure 1.2.3.1

1.3 iSCSI concepts

iSCSI (Internet SCSI) is a protocol which encapsulates SCSI (Small Computer System Interface) commands and data in TCP/IP packets for linking storage devices with servers over common IP infrastructures. iSCSI provides high performance SANs over standard IP networks like LAN, WAN or the Internet.

IP SANs are true SANs (Storage Area Networks) which allow several servers to attach to an infinite number of storage volumes by using iSCSI over TCP/IP networks. IP SANs can scale the storage capacity with any type and brand of storage system. In addition, it can be used by any type of network (Ethernet, Fast Ethernet, Gigabit Ethernet, and 10 Gigabit Ethernet) and combination of operating systems (Microsoft Windows, Linux, Solaris, Mac, etc.) within the SAN network. IP-SANs also include mechanisms for security, data replication, multi-path and high availability.

Storage protocol, such as iSCSI, has “two ends” in the connection. These ends are initiator and target. In iSCSI, we call them iSCSI initiator and iSCSI target. The iSCSI initiator requests or initiates any iSCSI communication. It requests all SCSI operations like read or write. An initiator is usually located on the host side (either an iSCSI HBA or iSCSI SW initiator).

The target is the storage device itself or an appliance which controls and serves volumes or virtual volumes. The target is the device which performs SCSI command or bridge to an attached storage device.

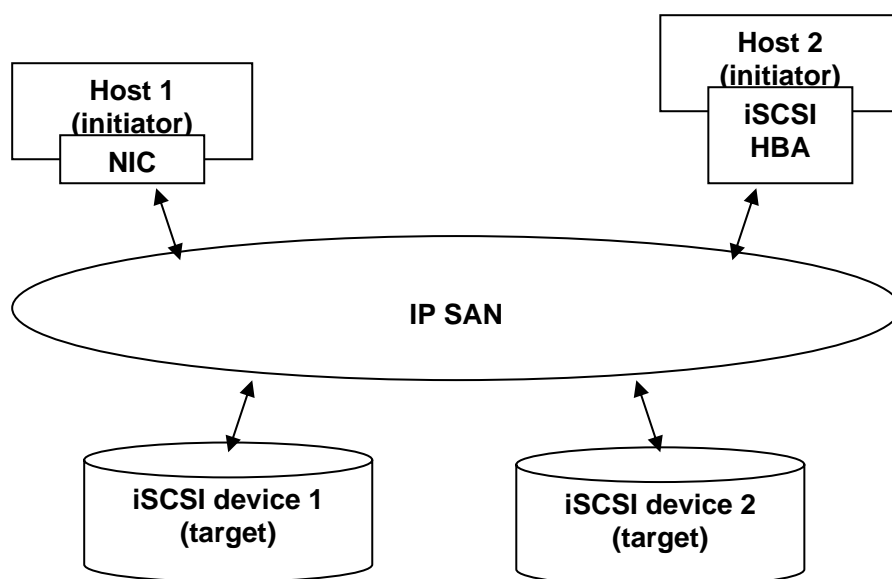


Figure 1.3.1

The host side needs an iSCSI initiator. The initiator is a driver which handles the SCSI traffic over iSCSI. The initiator can be software or hardware (HBA). Please refer to the certification list of iSCSI HBA(s) in Appendix A. OS native initiators or other software initiators use standard TCP/IP stack and Ethernet hardware, while iSCSI HBA(s) use their own iSCSI and TCP/IP stacks on board.

Hardware iSCSI HBA(s) provide its own initiator tool. Please refer to the vendors' HBA user manual. Microsoft, Linux, Solaris and Mac provide iSCSI initiator driver. Please contact **iStoragePro** for the latest certification list. Below are the available links:

1. Link to download the Microsoft iSCSI software initiator:
<http://www.microsoft.com/downloads/details.aspx?FamilyID=12cb3c1a-15d6-4585-b385-befd1319f825&DisplayLang=en>

2. In current Linux distributions, OS built-in iSCSI initiators are usually available. For different kernels, there are different iSCSI drivers. Please check Appendix A for iSCSI initiator certification list. If user needs the latest Linux iSCSI initiator, please visit Open-iSCSI project for most update information. Linux-iSCSI (sfnet) and Open-iSCSI projects merged in April 11, 2005.

Open-iSCSI website: <http://www.open-iscsi.org/>

Open-iSCSI README: <http://www.open-iscsi.org/docs/README>

Features: <http://www.open-iscsi.org/cgi-bin/wiki.pl/Roadmap>

Support Kernels:

http://www.open-iscsi.org/cgi-bin/wiki.pl/Supported_Kernels

Google groups:

<http://groups.google.com/group/open-iscsi/threads?gvc=2>

<http://groups.google.com/group/open-iscsi/topics>

Open-iSCSI Wiki: <http://www.open-iscsi.org/cgi-bin/wiki.pl>

3. ATTO iSCSI initiator is available for Mac.
Website: <http://www.attotech.com/xtend.html>
4. Solaris iSCSI initiator
Version: Solaris 10 u6 (10/08)

Chapter 2 Installation

2.1 Package contents

The package contains the following items:


- One **iR16IS4ER-N**: Gigabit LAN (x4) -to- SATA II/SAS RAID controller.
- One Ethernet Cross over cable

**Not included: (Optional) 4 X RJ45 Gbits Straight Ethernet Data Cable
(Optional) 1 X Serial 232 Cable**

Contact your supplier if any of the above items are missing or damaged.

The RAM size for **IR16IS4ER** is recommended **DDR2-533 1GB** or above. Please refer to the certification list in Appendix A.

2.2 The Enclosure Description

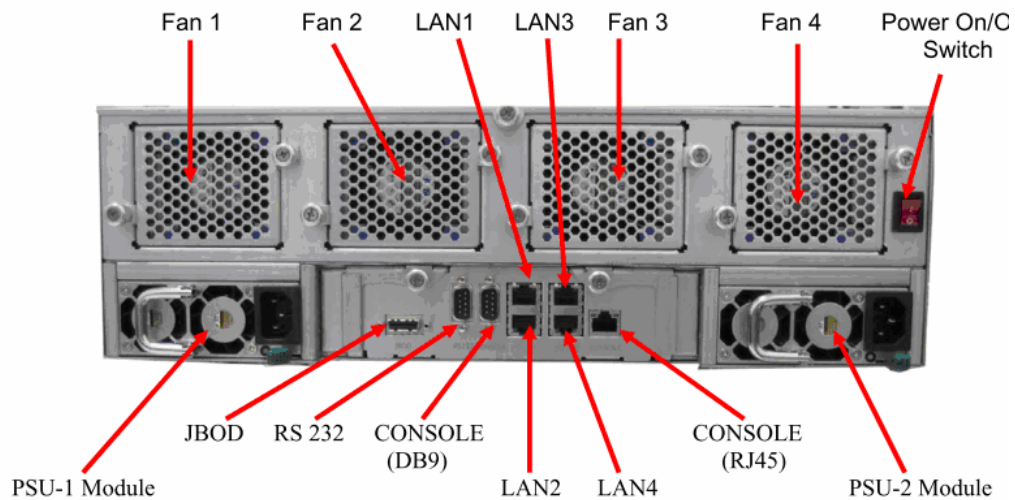

- | | |
|-----------------------|---|
| Power On / Off Switch | : The switch to turn On/ Off the system |
| Fan 1,2,3,4 | : Redundant, hot swappable Fan Modules |
| LAN 1,2,3,4 | : Connect CAT5e OR CAT6 NETWORK CABLE |
| JBOD | : For cascading iR16SAEJ |
| RS 232 | : For APC UPS |
| CONSOLE | : For Web GUI |

Figure 2.2.1

2.3 Make the system connected

Before starting, prepare the following items.

1. Check “**Certification list**” in Appendix A to confirm the hardware setting is fully supported.
2. Read the latest release note before upgrading. Release note accompanies with its released firmware.
3. A host with a Gigabit Ethernet NIC or iSCSI HBA.
4. CAT 5e, or CAT 6 network cables for management port and iSCSI data ports. Recommend CAT 6 cables for best performance.
5. Prepare storage system configuration plan.
6. Prepare management port and iSCSI data ports network information. When using static IP, please prepare static IP addresses, subnet mask, and default gateway.
7. Gigabit switches (recommended). Or Gigabit switches with LCAP / Trunking
8. CHAP security information, including CHAP username and secret (optional).
9. Setup the hardware connection before power on servers. Connect console cable, management port cable, and iSCSI data port cables in advance.
10. In addition, installing an iSNS server is recommended.
11. Power on **iR16IS4ER** first, and then power on hosts and iSNS server.

Chapter 3 Quick setup

3.1 Management interfaces

There are three management methods to manage **iStoragePro** controller, describe in the following:

3.1.1 Serial console

Use console cable (NULL modem cable) to connect from console port of **iStoragePro** controller to RS 232 port of management PC. Please refer to figure 2.3.1. The console settings are on the following:

Baud rate: **115200**, 8 data bit, no parity, 1 stop bit, and no flow control.

Terminal type: **vt100**

Login name: **admin**

Default password: **0000**

3.1.2 Remote control

SSH (secure shell) software is required for remote login. The SSH client software is available at the following web site:


SSH Tectia Client: <http://www.ssh.com/>

PuTTY: <http://www.chiark.greenend.org.uk/>

Host name: **192.168.10.50** (Please check the DHCP address first on LCM.)

Login name: **admin**

Default password: **0000**



Tips
iStoragePro controller only supports SSH for remote control. For using SSH, the IP address and password are required for login.

3.1.3 LCM

After booting up the system, the following screen shows management port IP and model name:




Figure 3.1.3.1

Press “**Enter**” button, the LCM functions “**System Info.**”, “**Alarm Mute**”, “**Reset/Shutdown**”, “**Quick Install**”, “**Volume Wizard**”, “**View IP Setting**”, “**Change IP Config**” and “**Reset to Default**” will rotate by pressing ▲ (up) and ▼ (down).

When there is WARNING event or ERROR event occurred (LCM default filter), the LCM shows the event log to give users more detail from front panel.

The following table is function description of each item.

- **LCM operation description:**

System Info.	Display system information.
Alarm Mute	Mute alarm when error occurs.
Reset/ Shutdown	Reset or shutdown controller.
Quick Install	Quick steps to create a volume. Please refer to next chapter for detailed operation steps in web UI.
Volume Wizard	Smart steps to create a volume. Please refer to next chapter for detailed operation steps in web UI.

View IP Setting	Display current IP address, subnet mask, and gateway.
Change IP config	Set IP address, subnet mask, and gateway. There are 2 options: DHCP (Get IP address from DHCP server) or static IP.
Reset to Default	Reset to default will set password to default: 0000 , and set IP address to default as DHCP setting. Default IP address: 192.168.10.50 (DHCP) Default subnet mask: 255.255.255.0 Default gateway: 192.168.10.254

- **LCM menu hierarchy:**

iStoragePro Technology ▲▼	[System Info.]	[Firmware Version x.x.x]			
		[RAM Size xxx MB]			
	[Alarm Mute]	[▲Yes No▼]			
	[Reset/Shutdown]	[Reset]	[▲Yes No▼]		
		[Shutdown]	[▲Yes No▼]		
	[Quick Install]	RAID 0 RAID 1 RAID 3 RAID 5 RAID 6 RAID 0+1 xxx GB	[Apply The Config]	[▲Yes No▼]	
	[Volume Wizard]	[Local] RAID 0 RAID 1 RAID 3 RAID 5 RAID 6 RAID 0+1	[Use default algorithm]	[Volume Size] xxx GB	[Apply The Config] [▲Yes No▼]

		[JBOD x] ▲▼ RAID 0 RAID 1 RAID 3 RAID 5 RAID 6 RAID 0+1	[new x disk] ▲▼ xxx BG	Adjust Volume Size	[Apply The Config] [▲Yes No▼]
	[View IP Setting]	[IP Config] [Static IP]			
		[IP Address] [192.168.010.050]			
		[IP Subnet Mask] [255.255.255.0]			
		[IP Gateway] [192.168.010.254]			
	[Change IP Config]	[DHCP]	[▲Yes No▼]		
		[Static IP]	[IP Address]	Adjust IP address	
			[IP Subnet Mask]	Adjust Submask IP	
			[IP Gateway]	Adjust Gateway IP	
			[Apply IP Setting]	[▲Yes No▼]	
	[Reset to Default]	[▲Yes No▼]			


Caution

Before power off, it is better to execute “**Shutdown**” to flush the data from cache to physical disks.

3.1.4 Web UI

iStoragePro controller supports graphic user interface (GUI) to operate. Be sure to connect the LAN cable. The default IP setting is **DHCP**; open the browser and enter:

http://192.168.10.50 (Please check the DHCP address first on LCM.)

And then it will pop up a dialog for authentication.



Figure 3.1.4.1

User name: **admin**
 Default password: **0000**

After login, choose the functions which lists on the left side of window to make any configuration.




Figure 3.1.4.2



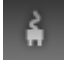
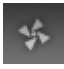
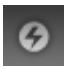



There are six indicators at the top-right corner for backplane solutions.



Figure 3.1.4.3

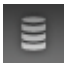• **Indicator description:**

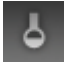	<p>RAID light:</p> <ul style="list-style-type: none"> • Green → RAID works well. • Red → RAID fails.
---	--

	<p>Temperature light:</p> <ul style="list-style-type: none"> • Green → Temperature is normal. • Red → Temperature is abnormal.
	<p>Voltage light:</p> <ul style="list-style-type: none"> • Green → voltage is normal. • Red → voltage is abnormal.
	<p>UPS light:</p> <ul style="list-style-type: none"> • Green → UPS works well. • Red → UPS fails.
	<p>Fan light:</p> <ul style="list-style-type: none"> • Green → Fan works well. • Red → Fan fails.
	<p>Power light:</p> <ul style="list-style-type: none"> • Green → Power works well. • Red → Power fails.
	Return to home page.
	Logout the management web UI.
	Mute alarm beeper.



Tips

If the status indicators in Internet Explorer (IE) are displayed in gray, but not in blinking red, please enable “**Internet Options**” → “**Advanced**” → “**Play animations in webpages**” options in IE. The default value is enabled, but some applications will disable it.

3.2 How to use the system quickly

The following methods will describe the quick guide to use this controller.

3.2.1 Quick installation

It is easy to use “**Quick install**” to create a volume. It uses whole physical disks to create a RG; the system will calculate maximum spaces on RAID levels 0 / 1 / 3 / 5 / 6 / 0+1. “**Quick install**” will occupy all residual RG space for one VD, and it has no space for snapshot and spare. If snapshot is needed, please create volumes by manual, and refer to section 5.4 for more detail. If some physical disks are used in other RGs, “**Quick install**” can not be run because the operation is valid only when all physical disks in this system are free.

Step 1: Click “**Quick install**”, then choose the RAID level. After choosing the RAID level, then click “**Confirm**”. It will link to another page.

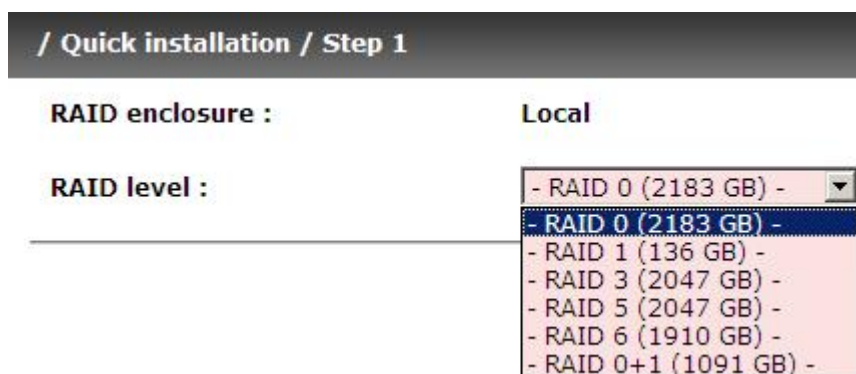


Figure 3.2.1.1

Step 2: Confirm page. Click “**Confirm**” if all setups are correct. Then a VD will be created.

Step 3: Done. You can start to use the system now.

No.	Name	Size [(GB)]	Write	Priority	Bg rate	Status	Clone	Schedule	Type	Health	R %	RAID	#LUN	Snapshot space [(GB)]	#Snapshot	RG name
1	QUICK20822	2183	WB	HI	4	Online	N/A	N/A	RAID	Optimal		RAID 0	1	0/0	0	QUICK21040

Figure 3.2.1.2

(Figure 3.2.1.2: A virtual disk of RAID 0 is created and is named by system itself.)

3.2.2 Volume creation wizard

“**Volume create wizard**” has a smarter policy. When the system is inserted with some HDDs. “Volume create wizard” lists all possibilities and sizes in different RAID levels, it will use all available HDDs for RAID level depends on which user chooses. When system has different sizes of HDDs, e.g., 8*200G and 8*80G, it lists all possibilities and combination in different RAID level and different sizes. After user

chooses RAID level, user may find that some HDDs are available (free status). The result is using smarter policy designed by **iStoragePro**. It gives user:

1. Biggest capacity of RAID level for user to choose and,
2. The fewest disk number for RAID level / volume size.

E.g., user chooses RAID 5 and the system has 12*200G + 4*80G HDDs inserted. If we use all 16 HDDs for a RAID 5, and then the maximum size of volume is 1200G (80G*15). By the wizard, we do smarter check and find out the most efficient way of using HDDs. The wizard only uses 200G HDDs (Volume size is 200G*11=2200G), the volume size is bigger and fully uses HDD capacity.

Step 1: Select “/ Volume configuration / Volume create wizard” and then choose the RAID level. After the RAID level is chosen, click “Next”. Then it will link to next page.

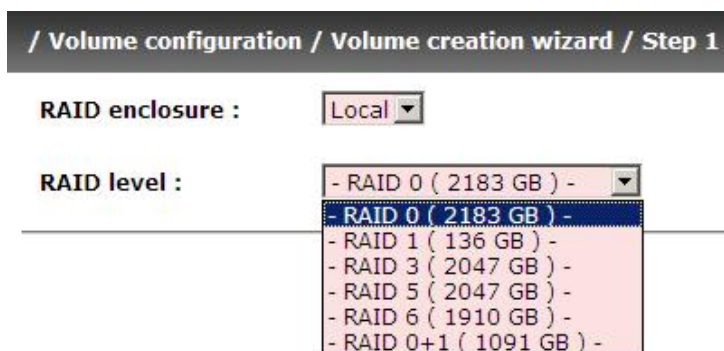


Figure 3.2.2.1

Step 2: Please select the combination of the RG capacity, or “Use default algorithm” for maximum RG capacity. After RG size is chosen, click “Next”.

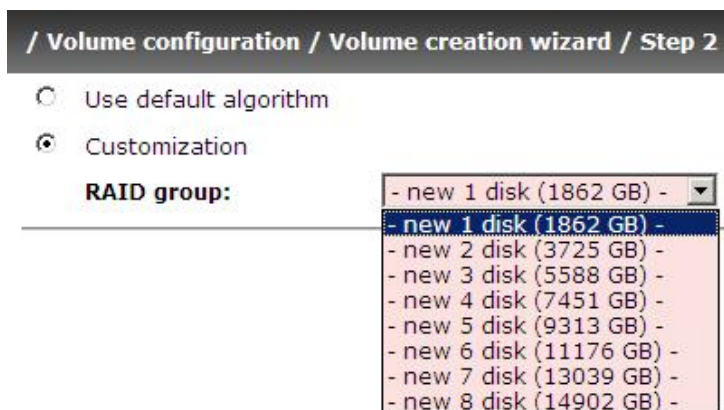


Figure 3.2.2.2

Step 3: Decide VD size. User can enter a number less or equal to the default number. Then click “Next”.



Figure 3.2.2.3

Step 4: Confirm page. Click “**Confirm**” if all setups are correct. Then a VD will be created.

Step 5: Done. You can start to use the system now.

No.	Name	Size (GB)	Write	Priority	Bg rate	Status	Clone	Schedule	Type	Health	R %	RAID	#LUN	Snapshot space (GB)	#Snapshot	RG name
1	QUICK17159	136	WB	HI	4	Online	N/A	N/A	RAID	Optimal		RAID 0	1	0/0	0	QUICK19301

Create • Configuration •

Figure 3.2.2.4

(Figure 3.2.2.4: A virtual disk of RAID 0 is created and is named by system itself.)

Chapter 4 Configuration

4.1 Web UI management interface hierarchy

The below table is the hierarchy of web GUI.

Quick installation	→ Step 1 / Step 2 / Confirm
System configuration	
System setting	→ System name / Date and time / System indication
IP address	→ MAC address / Address / DNS / port
Login setting	→ Login configuration / Admin password / User password
Mail setting	→ Mail
Notification setting	→ SNMP / Messenger / System log server / Event log filter
iSCSI configuration	
Entity property	→ Entity name / iSNS IP
NIC	→ Aggregation / IP settings for iSCSI ports / Become default gateway / Enable jumbo frame / Ping host
Node	→ Create / Authenticate / Rename / User / Delete
Session	→ Session information / Delete
CHAP account	→ Create / Modify user information / Delete
Volume configuration	
Volume create wizard	Step 1 / Step 2 / Step 3 / Step 4 / Confirm
Physical disk	→ Set Free disk / Set Global spare / Set Dedicated spare / Disk Scrub / Upgrade / Turn on/off the indication LED / More information
RAID group	→ Create / Migrate / Move/ Activate / Deactivate / Parity check / Delete / Set disk property / More information
Virtual disk	→ Create / Extend / Parity check / Delete / Set property / Attach LUN / Detach LUN / List LUN / Set clone / Clear clone / Start clone / Stop clone / Schedule clone / Set snapshot space / Cleanup snapshot / Take snapshot / Auto snapshot / List snapshot / More information
Snapshot	→ Cleanup / Auto snapshot / Take snapshot / Export / Rollback / Delete
Logical unit	→ Attach / Detach
Enclosure management	
SES configuration	→ Enable / Disable
Hardware monitor	→ Auto shutdown
S.M.A.R.T.	→ S.M.A.R.T. information (Only for SATA disks)
UPS	→ UPS Type / Shutdown battery level / Shutdown delay / Shutdown UPS
Maintenance	
System information	→ System information
Upgrade	→ Browse the firmware to upgrade / Export configuration
Reset to default	→ Sure to reset to factory default?

- Import and export** → Import/Export / Import file
- Event log** → Download / Mute / Clear
- Reboot and shutdown** → Reboot / Shutdown

Logout

Sure to logout?

4.2 System configuration

“System configuration” is designed for setting up the “System setting”, “IP address”, “Login setting”, “Mail setting”, and “Notification setting”.

System setting	System name for identification System time for event log
IP address	Internet Protocol(IP) address for remote administration
Login setting	Configuration for auto logout and login lock Administrator's password
Mail setting	Alert by e-mail
Notification setting	Alert via Simple Network Management Protocol(SNMP) Transmits net send and alerter service messages between clients and servers Alert to remote system log server

Figure 4.2.1

4.2.1 System Setting

“System setting” can setup system name and date. Default “System name” is composed of model name and serial number of this system.

System name

System name :

Date and time

Change date and time

Current time :

Time zone :

Setup date and time manually

Date : / /

Time : : :

NTP

Server :

Figure 4.2.1.1

Check “**Change date and time**” to set up the current date, time, and time zone before using or synchronize time from NTP (Network Time Protocol) server. Click “**Confirm**” in **System indication** to turn on the system indication LED. Click again to turn off.

4.2.2 IP address

MAC address	
MAC address :	00:13:78:AC:00:E5
Address	
<input checked="" type="radio"/> DHCP	
<input type="radio"/> BOOTP	
<input type="radio"/> Static	
Address :	192.168.1.141
Mask :	255.255.255.0
Gateway :	192.168.1.1
DNS	
DNS :	205.214.45.10
Port	
HTTP port :	80
HTTPS port :	443
SSH port :	22

Figure 4.2.2.1

“**IP address**” is for changing IP address for remote administration usage. There are two options, DHCP (Get IP address from DHCP server) and static IP. The default setting is DHCP. User can change the HTTP, HTTPS, and SSH port number when the default port number is not allowed on host.

4.2.3 Login setting

“**Login setting**” can set single admin, auto logout time and admin / user password. The single admin is to prevent multiple users access the same system in the same time.

1. **Auto logout:** The options are (1) Disabled; (2) 5 minutes; (3) 30 minutes; (4) 1 hour. The system will log out automatically when user is inactive for a period of time.

2. **Login lock:** Disabled or Enabled. When the login lock is enabled, the system allows only one user to login or modify system settings.

The screenshot displays three sections of the configuration interface:

- Login configuration:** Contains two dropdown menus. The first is labeled "Auto logout :" and is set to "- Disabled -". The second is labeled "Login lock :" and is also set to "- Disabled -".
- Admin password:** Features a checkbox labeled "Change admin password". Below it are three input fields: "Old password :", "Password :", and "Confirm :", each with a redacted password field.
- User password:** Features a checkbox labeled "Change user password". Below it are two input fields: "Password :" and "Confirm :", each with a redacted password field.

Figure 4.2.3.1

Check “**Change admin password**” or “**Change user password**” to change admin or user password. The maximum length of password is 12 characters.

4.2.4 Mail setting

“**Mail setting**” can enter 3 mail addresses for receiving the event notification. Some mail servers would check “**Mail-from address**” and need authentication for anti-spam. Please fill the necessary fields and click “**Send test mail**” to test whether email functions are available. User can also select which levels of event logs are needed to be sent via Mail. Default setting only enables ERROR and WARNING event logs. Please also make sure the DNS server IP is well-setup so the event notification mails can be sent successfully.

Mail	
Mail-from address :	mailman@iR16IS4ER
Mail-to address 1 :	
Send events 1 :	<input type="checkbox"/> INFO <input checked="" type="checkbox"/> WARNING <input checked="" type="checkbox"/> ERROR
Mail-to address 2 :	
Send events 2 :	<input type="checkbox"/> INFO <input checked="" type="checkbox"/> WARNING <input checked="" type="checkbox"/> ERROR
Mail-to address 3 :	
Send events 3 :	<input type="checkbox"/> INFO <input checked="" type="checkbox"/> WARNING <input checked="" type="checkbox"/> ERROR
<input type="checkbox"/> SMTP relay	
SMTP server :	
Authentication :	None
Account :	
Password :	
Confirm :	
Send test mail	

Figure 4.2.4.1

4.2.5 Notification setting

“Notification setting” can set up SNMP trap for alerting via SNMP, pop-up message via Windows messenger (not MSN), alert via syslog protocol, and event log filter for web UI and LCM notifications.

SNMP	
SNMP trap address 1 :	
SNMP trap address 2 :	
SNMP trap address 3 :	
Community :	public
MIB file download :	download
Send events :	<input type="checkbox"/> INFO <input checked="" type="checkbox"/> WARNING <input checked="" type="checkbox"/> ERROR
Messenger	
Messenger IP/Computer name 1 :	
Messenger IP/Computer name 2 :	
Messenger IP/Computer name 3 :	
Send events :	<input type="checkbox"/> INFO <input checked="" type="checkbox"/> WARNING <input checked="" type="checkbox"/> ERROR
System log server	
Server IP/hostname :	
UDP Port :	514
Facility :	User
Event level :	<input type="checkbox"/> INFO <input checked="" type="checkbox"/> WARNING <input checked="" type="checkbox"/> ERROR
Event log filter	
Pop up events :	<input type="checkbox"/> INFO <input type="checkbox"/> WARNING <input type="checkbox"/> ERROR
Show on LCM :	<input type="checkbox"/> INFO <input checked="" type="checkbox"/> WARNING <input checked="" type="checkbox"/> ERROR
Buzzer	
Always disable buzzer :	<input type="checkbox"/>

Figure 4.2.5.1

“**SNMP**” allows up to 3 SNMP trap addresses. Default community setting is “public”. User can choose the event log levels and default setting enables ERROR and WARNING event log in SNMP. There are many SNMP tools. The following web sites are for your reference:

SNMPC: <http://www.snmpc.com/>

Net-SNMP: <http://net-snmp.sourceforge.net/>

If necessary, click “**Download**” to get MIB file and import to SNMP.

Note:

MIB files will include:

1. **System summary:** System name, current time, management MAC address, IP.
2. **Iscsi configuration:** Entity name, node, CHAP.
3. **Volume configuration:** Physical disk, raid group, virtual disk, LUN
4. **Enclosure management:** S.M.A.R.T, hardware monitor.
5. **Maintenance:** System info, memory, serial no., backplane id, status, error message.

To use “**Messenger**”, user must enable the service “Messenger” in Windows (Start → Control Panel → Administrative Tools → Services → Messenger), and then event logs can be received. It allows up to 3 messenger addresses. User can choose the event log levels and default setting enables the WARNING and ERROR event logs.

Using “**System log server**”, user can choose the facility and the event log level. The default port of syslog is 514. The default setting enables event level: INFO, WARNING and ERROR event logs.

There are some syslog server tools. The following web sites are for your reference:

WinSyslog: <http://www.winsyslog.com/>

Kiwi Syslog Daemon: <http://www.kiwisyslog.com/>

Most UNIX systems build in syslog daemon.

“**Event log filter**” setting can enable event level on “Pop up events” and “LCM”.

Note: A warning level event “WARNING: Failed to send event to xxx@mail” is available when the mail is not sent successfully.

4.3 iSCSI configuration

“**iSCSI configuration**” is designed for setting up the “**Entity Property**”, “**NIC**”, “**Node**”, “**Session**”, and “**CHAP account**”.

<u>Entity property</u>	iSCSI entity property
<u>NIC</u>	iSCSI portal configuration
<u>Node</u>	iSCSI node configuration
<u>Session</u>	iSCSI session information
<u>CHAP account</u>	Add/Remove account for iSCSI node

Figure 4.3.1

4.3.1 Entity property

“Entity property” can view the entity name of the system, and setup “iSNS IP” for iSNS (Internet Storage Name Service). iSNS protocol allows automated discovery, management and configuration of iSCSI devices on a TCP/IP network. Using iSNS, it needs to install an iSNS server in SAN. Add an iSNS server IP address into iSNS server lists in order that iSCSI initiator service can send queries. The entity name of **IR16IS4ER** can be changed.

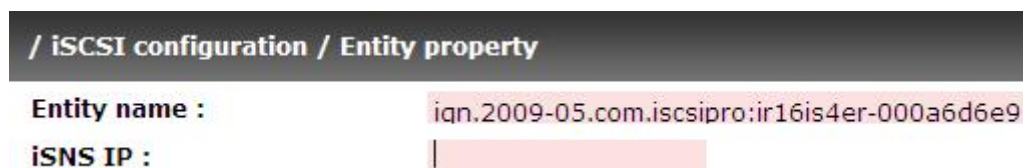


Figure 4.3.1.1

4.3.2 NIC

“NIC” can change IP addresses of iSCSI data ports. **IR16IS4ER** has four gigabit ports to transmit data. Each of them must be assigned to an IP address and be set up in multi-homed mode or the link aggregation or trunking mode has been set up. When there are multiple data ports setting up in link aggregation or trunking mode, all the data ports share single address.

Name	LAG	LAG No	DHCP	IP address	Netmask	Gateway	Jumbo frame	MAC address	Link
LAN1	No	N/A	No	192.168.1.143	255.255.255.0	192.168.1.1	Disabled	00:13:78:a6:1d:a0	Up
LAN2	No	N/A	No	192.168.1.142	255.255.255.0	192.168.1.1	Disabled	00:13:78:a6:1d:a1	Up
LAN3	No	N/A	No	192.168.1.141	255.255.255.0	192.168.1.1	Disabled	00:13:78:a6:1d:a2	Up
LAN4	No	N/A	No	192.168.1.140	255.255.255.0	192.168.1.1	Disabled	00:13:78:a6:1d:a3	Up

IP settings for iSCSI ports

- Become default gateway
- Enable jumbo frame
- Ping host


Aggregation ●

Figure 4.3.2.1

(Figure 4.3.2.2: There are 4 iSCSI data ports. 4 data ports are set with static IP.)

- **IP settings:**

User can change IP address by checking the gray button of LAN port, click “**IP settings for iSCSI ports**”. There are 2 selections, DHCP (Get IP address from DHCP server) or static IP.

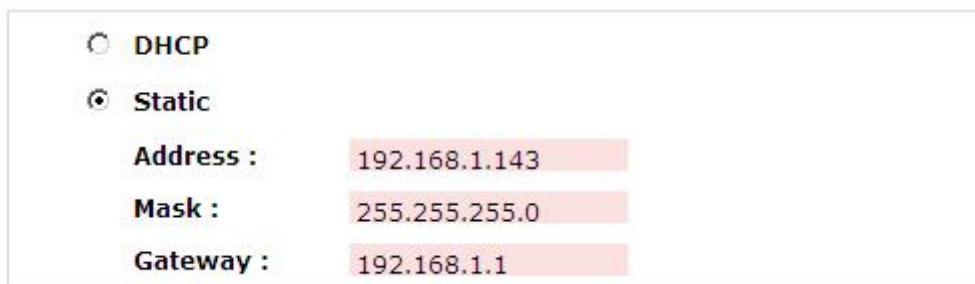

The screenshot shows a configuration window for IP settings. At the top, there are two radio button options: 'DHCP' (unselected) and 'Static' (selected). Below the 'Static' option, there are three input fields: 'Address : 192.168.1.143', 'Mask : 255.255.255.0', and 'Gateway : 192.168.1.1'. The input fields are highlighted with a light red background.

Figure 4.3.2.2

- **Default gateway:**

Default gateway can be changed by checking the gray button of LAN port, click “**Become default gateway**”. There can be only one default gateway.

- **MTU / Jumbo frame:**

MTU (Maximum Transmission Unit) size can be enabled by checking the gray button of LAN port, click “**Enable jumbo frame**”. Maximum jumbo frame size is **3900** bytes.



Caution

The MTU size of switching hub and HBA on host must be enabled. Otherwise, the LAN connection can not work properly.

- **Multi-homed / Trunking / LACP:**

The following is the description of multi-homed / trunking / LACP functions.

1. **Multi-homed:** Default mode. Each of iSCSI data port is connected by itself and is not link aggregation and trunking. This function is also for Multipath functions. Select this mode can also remove the setting of Trunking / LACP in same time.
2. **Trunking:** defines the use of multiple iSCSI data ports in parallel to increase the link speed beyond the limits of any single port.

3. **LACP:** The Link Aggregation Control Protocol (LACP) is part of IEEE specification 802.3ad that allows bundling several physical ports together to form a single logical channel. LACP allows a network switch to negotiate an automatic bundle by sending LACP packets to the peer. The advantages of LACP are (1) increases the bandwidth. (2) failover when link status fails on a port.

Trunking / LACP setting can be changed by clicking the button “**Aggregation**”.

For example, LAN1 and LAN2 are set as Trunking mode. To remove Trunking / LACP setting, checking the gray button of LAN port, click “**Delete link aggregation**”. Then it will pop up a message to confirm.

Aggregation : Trunking LACP

Address : 192.168.1.143

Mask : 255.255.255.0

Gateway : 192.168.1.1

NIC : LAN1 LAN2 LAN3 LAN4

Figure 4.3.2.3

Name	LAG	LAG No	DHCP	IP address	Netmask	Gateway	Jumbo frame	MAC address	Link
LAN1	Trunking	0	No	192.168.1.143	255.255.255.0	192.168.1.1	Disabled	00:13:78:a6:1d:a0	Up
LAN2	Trunking	0	No	192.168.1.143	255.255.255.0	192.168.1.1	Disabled	00:13:78:a6:1d:a0	Up
LAN3	LACP	1	No	192.168.1.141	255.255.255.0	192.168.1.1	Disabled	00:13:78:a6:1d:a2	Up
LAN4	LACP	1	No	192.168.1.141	255.255.255.0	192.168.1.1	Disabled	00:13:78:a6:1d:a2	Up

Figure 4.3.2.4

For example, LAN1 and LAN2 are set as Trunking mode. LAN3 and LAN4 are set as LACP mode. To remove Trunking / LACP setting, checking the gray button of LAN port, click “**Delete link aggregation**”. Then it will pop up a message to confirm.

Note: After delete link aggregation, two of iSCSI data ports become the same IP address

4.3.3 Node

- **Single-node / Multi-node:**

iR16IS4ER supports multi-nodes. There is no default node name, it is empty. It must be created first, and then it can be used. When using “Quick install”, a node name like “iqn.2009-05.com.iscsipro:ir16is4er-000a6d6e9:target0” will be created automatically.

Name : all

Authentication : None

Portal : 192.168.1.143:3260 (LAN 1, DHCP: No, Jumbo frame: Disabled)
 192.168.1.142:3260 (LAN 2, DHCP: No, Jumbo frame: Disabled)
 192.168.1.141:3260 (LAN 3, DHCP: No, Jumbo frame: Disabled)
 192.168.1.140:3260 (LAN 4, DHCP: No, Jumbo frame: Disabled)

Figure 4.3.3.1

Auth	Node name	Portal
None	iqn.2009-05.com.iscsipro:ir16is4er-000a6d6e9:target0	192.168.1.143:3260, 192.168.1.142:3260, 192.168.1.141:3260, 192.168.1.140:3260
None	all	192.168.1.143:3260, 192.168.1.142:3260, 192.168.1.141:3260, 192.168.1.140:3260
None	12	192.168.1.143:3260, 192.168.1.142:3260
None	34	192.168.1.141:3260, 192.168.1.140:3260

Auth actions: Authenticate, Rename, User, Delete

Create

Figure 4.3.3.2

• CHAP:

CHAP is the abbreviation of **C**hallenge **H**andshake **A**uthentication **P**rotocol. CHAP is a strong authentication method used in point-to-point for user login. It’s a type of authentication in which the authentication server sends the client a key to be used for encrypting the username and password. CHAP enables the username and password to transmit in an encrypted form for protection.

To use CHAP authentication, please follow the procedures.

1. Check the gray button of “Auth” column, click “Authenticate”.
2. Select “CHAP”.

Authentication : None

None
CHAP

Figure 4.3.3.3

3. Click “Confirm”.

Auth	Node name	Portal
CHAP	iqn.2009-05.com.iscsipro:ir16is4er-000a6d6e9:target0	192.168.1.143:3260, 192.168.1.142:3260, 192.168.1.141:3260, 192.168.1.140:3260
CHAP	all	192.168.1.143:3260, 192.168.1.142:3260, 192.168.1.141:3260, 192.168.1.140:3260
None	12	192.168.1.143:3260, 192.168.1.142:3260
None	34	192.168.1.141:3260, 192.168.1.140:3260

Authenticate

Rename

User

Delete

Create

Figure 4.3.3.4

4. Go to “/ iSCSI configuration / CHAP account” page to create CHAP account. Please refer to next section for more detail.
5. In “/ iSCSI configuration / Node” page, check the gray button of “Auth” column, click “User”.
6. Select CHAP user(s) which will be used. It’s a multi option. If choosing none, CHAP can not work.

Node : all

<input checked="" type="checkbox"/>	User
<input checked="" type="checkbox"/>	chap1
<input checked="" type="checkbox"/>	chap2

Figure 4.3.3.5

7. Click “Confirm”.
8. In “Change Authenticate” page, select “None” to disable CHAP.

Tips

After setting CHAP, the initiator in host should be set the same CHAP account. Otherwise, user cannot login.

4.3.4 Session

“Session” can display current iSCSI session and connection information, including the following useful items:

The following is an example of iR16IS4ER.

1. Initiator name
2. Target name
3. Error recovery level
4. Error recovery count

No.	TSIH	Initiator name	Target name	InitialR2T	Immed. data	MaxOutR2T	MaxDataBurstLen	DataSeqInOrder	DataPDUInOrder	Error recovery level	Error recovery count
0	0x0001	host1	iqn.2009-05.com.iscsi:ir16is4er-000a6d6e9:target0	Yes	Yes	1	262144	Yes	Yes	0	0

List connection
Delete

Figure 4.3.4.1

Check the gray button of session number, click “**List connection**”. It can list all connection(s) of the session.

No.	Initiator IP	Initiator name	MaxRecvDataSegLen	MaxTransDataSegLen	Authentication
1	192.168.1.20	host1	16384	65536	No

Figure 4.3.4.2

4.3.5 CHAP account

“**CHAP account**” can manage a CHAP account for authentication. **iR16IS4ER** can create multiple CHAP account.

To setup CHAP account, please follow the procedures.

1. Click “**Create**”.
2. Enter “User”, “Secret”, and “Confirm” secret again. “Node” can be selected here or later. If selecting none, it can be enabled later in “/ iSCSI configuration / Node / User”.

User : (max: 223)
Secret : (min: 12, max: 16)
Confirm : (min: 12, max: 16)
Node :

Figure 4.3.5.1

3. Click “**Confirm**”.

User	Node name
chap1	all

Modify user information
Delete

Figure 4.3.5.2

4. Click “**Delete**” to delete CHAP account.

4.4 Volume configuration

“Volume configuration” is designed for setting up the volume configuration which includes “Volume create wizard”, “Physical disk”, “RAID group”, “Virtual disk”, “Snapshot”, and “Logical unit”.

Volume create wizard	Easy and quick step-by-step volume configuration
Physical disk	Hard disks to store data
RAID group	Sets of physical disks with RAID functions
Virtual disk	Slices of RAID groups
Snapshot	Point-in-time copies of the data
Logical unit	Target volumes for hosts access

Figure 4.4.1

4.4.1 Physical disk

“Physical disk” can view the status of hard drives in the system. The followings are operational steps:

1. Check the gray button next to the number of slot, it will show the functions which can be executed.
2. Active function can be selected, and inactive functions show up in gray color and cannot be selected.

For example, set PD slot number 4 to dedicated spare disk.

Step 1: Check the gray button of PD 4, select “Set Dedicated spare”, it will link to next page.

Slot	Size (GB)	RG name	Status	Health	Usage	Vendor	Serial	Type	Write cache	Standby	Readahead	Command queuing
1	1862	RG-R5	Online	Good	RAID disk	WDC	WD-WMAY00015467	SATA2	Enabled	Disabled	Enabled	Enabled
2	1862	RG-R5	Online	Good	RAID disk	WDC	WD-WMAY00020699	SATA2	Enabled	Disabled	Enabled	Enabled
3	1862	RG-R5	Online	Good	RAID disk	WDC	WD-WMAY00009157	SATA2	Enabled	Disabled	Enabled	Enabled
4	1862		Online	Good	Free disk	WDC	WD-WMAY00016048	SATA2	Enabled	Disabled	Enabled	Enabled
Set Free disk					Free disk	WDC	WD-WMAY00028747	SATA2	Enabled	Disabled	Enabled	Enabled
Set Global spare					Free disk	WDC	WD-WMAY00023955	SATA2	Enabled	Disabled	Enabled	Enabled
Set Dedicated spare					Free disk	WDC	WD-WMAY00021914	SATA2	Enabled	Disabled	Enabled	Enabled
Disk Scrub					Free disk	WDC	WD-WMAY00020730	SATA2	Enabled	Disabled	Enabled	Enabled
Upgrade					Free disk	WDC	WD-WMAY00020730	SATA2	Enabled	Disabled	Enabled	Enabled
Turn on the indication LED					Free disk	WDC	WD-WMAY00020730	SATA2	Enabled	Disabled	Enabled	Enabled
More information					Free disk	WDC	WD-WMAY00020730	SATA2	Enabled	Disabled	Enabled	Enabled

Figure 4.4.1.1

Step 2: If there is any RG which is in protected RAID level and can be set with dedicate spare disk, select one RG, and then click **“Submit”**.

Available RG for slot 4 on Local enclosure :

No.	Name	Total (GB)	Free (GB)	#PD	#VD	Status	Health	RAID	Enclosure
1	RG-R5	3725	3725	3	0	Online	Good	RAID 5	Local

Figure 4.4.1.2

Step 3: Done. View **“Physical disk”** page.

Slot	Size (GB)	RG name	Status	Health	Usage	Vendor	Serial	Type	Write cache	Standby	Readahead	Command queuing
1	1862	RG-R5	Online	Good	RAID disk	WDC	WD-WMAY00015467	SATA2	Enabled	Disabled	Enabled	Enabled
2	1862	RG-R5	Online	Good	RAID disk	WDC	WD-WMAY00020699	SATA2	Enabled	Disabled	Enabled	Enabled
3	1862	RG-R5	Online	Good	RAID disk	WDC	WD-WMAY00009157	SATA2	Enabled	Disabled	Enabled	Enabled
4	1862	RG-R5	Online	Good	Dedicated spare	WDC	WD-WMAY00016048	SATA2	Enabled	Disabled	Enabled	Enabled
5	1862		Online	Good	Free disk	WDC	WD-WMAY00028747	SATA2	Enabled	Disabled	Enabled	Enabled
6	1862		Online	Good	Free disk	WDC	WD-WMAY00023955	SATA2	Enabled	Disabled	Enabled	Enabled
7	1862		Online	Good	Free disk	WDC	WD-WMAY00021914	SATA2	Enabled	Disabled	Enabled	Enabled
8	1862		Online	Good	Free disk	WDC	WD-WMAY00020730	SATA2	Enabled	Disabled	Enabled	Enabled

Figure 4.4.1.3

(Figure 4.4.1.3: Physical disks in slot 1,2,3 are created for a RG named **“RG-R5”**. Slot 4 is set as dedicated spare disk of the RG named **“RG-R5”**. The others are free disks.)

Step 4: The unit of size can be changed from (GB) to (MB). It will display the capacity of hard drive in MB.

Slot	Size (GB)	RG name	Status	Health	Usage	Vendor	Serial	Type	Write cache	Standby	Readahead	Command queuing
1	1862	RG-R5	Online	Good	RAID disk	WDC	WD-WMAY00020730	SATA2	Enabled	Disabled	Enabled	Enabled
2	1862	RG-R5	Online	Good	RAID disk	WDC	WD-WMAY00020699	SATA2	Enabled	Disabled	Enabled	Enabled
3	1862	RG-R5	Online	Good	RAID disk	WDC	WD-WMAY00009157	SATA2	Enabled	Disabled	Enabled	Enabled
4	1862	RG-R5	Online	Good	Dedicated spare	WDC	WD-WMAY00016048	SATA2	Enabled	Disabled	Enabled	Enabled
5	1862		Online	Good	Free disk	WDC	WD-WMAY00028747	SATA2	Enabled	Disabled	Enabled	Enabled
6	1862		Online	Good	Free disk	WDC	WD-WMAY00023955	SATA2	Enabled	Disabled	Enabled	Enabled
7	1862		Online	Good	Free disk	WDC	WD-WMAY00021914	SATA2	Enabled	Disabled	Enabled	Enabled
8	1862		Online	Good	Free disk	WDC	WD-WMAY00015467	SATA2	Enabled	Disabled	Enabled	Enabled

Figure 4.4.1.4

- **PD column description:**

Slot	The position of a hard drive. The button next to the number of slot shows the functions which can be executed.
Size (GB) (MB)	Capacity of hard drive. The unit can be displayed in GB or MB.
RG Name	RAID group name.
Status	The status of hard drive: <ul style="list-style-type: none"> • “Online” → the hard drive is online. • “Rebuilding” → the hard drive is being rebuilt. • “Transition” → the hard drive is being migrated or is replaced by another disk when rebuilding occurs. • “Scrubbing” → the hard drive is being scrubbed.
Health	The health of hard drive: <ul style="list-style-type: none"> • “Good” → the hard drive is good. • “Failed” → the hard drive is failed. • “Error Alert” → S.M.A.R.T. error alert. • “Read Errors” → the hard drive has unrecoverable read errors.
Usage	The usage of hard drive: <ul style="list-style-type: none"> • “RAID disk” → This hard drive has been set to a RAID group. • “Free disk” → This hard drive is free for use. • “Dedicated spare” → This hard drive has been set as dedicated spare of a RG. • “Global spare” → This hard drive has been set as global spare of all RGs.
Vendor	Hard drive vendor.
Serial	Hard drive serial number.
Type	Hard drive type: <ul style="list-style-type: none"> • “SATA” → SATA disk. • “SATA2” → SATA II disk. • “SAS” → SAS disk.
Write cache	Hard drive write cache is enabled or disabled. Default is “Enabled” .

Standby	HDD auto spindown to save power. Default is “ Disabled ”.
Readahead	This feature makes data be loaded to disk’s buffer in advance for further use. Default is “ Enabled ”.
Command queuing	Newer SATA and most SCSI disks can queue multiple commands and handle one by one. Default is “ Enabled ”.

- **PD operation description:**

Set Free disk	Make the selected hard drive be free for use.
Set Global spare	Set the selected hard drive to global spare of all RGs.
Set Dedicated spares	Set a hard drive to dedicated spare of the selected RG.
Disk Scrub	Scrub the hard drive.
Upgrade	Upgrade hard drive firmware.
Turn on/off the indication LED	Turn on the indication LED of the hard drive. Click again to turn off.
More information	Show hard drive detail information.

4.4.2 RAID group

“**RAID group**” can view the status of each RAID group. The following is an example to create a RG.

Step 1: Click “**Create**”, enter “**Name**”, choose “**RAID level**”, click “**Select PD**” to select PD. Then click “**Next**”. The “**Write Cache**” option is to enable or disable the write cache option of hard drives. The “**Standby**” option is to enable or disable the auto spindown function of hard drives, when this option is enabled and hard drives have no I/O access after certain period of time, they will spin down automatically. The “**Readahead**” option is to enable or disable the read ahead function. The “**Command queuing**” option is to enable or disable the hard drives’ command queue function.

Name :
RAID level :
RAID PD slot :
Write cache :
Standby :
Readahead :
Command queuing :

Figure 4.4.2.1

Step 2: Confirm page. Click “**Confirm**” if all setups are correct.

No.	Name	Total (GB)	Free (GB)	#PD	#VD	Status	Health	RAID	Enclosure
1	RG-R0	7451	7451	4	0	Online	Good	RAID 0	Local
2	RG-R5	3725	3725	3	0	Online	Good	RAID 5	Local

- Migrate
- Move
- Activate
- Deactivate
- Parity check
- Delete
- Set disk property
- More information

Figure 4.4.2.2

(Figure 4.4.2.2: There is a RAID 0 with 4 physical disks, named “RG-R0”. The second RAID group is a RAID 5 with 3 physical disks, named “RG-R5”.)

Step 3: Done. View “RAID group” page.

- **RG column description:**

No.	RAID group number. The button next to the No. includes the functions which can be executed.
Name	RAID group name.
Total (GB) (MB)	Total capacity of this RAID group. The unit can be displayed in GB or MB.
Free (GB) (MB)	Free capacity of this RAID group. The unit can be displayed in GB or MB.
#PD	The number of physical disks in a RAID group.
#VD	The number of virtual disks in a RAID group.

Status	<p>The status of RAID group:</p> <ul style="list-style-type: none"> • “Online” → the RAID group is online. • “Offline” → the RAID group is offline. • “Rebuild” → the RAID group is being rebuilt. • “Migrate” → the RAID group is being migrated. • “Scrubbing” → the RAID group is being scrubbed.
Health	<p>The health of RAID group:</p> <ul style="list-style-type: none"> • “Good” → the RAID group is good. • “Failed” → the RAID group fails. • “Degraded” → the RAID group is not healthy and not completed. The reason could be lack of disk(s) or have failed disk
RAID	The RAID level of the RAID group.
Enclosure	The enclosure which a RG locates, e.g., in the local enclosure or in the JBOD enclosure.

• **RG operation description:**

Create	Create a RAID group.
Migrate	Change the RAID level of a RAID group. Please refer to next chapter for details.
Move	“Move” the member disks of Raid Group to completely different disks.
Activate	Activate the RAID group after disk roaming; it can be executed when RG status is offline. This is for online disk roaming purpose.
Deactivate	Deactivate the RAID group before disk roaming; it can be executed when RG status is online. This is for online disk roaming purpose.
Parity check	Regenerate parity for the RAID group. It supports RAID 3 / 5 / 6 / 30 / 50 / 60.
Delete	Delete the RAID group.
Set disk	Change the disk property of write cache and standby

property	<p>options.</p> <p>Write cache:</p> <ul style="list-style-type: none"> • “Enabled” → Enable disk write cache. (Default) • “Disabled” → Disable disk write cache. <p>Standby:</p> <ul style="list-style-type: none"> • “Disabled” → Disable auto spindown. (Default) • “30 sec / 1 min / 5 min / 30 min” → Enable hard drive auto spindown to save power when no access after certain period of time. <p>Read ahead:</p> <ul style="list-style-type: none"> • “Enabled” → Enable disk read ahead. (Default) • “Disabled” → Disable disk read ahead. <p>Command queuing:</p> <ul style="list-style-type: none"> • “Enabled” → Enable disk command queue. (Default) • “Disabled” → Disable disk command queue.
More information	Show RAID group detail information.


4.4.3 Virtual disk

“Virtual disk” can view the status of each Virtual disk, create, and modify virtual disks. The following is an example to create a VD.

Step 1: Click **“Create”**, enter **“Name”**, select RAID group from **“RG name”**, enter required **“Capacity (GB)/(MB)”**, change **“Stripe height (KB)”**, change **“Block size (B)”**, change **“Read/Write”** mode, set virtual disk **“Priority”**, select **“Bg rate”** (Background task priority), and change **“Readahead”** option if necessary. **“Erase”** option will wipe out old data in VD to prevent that OS recognizes the old partition. There are three options in “Erase”: None (default), erase first 1GB or full disk. Last, select **“Type”** mode for normal or clone usage. Then click **“Confirm”**.

Name : VD-01
RG name : RG-R0
Capacity : 30 GB
Stripe height (KB) : 64
Block size (B) : 512
Read/Write : Write-through cache Write-back cache
Priority : High priority Middle priority Low priority
Bg rate : 4
Readahead : Enabled
Erase : None
Type : RAID
 RAID
 BACKUP

Figure 4.4.3.1



Caution
 If shutdown or reboot the system when creating VD, the erase process will stop.

Step 2: Confirm page. Click “**Confirm**” if all setups are correct.

No.	Name	Size (GB)	Write	Priority	Bg rate	Status	Clone	Schedule	Type	Health	R %	RAID	#LUN	Snapshot space (GB)	#Snapshot	RG name
1	VD-01	30	WB	HI	4	Online	N/A	N/A	RAID	Optimal		RAID 0	0	0/0	0	RG-R0
2	VD-02	20	WB	HI	4	Initiating	N/A	N/A	RAID	Optimal	42	RAID 5	0	0/0	0	RG-R5

- Extend
- Parity check
- Delete
- Set property
- Attach LUN
- Detach LUN
- List LUN
- Set done
- Set snapshot space
- Cleanup snapshot
- Take snapshot
- Auto snapshot
- List snapshot
- More information

Create Configuration

Figure 4.4.3.2

(Figure 4.4.3.2: Create a VD named “VD-01”, from “RG-R0”. The second VD is named “VD-02”, it’s initializing.)

Step 3: Done. View “Virtual disk” page.

Note: The non-continuous space in RG can be extended in the same time when user wants to use all rest space for a new VD

- **VD column description:**

No.	Virtual disk number. The button includes the functions which can be executed.
Name	Virtual disk name.
Size (GB) (MB)	Total capacity of the virtual disk. The unit can be displayed in GB or MB.
Write	The right of virtual disk: <ul style="list-style-type: none"> • “WT” → Write Through. • “WB” → Write Back. • “RO” → Read Only.
Priority	The priority of virtual disk: <ul style="list-style-type: none"> • “HI” → High priority. • “MD” → Middle priority. • “LO” → Low priority.
Bg rate	Background task priority: <ul style="list-style-type: none"> • “4 / 3 / 2 / 1 / 0” → Default value is 4. The higher number the background priority of a VD is, the more background I/O will be scheduled to execute.
Status	The status of virtual disk: <ul style="list-style-type: none"> • “Online” → The virtual disk is online. • “Offline” → The virtual disk is offline. • “Initiating” → The virtual disk is being initialized. • “Rebuild” → The virtual disk is being rebuilt. • “Migrate” → The virtual disk is being migrated. • “Rollback” → The virtual disk is being rolled back. • “Parity checking” → The virtual disk is being parity check.
Clone	The target name of virtual disk.

Schedule	The clone schedule of virtual disk:
Type	The type of virtual disk: <ul style="list-style-type: none"> • “RAID” → the virtual disk is normal. • “BACKUP” → the virtual disk is for clone usage.
Health	The health of virtual disk: <ul style="list-style-type: none"> • “Optimal” → the virtual disk is working well and there is no failed disk in the RG. • “Degraded” → At least one disk from the RG of the Virtual disk is failed or plugged out. • “Failed” → the RAID group disk of the VD has single or multiple failed disks than its RAID level can recover from data loss. • “Partially optimal” → the virtual disk has experienced recoverable read errors. After passing parity check, the health will become “Optimal”.
R %	Ratio (%) of initializing or rebuilding.
RAID	RAID level.
#LUN	Number of LUN(s) that virtual disk is attached to.
Snapshot (GB) (MB)	The virtual disk size that is used for snapshot. The number means “ Used snapshot space ” / “ Total snapshot space ”. The unit can be displayed in GB or MB.
#Snapshot	Number of snapshot(s) that have been taken.
RG name	The RG name of the virtual disk

• **VD operation description:**

Create	Create a virtual disk.
Extend	Extend the virtual disk capacity.
Parity check	Execute parity check for the virtual disk. It supports RAID 3 / 5 / 6 / 30 / 50 / 60. Regenerate parity: <ul style="list-style-type: none"> • “Yes” → Regenerate RAID parity and write. • “No” → Execute parity check only and find mismatches. It will stop checking when mismatches count to 1 / 10 / 20 / ... / 100.

Delete	Delete the virtual disk.
Set property	<p>Change the VD name, right, priority, bg rate and read ahead.</p> <p>Right:</p> <ul style="list-style-type: none"> • “WT” → Write Through. • “WB” → Write Back. (Default) • “RO” → Read Only. <p>Priority:</p> <ul style="list-style-type: none"> • “HI” → High priority. (Default) • “MD” → MiDdle priority. • “LO” → Low priority. <p>Bg rate:</p> <ul style="list-style-type: none"> • “4 / 3 / 2 / 1 / 0” → Default value is 4. The higher number the background priority of a VD is, the more background I/O will be scheduled to execute. <p>Read ahead:</p> <ul style="list-style-type: none"> • “Enabled” → Enable disk read ahead. (Default) • “Disabled” → Disable disk read ahead. <p>Type:</p> <ul style="list-style-type: none"> • “RAID” → the virtual disk is normal. (Default) • “Backup” → the virtual disk is for clone usage.
Attach LUN	Attach to a LUN.
Detach LUN	Detach to a LUN.
List LUN	List attached LUN(s).
Set clone	Set the target virtual disk for clone.
Clear clone	Clear clone function.
Start clone	Start clone function.
Stop clone	Stop clone function.
Schedule clone	Set clone function by schedule.
Set snapshot space	Set snapshot space for taking snapshot. Please refer to next chapter for more detail.

Cleanup snapshot	Clean all snapshots of a VD and release the snapshot space.
Take snapshot	Take a snapshot on the virtual disk.
Auto snapshot	Set auto snapshot on the virtual disk.
List snapshot	List all snapshots of the virtual disk.
More information	Show virtual disk detail information.

4.4.4 Snapshot

“**Snapshot**” can view the status of snapshot, create, and modify snapshots. Please refer to next chapter for more detail about snapshot concept. The following is an example to take a snapshot.

Step 1: Create snapshot space. In “/ **Volume configuration / Virtual disk**”, check the gray button next to the VD number; click “**Set snapshot space**”.

Step 2: Set snapshot space. Then click “**Confirm**”. The snapshot space is created.



Figure 4.4.4.1

No.	Name	Size (GB)	Write	Priority	Bg rate	Status	Clone	Schedule	Type	Health	R %	RAID	#LUN	Snapshot space (GB)	#Snapshot	RG name
1	VD-01	30	WB	HI	4	Online	N/A	N/A	RAID	Optimal		RAID 0	0	3/15	0	RG-R0
2	VD-02	20	WB	HI	4	Online	N/A	N/A	RAID	Optimal		RAID 5	0	0/0	0	RG-R5

Figure 4.4.4.2

(Figure 4.4.4.2: “VD-01” snapshot space has been created, snapshot space is 15GB, and used 3GB for saving snapshot index.)

Step 3: Take a snapshot. In “/ **Volume configuration / Snapshot**”, click “**Take snapshot**”. It will link to next page. Enter a snapshot name.

Linked snapshot for VD: - VD-01 -

No.	Name	Used (GB)	Status	Health	Exposure	Right	#LUN	Created time
1	SnapVD-01	0	N/A	Good	No	N/A	N/A	Wed Dec 1 06:07:45 2010

Expose
Rollback
Delete

<< Back Cleanup Auto snapshot Take snapshot

Figure 4.4.4.3

Step 4: Expose the snapshot VD. Check the gray button next to the Snapshot VD number; click “**Expose**”. Enter a capacity for snapshot VD. If size is zero, the exported snapshot VD will be read only. Otherwise, the exposed snapshot VD can be read / written, and the size will be the maximum capacity to read / write.

/ Volume configuration / Snapshot / Set quota

Size : 11 GB

Available : 11 GB

Figure 4.4.4.4

Linked snapshot for VD: - VD-01 -

No.	Name	Used (GB)	Status	Health	Exposure	Right	#LUN	Created time
1	SnapVD-01	0	N/A	Good	Yes	Read-only	0	Wed Dec 8 16:46:43 2010
2	SnapVD-02	0	N/A	Good	Yes	Read-write	0	Wed Dec 8 16:47:20 2010

Unexpose
Rollback
Delete
Attach
Detach
List LUN

<< Back Cleanup Auto snapshot Take snapshot

Figure 4.4.4.5

(Figure 4.4.4.5: This is the snapshot list of “VD-01”. There are two snapshots. Snapshot VD “SnapVD-01” is exposed as read-only, “SnapVD-02” is exposed as read-write.)

Step 5: Attach a LUN to a snapshot VD. Please refer to the next section for attaching a LUN.

Step 6: Done. Snapshot VD can be used.

- **Snapshot column description:**

No.	The number of this snapshot VD. The button next to the snapshot VD No. includes the functions which can be executed.
Name	Snapshot VD name.

Used (GB) (MB)	The amount of snapshot space that has been used. The unit can be displayed in GB or MB.
Status	The status of snapshot: <ul style="list-style-type: none"> • “N/A” → The snapshot is normal. • “Replicated” → The snapshot is for clone. • “Abort” → The snapshot is over space and abort.
Health	The health of snapshot: <ul style="list-style-type: none"> • “Good” → The snapshot is good. • “Failed” → The snapshot fails.
Exposure	Snapshot VD is exposed or not.
Right	The right of snapshot: <ul style="list-style-type: none"> • “Read-write” → The snapshot VD can be read / write. • “Read-only” → The snapshot VD is read only.
#LUN	Number of LUN(s) that snapshot VD is attached.
Created time	Snapshot VD created time.

- **Snapshot operation description:**

Expose/ Unexpose	Expose / unexpose the snapshot VD.
Rollback	Rollback the snapshot VD.
Delete	Delete the snapshot VD.
Attach	Attach a LUN.
Detach	Detach a LUN.
List LUN	List attached LUN(s).

4.4.5 Logical unit

“Logical unit” can view, create, and modify the status of attached logical unit number(s) of each VD.

User can attach LUN by clicking the “**Attach**”. “**Host**” must enter with an iSCSI node name for access control, or fill-in wildcard “*”, which means every host can access the volume. Choose LUN number and permission, and then click “**Confirm**”.

VD :

Host (iSCSI node name) :

Target (iSCSI node name) :

LUN :

Permission : Read-only Read-write

Figure 4.4.5.1

Host	Target	LUN	Permission	VD name	#Session
*	iqn.2009-05.com.iscsipro:ir16is4er-000a6d6e9:target0	0	Read-write	VD-01	0
iqn.1991-05.com.microsoft:iStoragePro	all	1	Read-write	VD-02	0

Detach

Figure 4.4.5.2

(Figure 4.4.5.2: VD-01 is attached to LUN 0 and every host can access. VD-02 is attached to LUN 1 and only the initiator node which is named “iqn.1991-05.com.microsoft:iStoragePro” can access.)

VD :

Host (iSCSI node name) :

Target (iSCSI node name) :

LUN :

Permission : Read-only Read-write

Figure 4.4.5.3

Host	Target	LUN	Permission	VD name	#Session
*	iqn.2009-05.com.iscsipro:ir16is4er-000a6d6e9:target0	0	Read-write	VD-01	0
iqn.1991-05.com.microsoft:iStoragePro	all	1	Read-write	VD-02	0

Detach

Figure 4.4.5.4

(Figure 4.4.5.4: VD-01 is attached to LUN 0 and every host can access. VD-02 is attached to LUN 1 and only the initiator node which is named “iqn.1991-05.com.microsoft:iStoragePro” can access.)

- LUN operation description:

Attach	Attach a logical unit number to a virtual disk.
Detach	Detach a logical unit number from a virtual disk.

The matching rules of access control are followed from the LUNs' created time; the earlier created LUN is prior to the matching rules. For example: there are 2 LUN rules for the same VD, one is "*", LUN 0; and the other is "iqn.host1", LUN 1. The host "iqn.host2" can login successfully because it matches the rule 1.

Wildcard "*" and "?" are allowed in this field. "*" can replace any word. "?" can replace only one character. For example:

"iqn.host?" → "iqn.host1" and "iqn.host2" are accepted.

"iqn.host*" → "iqn.host1" and "iqn.host12345" are accepted.

This field can not accept comma, so "iqn.host1, iqn.host2" stands a long string, not 2 iqns.

4.4.6 Example

The following is an example to create volumes. This example is to create two VDs and set a global spare disk.

- **Example**

This example is to create two VDs in one RG, each VD shares the cache volume. The cache volume is created after system boots up automatically. Then set a global spare disk. Last, delete all of them.

Step 1: Create a RG (RAID group).

To create a RAID group, please follow the procedures:

The screenshot shows a configuration form for a RAID group. The fields are as follows:

- Name : RG-R5
- RAID level : RAID 5
- RAID PD slot : 1 2 3
- Write cache : Enabled
- Standby : Disabled
- Readahead : Enabled
- Command queuing : Enabled

At the bottom of the form, there are two navigation buttons: "<< Back" and "Next >>".

Figure 4.4.6.1

1. Select **"/ Volume configuration / RAID group"**.
2. Click **"Create"**.
3. Input a RG Name, choose a RAID level from the list, click **"Select PD"** to choose the RAID physical disks, then click **"Next"**.

4. Check the setting. Click “**Confirm**“ if all setups are correct.
5. Done. A RG has been created.

No.	Name	Total (GB)	Free (GB)	#PD	#VD	Status	Health	RAID	Enclosure
1	RG-R5	3725	3725	3	0	Online	Good	RAID 5	Local

Figure 4.4.6.2

(Figure 4.4.6.2: Creating a RAID 5 with 3 physical disks, named “RG-R5”.)

Step 2: Create VD (Virtual Disk).

To create a data user volume, please follow the procedures.

Name : VD-R5-1
 RG name : RG-R5
 Capacity : 50 GB
 Stripe height (KB) : 64
 Block size (B) : 512
 Read/Write : Write-through cache Write-back cache
 Priority : High priority Middle priority Low priority
 Bg rate : 4
 Readahead : Enabled
 Erase : None
 Type : RAID

Figure 4.4.6.3

1. Select “/ Volume configuration / Virtual disk”.
2. Click “**Create**”.
3. Input a VD name, choose a RG Name and enter a size for this VD; decide the stripe height, block size, read / write mode, bg rate, and set priority, finally click “**Confirm**”.
4. Done. A VD has been created.
5. Follow the above steps to create another VD.

No.	Name	Size (GB)	Write	Priority	Bg rate	Status	Clone	Schedule	Type	Health	R %	RAID	#LUN	Snapshot space (GB)	#Snapshot	RG name
1	VD-R5-1	50	WB	HI	4	Initiating	N/A	N/A	RAID	Optimal	18	RAID 5	0	0/0	0	RG-R5
2	VD-R5-2	64	WB	HI	4	Initiating	N/A	N/A	RAID	Optimal	0	RAID 5	0	0/0	0	RG-R5

Figure 4.4.6.4

(Figure 4.4.6.4: Creating VDs named “VD-R5-1” and “VD-R5-2” from RAID group “RG-R5”, the size of “VD-R5-1” is 50GB, and the size of “VD-R5-2” is 64GB. There is no LUN attached.)

Step 3: Attach a LUN to a VD.

There are 2 methods to attach a LUN to a VD.

1. In “/ Volume configuration / Virtual disk”, check the gray button next to the VD number; click “Attach LUN”.
2. In “/ Volume configuration / Logical unit”, click “Attach”.

The procedures are as follows:

VD : VD-R5-1 (50GB) ▾
Host (iSCSI node name) : *
Target (iSCSI node name) : all ▾
LUN : - 0 - ▾
Permission : Read-only Read-write

Figure 4.4.6.5


1. Select a VD.
2. Input “**Host**” IQN, which is an iSCSI node name for access control, or fill-in wildcard “*”, which means every host can access to this volume. Choose LUN and permission, and then click “**Confirm**”.
3. Done.

(Figure 4.4.6.7: VD-R5-1 is attached to LUN 0. VD-R5-2 is attached to LUN 1.)

Host	Target	LUN	Permission	VD name	#Session
*	all	0	Read-write	VD-R5-1	0
iqn.1991-05.com.microsoft:iStoragePro	iqn.2009-05.com.iscsipro:ir16is4er-000a6d6e9:target0	1	Read-write	VD-R5-2	0

Figure 4.4.6.6

(Figure 4.4.6.8: VD-R5-1 is attached to LUN 0. VD-R5-2 is attached to LUN 1.)



Tips
The matching rules of access control are from the LUNs' created time, the earlier created LUN is prior to the matching rules.

Step 4: Set a global spare disk.

To set a global spare disk, please follow the procedures.

1. Select “/ Volume configuration / Physical disk”.
2. Check the gray button next to the PD slot; click “Set global space”.
3. “Global spare” status is shown in “Usage” column.

Slot	Size (GB)	RG name	Status	Health	Usage	Vendor	Serial	Type	Write cache	Standby	Readahead	Command queuing
1	1862	RG-R5	Online	Good	RAID disk	WDC	WD-WMAY00015467	SATA2	Enabled	Disabled	Enabled	Enabled
2	1862	RG-R5	Online	Good	RAID disk	WDC	WD-WMAY00020699	SATA2	Enabled	Disabled	Enabled	Enabled
3	1862	RG-R5	Online	Good	RAID disk	WDC	WD-WMAY00009157	SATA2	Enabled	Disabled	Enabled	Enabled
4	1862		Online	Good	Global spare	WDC	WD-WMAY00016048	SATA2	Enabled	Disabled	Enabled	Enabled
				Good	Free disk	WDC	WD-WMAY00028747	SATA2	Enabled	Disabled	Enabled	Enabled
				Good	Free disk	WDC	WD-WMAY00023955	SATA2	Enabled	Disabled	Enabled	Enabled
				Good	Free disk	WDC	WD-WMAY00021914	SATA2	Enabled	Disabled	Enabled	Enabled
				Good	Free disk	WDC	WD-WMAY00020730	SATA2	Enabled	Disabled	Enabled	Enabled

Figure 4.4.6.7

(Figure 4.4.6.9: Slot 4 is set as a global spare disk.)

Step 5: Done.

Delete VDs, RG, please follow the below steps.

Step 6: Detach a LUN from the VD.

In “/ Volume configuration / Logical unit”,

Host	Target	LUN	Permission	VD name	#Session
∞	all	0	Read-write	VD-R5-1	0
iqn.1991-05.com:∞	iqn.2009-05.com:iscsipro:ir16is4er-000a6d6e9:target0	1	Read-write	VD-R5-2	0

Figure 4.4.6.11

1. Check the gray button next to the LUN; click “Detach”. There will pop up a confirmation page.
2. Choose “OK”.

3. Done.

Step 7: Delete a VD (Virtual Disk).

To delete the virtual disk, please follow the procedures:

1. Select “/ **Volume configuration / Virtual disk**”.
2. Check the gray button next to the VD number; click “**Delete**”. There will pop up a confirmation page, click “**OK**”.
3. Done. Then, the VD is deleted.



Tips

When deleting VD directly, the attached LUN(s) of to this VD will be detached together.

Step 8: Delete a RG (RAID group).

To delete a RAID group, please follow the procedures:

1. Select “/ **Volume configuration / RAID group**”.
2. Select a RG which all its VD are deleted, otherwise the this RG cannot be deleted.
3. Check the gray button next to the RG number click “**Delete**”.
4. There will pop up a confirmation page, click “**OK**”.
5. Done. The RG has been deleted.



Tips

The action of deleting one RG will succeed only when all of the related VD(s) are deleted in this RG. Otherwise, user cannot delete this RG.

Step 9: Free a global spare disk.

To free a global spare disk, please follow the procedures.

1. Select “/ **Volume configuration / Physical disk**”.
2. Check the gray button next to the PD slot; click “**Set Free disk**”.

Step 10: Done, all volumes have been deleted.

4.5 Enclosure management

“**Enclosure management**” allows managing enclosure information including “**SES configuration**”, “**Hardware monitor**”, “**S.M.A.R.T.**” and “**UPS**”. For the enclosure management, there are many sensors for different purposes, such as temperature

sensors, voltage sensors, hard disk status, fan sensors, power sensors, and LED status. Due to the different hardware characteristics among these sensors, they have different polling intervals. Below are the details of the polling time intervals:

1. Temperature sensors: 1 minute.
2. Voltage sensors: 1 minute.
3. Hard disk sensors: 10 minutes.
4. Fan sensors: 10 seconds . When there are 3 errors consecutively, system sends ERROR event log.
5. Power sensors: 10 seconds, when there are 3 errors consecutively, system sends ERROR event log.
6. LED status: 10 seconds.

SES configuration	Access control for SES management
Hardware monitor	System monitored voltage, temperature and battery backup module
S.M.A.R.T.	Self-monitoring analysis and reporting technology for physical disks
UPS	Uninterruptible power supply

Figure 4.5.1

4.5.1 SES configuration

SES represents SCSI Enclosure Services, one of the enclosure management standards. “SES configuration” can enable or disable the management of SES.

Host	LUN
*	0

Figure 4.5.1.1

(Figure 4.5.1.1: Enable SES in LUN 0, and can be accessed from every host)

Host	Target	LUN
*	iqn.2009-05.com.iscsipro:ir16is4er-000a6d6e9:target0	0

Figure 4.5.1.2

(Figure 4.5.1.2: Enable SES in LUN 0, and can be accessed from every host)

The SES client software is available at the following web site:

SANtools: <http://www.santools.com/>

4.5.2 Hardware monitor

“Hardware monitor” can view the information of current voltages and temperatures.

Local

Temperature :

Type	Item	Value	Status
Voltage	Onboard +1.2V	+1.22 V (min = +1.08 V, max = +1.32 V)	OK
	Onboard +3.3V	+3.38 V (min = +3.04 V, max = +3.56 V)	OK
	Onboard +5V	+5.02 V (min = +4.60 V, max = +5.40 V)	OK
	Onboard +12V	+12.08 V (min = +11.04 V, max = +12.96 V)	OK
	Onboard +1.8V	+1.84 V (min = +1.62 V, max = +1.98 V)	OK
	PSU +5V(C60)	+5.02 V (min = +4.60 V, max = +5.40 V)	OK
	PSU +12V(C60)	+12.23 V (min = +11.04 V, max = +12.96 V)	OK
	PSU +3.3V(C60)	+3.39 V (min = +3.04 V, max = +3.56 V)	OK
Temperature	Core Processor	+48.5 (C) (hyst = +0.0 (C), high = +80.0 (C))	OK
	Onboard SAS Device 1	+47.0 (C) (hyst = +0.0 (C), high = +80.0 (C))	OK
	Onboard SAS Device 2	+43.0 (C) (hyst = +0.0 (C), high = +80.0 (C))	OK
	Location 01(C60)	+23.0 (C) (hyst = +5.0 (C), high = +55.0 (C))	OK
	Location 02(C60)	+25.0 (C) (hyst = +5.0 (C), high = +55.0 (C))	OK
	Location 03(C60)	+25.5 (C) (hyst = +5.0 (C), high = +55.0 (C))	OK
	Location 04(C60)	+28.0 (C) (hyst = +5.0 (C), high = +55.0 (C))	OK
	Location 05(C60)	+29.0 (C) (hyst = +5.0 (C), high = +55.0 (C))	OK
	Location 06(C60)	+28.5 (C) (hyst = +5.0 (C), high = +55.0 (C))	OK
	Location 07(C60)	+29.0 (C) (hyst = +5.0 (C), high = +55.0 (C))	OK
Location 08(C60)	+30.5 (C) (hyst = +5.0 (C), high = +55.0 (C))	OK	
Power Supply	PSU1(C60)	N/A	OK
	PSU2(C60)	N/A	OK
Cooling	FAN1(C60)	4963 RPM	OK
	FAN2(C60)	4963 RPM	OK
	FAN3(C60)	5113 RPM	OK
	FAN4(C60)	4963 RPM	OK

Figure 4.5.2.1

If “**Auto shutdown**” is checked, the system will shutdown automatically when voltage or temperature is out of the normal range. For better data protection, please check “**Auto Shutdown**”.

For better protection and avoiding single short period of high temperature triggering auto shutdown, the system use multiple condition judgments to trigger auto shutdown, below are the details of when the Auto shutdown will be triggered.

1. There are several sensors placed on systems for temperature checking. System will check each sensor for every 30 seconds. When one of these sensor is over high temperature threshold for continuous 3 minutes, auto shutdown will be triggered immediately.
2. The core processor temperature limit is 80°C . The on board SAS device temperature limit is 80°C . The backplane board temperature limit is 58°C .
3. If the high temperature situation doesn't last for 3 minutes, system will not trigger auto shutdown.

4.5.3 Hard drive S.M.A.R.T. support

S.M.A.R.T. (Self-Monitoring Analysis and Reporting Technology) is a diagnostic tool for hard drives to deliver warning of drive failures in advance. S.M.A.R.T. provides users chances to take actions before possible drive failure.

S.M.A.R.T. measures many attributes of the hard drive all the time and inspects the properties of hard drives which are close to be out of tolerance. The advanced notice of possible hard drive failure can allow users to back up hard drive or replace the hard drive. This is much better than hard drive crash when it is writing data or rebuilding a failed hard drive.

“**S.M.A.R.T.**” can display S.M.A.R.T. information of hard drives. The number is the current value; the number in parenthesis is the threshold value. The threshold values from different hard drive vendors are different; please refer to hard drive vendors' specification for details.

S.M.A.R.T. only supports SATA drives. SAS drives do not have this function now. It will show N/A in the web page for SAS drives.

Local								
Slot	HDD type	Read error rate	Spin up time	Reallocated sector count	Seek error rate	Spin up retries	Calibration retries	Temperature (C)
1	SATA2	200(51)	168(21)	199(140)	200(0)	100(0)	100(0)	27
2	SATA2	200(51)	165(21)	200(140)	200(0)	100(0)	100(0)	27
3	SATA2	200(51)	168(21)	200(140)	200(0)	100(0)	100(0)	28
4	SATA2	200(51)	164(21)	200(140)	200(0)	100(0)	100(0)	26
5	SATA2	200(51)	166(21)	200(140)	200(0)	100(0)	100(0)	26
6	SATA2	200(51)	169(21)	200(140)	200(0)	100(0)	100(0)	26
7	SATA2	200(51)	172(21)	200(140)	200(0)	100(0)	100(0)	27
8	SATA2	200(51)	161(21)	200(140)	200(0)	100(0)	100(0)	26

Figure 4.5.3.1

4.5.4 UPS

“**UPS**” can set up UPS (**Uninterruptible Power Supply**).

UPS type :	None
Shutdown battery level (%) :	5
Shutdown delay (s) :	0
Shutdown UPS :	OFF
Status :	
Battery level :	0%

Confirm

Figure 4.5.4.1

(Figure 4.5.4.1: Without UPS.)

Currently, the system only supports and communicates with smart-UPS of APC (American Power Conversion Corp.) UPS. Please review the details from the website: <http://www.apc.com/>.

First, connect the system and APC UPS via RS-232 for communication. Then set up the shutdown values (shutdown battery level %) when power is failed. UPS in other companies can work well, but they have no such communication feature with the system.

UPS type : Smart-UPS ▾

Shutdown battery level (%) : 5 ▾

Shutdown delay (s) : 30 ▾

Shutdown UPS : ON ▾

Status :

Battery level : 0%

Confirm ●

Figure 4.5.4.2

(Figure 4.5.4.2: With Smart-UPS.)

- UPS column description:

UPS Type	Select UPS Type. Choose Smart-UPS for APC, None for other vendors or no UPS.
Shutdown Battery Level (%)	When below the setting level, system will shutdown. Setting level to “0” will disable UPS.
Shutdown Delay (s)	If power failure occurs, and system power can not recover, the system will shutdown. Setting delay to “0” will disable the function.
Shutdown UPS	Select ON, when power is gone, UPS will shutdown by itself after the system shutdown successfully. After power comes back, UPS will start working and notify system to boot up. OFF will not.
Status	The status of UPS: <ul style="list-style-type: none"> • “Detecting...” • “Running” • “Unable to detect UPS” • “Communication lost” • “UPS reboot in progress” • “UPS shutdown in progress” • “Batteries failed. Please change them NOW!”
Battery Level (%)	Current power percentage of battery level.

4.6 System maintenance

“Maintenance” allows the operation of system functions which include “System information” to show the system version and details,, “Upgrade” to the latest

firmware, “**Reset to factory default**” to reset all controller configuration values to factory settings, “**Import and export**” to import and export all controller configuration to a file, “**Event log**” to view system event log to record critical events, and “**Reboot and shutdown**” to reboot or shutdown the system.

System information	System information
Upgrade	Remote upload firmware
Reset to factory default	Reset to factory default
Import and export	Import/export configurations
Event log	System event log to record critical events
Reboot and shutdown	Reboot or shutdown system

Figure 4.6.1

4.6.1 System information

“**System information**” can display system information, including firmware version, CPU type, installed system memory, serial number and backplane ID.

```

System information
iR16IS4ER 1.0.8p2 (build 201011181700)
CPU type
XSC3-IOP8134x Family rev 9 (v5l)
Installed system memory
ECC Unbuffered DDR-II 1024MB
Controller serial no.
001378A6D6E9
Backplane ID
C60
    
```

Figure 4.6.1.1

4.6.2 Upgrade

“**Upgrade**” can upgrade firmware. Please prepare new firmware file named “**xxxx.bin**” in local hard drive, then click “**Browse**” to select the file. Click “**Confirm**”, it will pop up a message “Upgrade system now? If you want to downgrade to the previous FW later (not recommend), please export your system configuration in advance”, click “**Cancel**” to export system configuration in advance, then click “**OK**” to start to upgrade firmware.



Figure 4.6.2.1

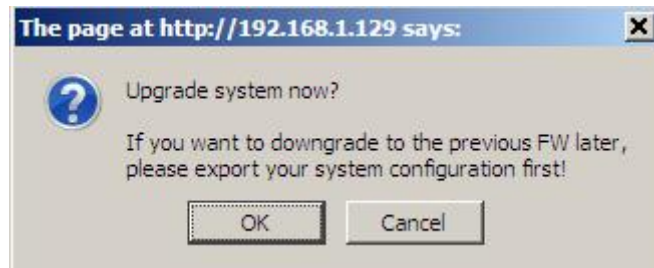


Figure 4.6.2.2

When upgrading, there is a progress bar running. After finished upgrading, the system must reboot manually to make the new firmware took effect.



Tips
Please contact with info@istoragepro.com for latest firmware.

4.6.3 Reset to factory default

“Reset to factory default” allows user to reset controller to factory default setting.

Sure to reset to factory default?

Confirm


Figure 4.6.3.1

Reset to default value, the password is: **0000**, and IP address to default DHCP.
 Default IP address: **192.168.10.50** (DHCP)
 Default subnet mask: **255.255.255.0**
 Default gateway: **192.168.10.254**


4.6.4 Import and export

“Import and export” allows user to save system configuration values: export, and apply all configuration: import. For the volume configuration setting, the values are available in export and not available in import which can avoid conflict / date-deleting between two controllers which mean if one system already has valuable volumes in the disks and user may forget and overwrite it. Use import could return to original configuration. If the volume setting was also imported, user’s current volumes will be overwritten with different configuration.

Import/Export :



Import file :



Confirm

Figure 4.6.4.1

1. **Import:** Import all system configurations excluding volume configuration.
2. **Export:** Export all configurations to a file.

**Caution**

“**Import**” will import all system configurations excluding volume configuration; the current configurations will be replaced.

4.6.5 Event log

“**Event log**” can view the event messages. Check the checkbox of INFO, WARNING, and ERROR to choose the level of event log display. Click “**Download**” button to save the whole event log as a text file with file name “log-ModelName-SerialNumber-Date-Time.txt”. Click “**Clear**” button to clear all event logs. Click “**Mute**” button to stop alarm if system alerts.

Show events : INFO WARNING ERROR

Type	Time	Content
INFO	Wed, 01 Dec 2010 23:20:40	VD VD-R5-2 completed initialization.
INFO	Wed, 01 Dec 2010 23:20:34	Assign PD 4 to Global Spare Disks.
INFO	Wed, 01 Dec 2010 23:16:00	VD VD-R5-2 starts initialization.
INFO	Wed, 01 Dec 2010 23:16:00	VD VD-R5-1 completed initialization.
INFO	Wed, 01 Dec 2010 23:12:46	VD VD-R5-2 has been created.
INFO	Wed, 01 Dec 2010 23:12:20	VD VD-R5-1 starts initialization.
INFO	Wed, 01 Dec 2010 23:12:20	VD VD-R5-1 has been created.
INFO	Wed, 01 Dec 2010 23:09:10	RG RG-R5 has been created.
INFO	Wed, 01 Dec 2010 23:07:26	RG RG-R0 has been deleted.
INFO	Wed, 01 Dec 2010 23:07:21	RG RG-R5 has been deleted.
INFO	Wed, 01 Dec 2010 23:07:05	VD SnapVD-02 has been deleted.
INFO	Wed, 01 Dec 2010 23:07:05	VD SnapVD-01 has been deleted.
INFO	Wed, 01 Dec 2010 23:07:05	VD VD-01 has been deleted.
INFO	Wed, 01 Dec 2010 23:06:59	VD VD-02 has been deleted.
INFO	Wed, 01 Dec 2010 22:51:55	VD SnapVD-02 has been created.

Figure 4.6.5.1

The event log is displayed in reverse order which means the latest event log is on the first / top page. The event logs are actually saved in the first four hard drives; each hard drive has one copy of event log. For one system, there are four copies of event logs to make sure users can check event log any time when there are failed disks.

**Tips**

Please plug-in any of the first four hard drives, then event logs can be saved and displayed in next system boot up. Otherwise, the event logs cannot be saved and would be disappeared.

4.6.6 Reboot and shutdown

“**Reboot and shutdown**” can “**Reboot**” and “**Shutdown**” the system. Before power off, it’s better to execute “**Shutdown**” to flush the data from cache to physical disks. The step is necessary for data protection.



Figure 4.6.6.1

4.7 Logout

For security reason, “**Logout**” allows users logout when no user is operating the system. Re-login the system; please enter username and password again.

Chapter 5 Advanced operations

5.1 Volume rebuild

If one physical disk of the RG which is set as protected RAID level (e.g.: RAID 3, RAID 5, or RAID 6) is FAILED or has been unplugged / removed, then the status of RG is changed to degraded mode, the system will search/detect spare disk to rebuild the degraded RG to a complete one. It will detect dedicated spare disk as rebuild disk first, then global spare disk.

iStoragePro controllers support Auto-Rebuild. The following is the scenario:

Take RAID 6 for example:

1. When there is no global spare disk or dedicated spare disk in the system, The RG will be in degraded mode and wait until (1) there is one disk assigned as spare disk, or (2) the failed disk is removed and replaced with new clean disk, then the Auto-Rebuild starts. The new disk will be a spare disk to the original RG automatically. If the new added disk is not clean (with other RG information), it would be marked as RS (reserved) and the system will not start "auto-rebuild". If this disk is not belonging to any existing RG, it would be FR (Free) disk and the system will start Auto-Rebuild. If user only removes the failed disk and plugs the same failed disk in the same slot again, the auto-rebuild will start running. But rebuilding in the same failed disk may impact customer data if the status of disk is unstable. iStoragePro suggests all customers not to rebuild in the failed disk for better data protection.
2. When there is enough global spare disk(s) or dedicated spare disk(s) for the degraded array, system starts Auto-Rebuild immediately. And in RAID 6, if there is another disk failure occurs during rebuilding, system will start the above Auto-Rebuild process as well. Auto-Rebuild feature only works at that the status of RG is "Online". It will not work at "Offline". Thus, it will not conflict with the "Online roaming" feature.
3. In degraded mode, the status of RG is "Degraded". When rebuilding, the status of RG / VD will be "Rebuild", the column "R%" in VD will display the ratio in percentage. After complete rebuilding, the status will become "Online". RG will become completely one.



Tips

"Set dedicated spare" is not available if there is no RG or only RG of RAID 0, JBOD, because user can not set dedicated spare disk to RAID 0 and JBOD.

Sometimes, rebuild is called recover; they are the same meaning. The following table is the relationship between RAID levels and rebuild.

- **Rebuild operation description:**

RAID 0	Disk striping. No protection for data. RG fails if any hard drive fails or unplugs.
RAID 1	Disk mirroring over 2 disks. RAID 1 allows one hard drive fails or unplugging. Need one new hard drive to insert to the system and rebuild to be completed.
N-way mirror	Extension to RAID 1 level. It has N copies of the disk. N-way mirror allows N-1 hard drives failure or unplugging.
RAID 3	Striping with parity on the dedicated disk. RAID 3 allows one hard drive failure or unplugging.
RAID 5	Striping with interspersed parity over the member disks. RAID 5 allows one hard drive failure or unplugging.
RAID 6	2-dimensional parity protection over the member disks. RAID 6 allows two hard drives failure or unplugging. If it needs to rebuild two hard drives at the same time, it will rebuild the first one, then the other in sequence.
RAID 0+1	Mirroring of RAID 0 volumes. RAID 0+1 allows two hard drive failures or unplugging, but at the same array.
RAID 10	Striping over the member of RAID 1 volumes. RAID 10 allows two hard drive failure or unplugging, but in different arrays.
RAID 30	Striping over the member of RAID 3 volumes. RAID 30 allows two hard drive failure or unplugging, but in different arrays.
RAID 50	Striping over the member of RAID 5 volumes. RAID 50 allows two hard drive failures or unplugging, but in different arrays.
RAID 60	Striping over the member of RAID 6 volumes. RAID 60 allows four hard drive failures or unplugging, every two in different arrays.
JBOD	The abbreviation of “ J ust a B unch O f D isks”. No data protection. RG fails if any hard drive failures or unplugs.

5.2 RG migration

To migrate the RAID level, please follow below procedures.

1. Select “/ **Volume configuration / RAID group**”.
2. Check the gray button next to the RG number; click “**Migrate**”.
3. Change the RAID level by clicking the down arrow to “**RAID 5**”. There will be a pup-up which indicates that HDD is not enough to support the new setting of RAID level, click “**Select PD**” to increase hard drives, then click “**Confirm**” to go back to setup page. When doing migration to lower RAID level, such as the original RAID level is RAID 6 and user wants to migrate to RAID 0, system will evaluate whether this operation is safe or not, and appear a warning message of “**Sure to migrate to a lower protection array?**”.

The screenshot shows a configuration form with the following fields:

- Name: RG-R0->R5
- RAID level: RAID 5 (with a dropdown arrow)
- RAID PD slot: 1 2 3
- A "Select PD" button.
- Navigation buttons: "<< Back" and "Next >>"

Figure 5.2.1

4. Double check the setting of RAID level and RAID PD slot. If there is no problem, click “**Next**”.
5. Finally a confirmation page shows the detail of RAID information. If there is no problem, click “**Confirm**” to start migration. System also pops up a message of “**Warning: power lost during migration may cause damage of data!**” to give user warning. When the power is abnormally off during the migration, the data is in high risk.
6. Migration starts and it can be seen from the “**status**” of a RG with “**Migrating**”. In “/ **Volume configuration / Virtual disk**”, it displays a “**Migrating**” in “**Status**” and complete percentage of migration in “**R%**”.

No.	Name	Total (GB)	Free (GB)	#PD	#VD	Status	Health	RAID	Enclosure
1	RG-R0-R5	5588	5568	4	1	Migrating	Good	RAID 5	Local

Figure 5.2.2

(Figure 5.2.2: A RAID 0 with 3 physical disks migrates to RAID 5 with 4 physical disks.)


No.	Name	Size (GB)	Write	Priority	Bg rate	Status	Clone	Schedule	Type	Health	R %	RAID	#LUN	Snapshot space (GB)	#Snapshot	RG name
1	VD-R0->R5	20	WB	HI	4	Migrating	N/A	N/A	RAID	Optimal	1	RAID 5	0	0/0	0	RG-R0-R5

Figure 5.2.3

To do migration, the total size of RG must be larger or equal to the original RG. It does not allow expanding the same RAID level with the same hard disks of original RG.

The below operations are not allowed when a RG is being migrated. System would reject these operations:

1. Add dedicated spare.
2. Remove a dedicated spare.
3. Create a new VD.
4. Delete a VD.
5. Extend a VD.
6. Scrub a VD.
7. Perform another migration operation.
8. Scrub entire RG.
9. Take a snapshot.
10. Delete a snapshot.
11. Expose a snapshot.
12. Rollback to a snapshot.



Caution
 RG Migration cannot be executed during rebuilding or VD extension.

5.3 VD extension

To extend VD size, please follow the procedures.

1. Select “/ **Volume configuration / Virtual disk**”.
2. Check the gray button next to the VD number; click “**Extend**”.
3. Change the size. The size must be larger than the original, and then click “**Confirm**” to start extension.

Size : GB ▼

Free : 5578 GB


<< Back
Confirm

Figure 5.3.1

4. Extension starts. If VD needs initialization, it will display an “**Initiating**” in “**Status**” and complete percentage of initialization in “**R%**”.

No.	Name	Size (GB) ▼	Write	Priority	Bg rate	Status	Clone	Schedule	Type	Health	R %	RAID	#LUN	Snapshot space (GB) ▼	#Snapshot	RG name
1	VD-R0->R5	20	WB	HI	4	Initiating	N/A	N/A	RAID	Optimal	55	RAID 5	0	0/0	0	RG-R0-R5

Figure 5.3.2



Tips
 The size of VD extension must be larger than original.



5.4 iSnap

Snapshot-on-the-box (iSnap) captures the instant state of data in the target volume in a logical sense. The underlying logic is Copy-on-Write -- moving out the data which would be written to certain location where a write action occurs since the time of data capture. The certain location, named as “Snap VD”, is essentially a new VD which can be attached to a LUN provisioned to a host as a disk like other ordinary VDs in the system. Rollback restores the data back to the state of any time which was previously captured in case for any unfortunate reason it might be (e.g. virus attack, data corruption, human errors and so on). Snap VD is allocated within the same RG in which the snapshot is taken, we suggest to reserve 20% of RG size or more for snapshot space. Please refer to the following figure for snapshot concept.

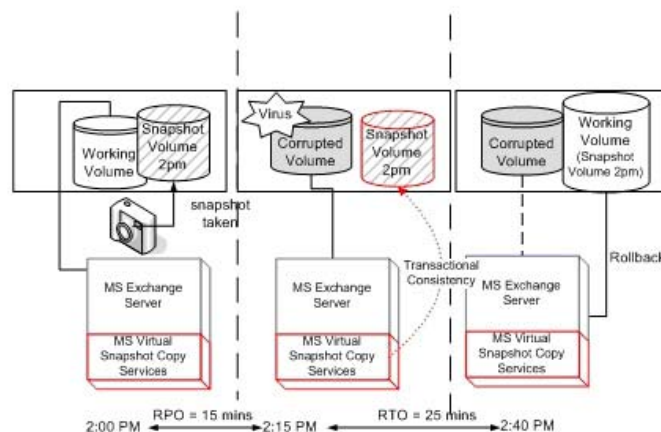


Figure 5.4.1

5.4.1 Create snapshot volume

To take a snapshot of the data, please follow the procedures.

1. Select “/ **Volume configuration / Virtual disk**”.
2. Check the gray button next to the VD number; click “**Set snapshot space**”.
3. Set up the size for snapshot. The minimum size is suggested to be **20%** of VD size, and then click “**OK**”. It will go back to the VD page and the size will show in snapshot column. It may not be the same as the number entered because some size is reserved for snapshot internal usage. There will be 2 numbers in

“Snapshot” column. These numbers mean “Used snapshot space” and “Total snapshot space”.

- There are two methods to take snapshot. In “/ Volume configuration / Virtual disk”, check the gray button next to the VD number; click “Take snapshot”. Or in “/ Volume configuration / Snapshot”, click “Take snapshot”.
- Enter a snapshot name, and then click “OK”. A snapshot VD is created.
- Select “/ Volume configuration / Snapshot” to display all snapshot VDs taken from the VD.

Linked snapshot for VD: - VD-01 -

No.	Name	Used (GB)	Status	Health	Exposure	Right	#LUN	Created time
1	SnapVD-01	0	N/A	Good	No	N/A	N/A	Thu Dec 2 04:29:07 2010

Expose
Rollback
Delete

<< Back Cleanup Auto snapshot Take snapshot

Figure 5.4.1.1

- Check the gray button next to the Snapshot VD number; click “Expose”. Enter a capacity for snapshot VD. If size is zero, the exposed snapshot VD is read only. Otherwise, the exposed snapshot VD can be read / written, and the size is the maximum capacity to read / write.
- Attach a LUN to the snapshot VD. Please refer to the previous chapter for attaching a LUN.
- Done. It can be used as a disk.

Linked snapshot for VD: - VD-01 -

No.	Name	Used (GB)	Status	Health	Exposure	Right	#LUN	Created time
1	SnapVD-01	0	N/A	Good	Yes	Read-only	0	Wed Dec 8 16:46:43 2010
2	SnapVD-02	0	N/A	Good	Yes	Read-write	0	Wed Dec 8 16:47:20 2010

Unexpose
Rollback
Delete
Attach
Detach
List LUN

<< Back Cleanup Auto snapshot Take snapshot

Figure 5.4.1.2

(Figure 5.4.1.2: This is the snapshot list of “VD-01”. There are two snapshots. Snapshot VD “SnapVD-01” is exposed as read-only, “SnapVD-02” is exposed as read-write.)

- There are two methods to clean all snapshots. In “/ Volume configuration / Virtual disk”, check the gray button next to the VD number; click “Cleanup snapshot”. Or in “/ Volume configuration / Snapshot”, click “Cleanup”.
- “Cleanup” will delete all snapshots of the VD and release snapshot space.

5.4.2 Auto snapshot

The snapshot copies can be taken manually or by schedule such as hourly or daily. Please follow the procedures.

1. There are two methods to set auto snapshot. In “/ **Volume configuration / Virtual disk**”, check the gray button next to the VD number; click “**Auto snapshot**”. Or in “/ **Volume configuration / Snapshot**”, click “**Auto snapshot**”.
2. The auto snapshot can be set monthly, weekly, daily, or hourly.
3. Done. It will take snapshots automatically.

All
Months to take snapshots :
 01 02 03 04
 05 06 07 08
 09 10 11 12

All
Weeks to take snapshots :
 1 2 3 4
 5

All
Days to take snapshots :
 Sun Mon Tue Wed
 Thu Fri Sat

All
Hours to take snapshots :
 00 01 02 03
 04 05 06 07
 08 09 10 11
 12 13 14 15
 16 17 18 19
 20 21 22 23

Figure 5.4.2.1

(Figure 5.4.2.1: It will take snapshots every month, and keep the last 32 snapshot copies.)



Tips

Daily snapshot will be taken at every 00:00. Weekly snapshot will be taken every Sunday 00:00. Monthly snapshot will be taken every first day of month 00:00.

5.4.3 Rollback

The data in snapshot VD can rollback to original VD. Please follow the procedures.

1. Select “/ **Volume configuration / Snapshot**”.
2. Check the gray button next to the Snap VD number which user wants to rollback the data; click “**Rollback**”.
3. Done, the data in snapshot VD is rollback to original VD.



Caution

Before executing rollback, it is better to dismount file system for flushing data from cache to disks in OS first. System sends pop-up message when user executes rollback function.

5.4.4 iSnap constraint

iStoragePro snapshot function applies Copy-on-Write technique on UDV/VD and provides a quick and efficient backup methodology. When taking a snapshot, it does not copy any data at first time until a request of data modification comes in. The snapshot copies the original data to snapshot space and then overwrites the original data with new changes. With this technique, snapshot only copies the changed data instead of copying whole data. It will save a lot of disk space.

- **Create a data-consistent snapshot**

Before using snapshot, user has to know why sometimes the data corrupts after rollback of snapshot. Please refer to the following diagram.

When user modifies the data from host, the data will pass through file system and memory of the host (write caching). Then the host will flush the data from memory to physical disks, no matter the disk is local disk (IDE or SATA), DAS (SCSI or SAS), or SAN (fibre or iSCSI). From the viewpoint of storage device, it can not control the behavior of host side. This case maybe happens. If user takes a snapshot, some data is still in memory and not flush to disk. Then the snapshot may have an incomplete image of original data. The problem does not belong to the storage device. To avoid this data inconsistent issue between snapshot and original data, user has to make the operating system flush the data from memory of host (write caching) into disk before taking snapshot.

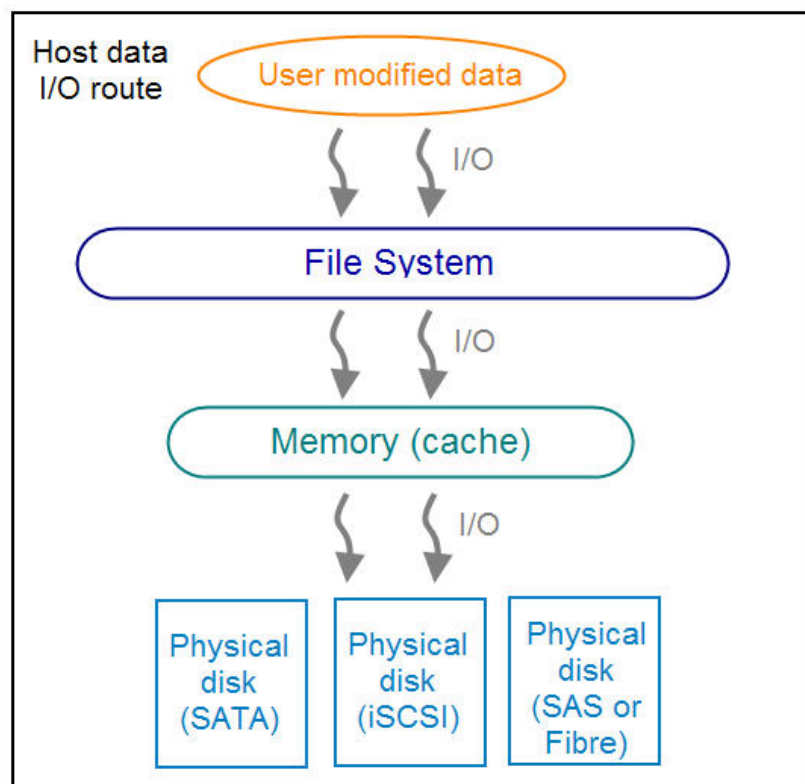


Figure 5.4.4.1

On Linux and UNIX platform, a command named **sync** can be used to make the operating system flush data from write caching into disk. For Windows platform, Microsoft also provides a tool – **sync**, which can do exactly the same thing as the **sync** command in Linux/UNIX. It will tell the OS to flush the data on demand. For more detail about **sync** tool, please refer to: <http://technet.microsoft.com/en-us/sysinternals/bb897438.aspx>

Besides the **sync** tool, Microsoft develops **VSS** (volume shadow copy service) to prevent this issue. VSS is a mechanism for creating consistent point-in-time copies of data known as shadow copies. It is a coordinator between backup software, application (SQL or Exchange...) and storages to make sure the snapshot without the problem of data-inconsistent. For more detail about the VSS, please refer to <http://technet.microsoft.com/en-us/library/cc785914.aspx>. **iStoragePro iR16IS4ER** can support Microsoft VSS.

- **What if the snapshot space is over?**

Before using snapshot, a snapshot space is needed from RG capacity. After a period of working snapshot, what if the snapshot size over the snapshot space of user defined? There are two different situations:

1. If there are two or more snapshots existed, the system will try to remove the oldest snapshots (to release more space for the latest snapshot) until enough space is released.
2. If there is only one snapshot existed, the snapshot will fail. Because the snapshot space is run out.

For example, there are two or more snapshots existed on a VD and the latest snapshot keeps growing. When it comes to the moment that the snapshot space is run out, the system will try to remove the oldest snapshot to release more space for the latest snapshot usage. As the latest snapshot is growing, the system keeps removing the old snapshots. When it comes that the latest snapshot is the only one in system, there is no more snapshot space which can be released for incoming changes, then snapshot will fail.

- **How many snapshots can be created on a VD**

There are up to 32 snapshots can be created on a UDV/VD. What if the 33rd snapshot has been taken? There are two different situations:

1. If the snapshot is configured as **auto snapshot**, the latest one (the 33rd snapshot) will replace the oldest one (the first snapshot) and so on.
2. If the snapshot is taken manually, when taking the 33rd snapshot will fail and a warning message will be showed on Web UI.

- **Rollback / Delete snapshot**

When a snapshot has been rollbacked, the other snapshots which are earlier than it will also be removed. But the rest snapshots will be kept after rollback. If a snapshot has been deleted, the other snapshots which are earlier than it will also be deleted. The space occupied by these snapshots will be released after deleting.

5.5 Disk roaming

Physical disks can be re-sequenced in the same system or move all physical disks in the same RAID group from system-1 to system-2. This is called disk roaming. System can execute disk roaming online. Please follow the procedures.

1. Select “/ **Volume configuration / RAID group**”.
2. Check the gray button next to the RG number; click “**Deactivate**”.
3. Move all PDs of the RG to another system.
4. Check the gray button next to the RG number; click “**Activate**”.
5. Done.

Disk roaming has some constraints as described in the followings:

1. Check the firmware version of two systems first. It is better that either systems have the same firmware version or system-2 firmware version is newer.
2. All physical disks of the RG should be moved from system-1 to system-2 together. The configuration of both RG and VD will be kept but LUN configuration will be cleared in order to avoid conflict with system-2’s original setting.

5.6 VD clone

The user can use VD clone function to backup data from source VD to target VD, set up backup schedule, and deploy the clone rules.

The procedures of VD clone are on the following:

1. Copy all data from source VD to target VD at the beginning (full copy).
2. Use iSnap technology to perform the incremental copy afterwards. Please be fully aware that the incremental copy needs to use snapshot to compare the data difference. Therefore, the enough snapshot space for VD clone is very important.

The following contents will take an example of a RAID 5 virtual disk (SourceVD_Raid5) clone to RAID 6 virtual disk (TargetVD_Raid6).

- **Start VD clone**

1. Create a RAID group (RG) in advance.

No.	Name	Total [GB]	Free [GB]	#PD	#VD	Status	Health	RAID	Enclosure
1	RG-R5	3725	3725	3	0	Online	Good	RAID 5	Local
2	RG-R6	3725	3725	4	0	Online	Good	RAID 6	Local

Figure 5.6.1

2. Create two virtual disks (VD) “SourceVD_R5” and “TargetVD_R6”. The raid type of backup target needs to be set as “**BACKUP**”.

Name : TargetVD-R6
RG name : RG-R6
Capacity : 20 GB
Stripe height (KB) : 64
Block size (B) : 512
Read/Write : Write-through cache Write-back cache
Priority : High priority Middle priority Low priority
Bg rate : 4
Readahead : Enabled
Erase : None
Type : BACKUP
RAID
BACKUP

Figure 5.6.2

- Here are the objects, a Source VD and a Target VD. Before starting clone process, it needs to deploy the VD Clone rule first. Click “**Configuration**”.

No.	Name	Size (GB)	Write	Priority	Bg rate	Status	Clone	Schedule	Type	Health	R %	RAID	#LUN	Snapshot space (GB)	#Snapshot	RG name
1	SourceVD_R5	20	WB	HI	4	Online	N/A	N/A	RAID	Optimal		RAID 5	0	0/0	0	RG-R5
2	TargetVD-R6	20	WB	HI	4	Online	N/A	N/A	BACKUP	Optimal		RAID 6	0	0/0	0	RG-R6

Figure 5.6.3

- There are three clone configurations, describe on the following.

Snapshot space : 2
Threshold : 50%
Restart the task an hour later if failed :

Figure 5.6.4

- Snapshot space:**

Snapshot space : 2
Threshold : 50%
Restart the task an hour later if failed : 2 :

Figure 5.6.4

This setting is the ratio of source VD and snapshot space. The default ratio is 2 to 1. It means when the clone process is starting, the system will automatically

use the free RG space to create a snapshot space which capacity is double the source VD.

- **Threshold: (The setting will be effective after enabling schedule clone)**

The screenshot shows a configuration window with three settings:

- Snapshot space :** A dropdown menu with the value '2' selected.
- Threshold :** A dropdown menu with '50%' selected. A list of options is visible below it, including 40%, 50% (highlighted), and 60%.
- Restart the task an hour later :** A checkbox that is checked.

Figure 5.6.5

The threshold setting will monitor the usage amount of snapshot space. When the used snapshot space achieves its threshold, system will automatically take a clone snapshot and start VD clone process. The purpose of threshold could prevent the incremental copy fail immediately when running out of snapshot space.

For example, the default threshold is 50%. The system will check the snapshot space every hour. When the snapshot space is used over 50%, the system will synchronize the source VD and target VD automatically. Next time, when the rest snapshot space has been used 50%, in other words, the total snapshot space has been used 75%, the system will synchronize the source VD and target VD again.

- **Restart the task an hour later if failed: (The setting will be effective after enabling schedule clone)**

The screenshot shows a configuration window with three settings:

- Snapshot space :** A dropdown menu with the value '2' selected.
- Threshold :** A dropdown menu with '50%' selected.
- Restart the task an hour later if failed :** A checkbox that is checked.

Figure 5.6.6

When running out of snapshot space, the VD clone process will be stopped because there is no more available snapshot space. If this option has been checked, system will clear the snapshots of clone in order to release snapshot space automatically, and the VD clone will restart the task after an hour. This task will start a full copy.

5. After deploying the VD clone rule, the VD clone process can be started now. Firstly, Click “**Set clone**” to set the target VD at the VD name “SourceVD_R5”.

No.	Name	Size (GB)	Write	Priority	Bg rate	Status	Clone	Schedule	Type	Health	R %	RAID	#LUN	Snapshot space (GB)	#Snapshot	RG name
1	SourceVD_R5	20	WB	HI	4	Online	N/A	N/A	RAID	Optimal		RAID 5	0	0/0	0	RG-R5

Extend

Parity check

Delete

Set property

Attach LUN

Detach LUN

List LUN

▶ Set done

Set snapshot space

Cleanup snapshot

Take snapshot

Auto snapshot

List snapshot

More information

Figure 5.6.7

- Select the target VD. Then click “**Confirm**”.

Name : TargetVD-R6

Figure 5.6.8

- Now, the clone target “TargetVD_R6” has been set.

No.	Name	Size (GB)	Write	Priority	Bg rate	Status	Clone	Schedule	Type	Health	R %	RAID	#LUN	Snapshot space (GB)	#Snapshot	RG name
1	SourceVD_R5	20	WB	HI	4	Online	TargetVD-R6	N/A	RAID	Optimal		RAID 5	0	0/0	0	RG-R5
2	TargetVD-R6	20	WB	HI	4	Online	N/A	N/A	BACKUP	Optimal		RAID 6	0	0/0	0	RG-R6

Figure 5.6.9

- Click “**Start clone**”, the clone process will start.

No.	Name	Size (GB)	Write	Priority	Bg rate	Status	Clone	Schedule	Type	Health	R %	RAID	#LUN	Snapshot space (GB)	#Snapshot	RG name
1	SourceVD_R5	20	WB	HI	4	Online	TargetVD-R6	N/A	RAID	Optimal		RAID 5	0	0/0	0	RG-R5
	Extend															
	Parity check															
	Delete															
	Set property															
	Attach LUN															
	Detach LUN															
	List LUN															
	Clear done															
	▶ Start done															
	Stop done															
	Schedule done															
	Set snapshot space															
	Cleanup snapshot															
	Take snapshot															
	Auto snapshot															
	List snapshot															
	More information															

Figure 5.6.10

- The default setting will create a snapshot space automatically which the capacity is double size of the VD space. Before starting clone, system will initiate the snapshot space.

No.	Name	Size (GB)	Write	Priority	Bg rate	Status	Clone	Schedule	Type	Health	R %	RAID	#LUN	Snapshot space (GB)	#Snapshot	RG name
1	SourceVD_R5	20	WB	HI	4	Initiating	TargetVD-R6	N/A	RAID	Optimal	33	RAID 5	0	3/43	1	RG-R5
2	TargetVD-R6	20	WB	HI	4	Online	N/A	N/A	BACKUP	Optimal		RAID 6	0	0/0	0	RG-R6

Figure 5.6.11

- After initiating the snapshot space, it will start cloning.

No.	Name	Size (GB)	Write	Priority	Bg rate	Status	Clone	Schedule	Type	Health	R %	RAID	#LUN	Snapshot space (GB)	#Snapshot	RG name
1	SourceVD_R5	20	WB	HI	4	Cloning	TargetVD-R6	N/A	RAID	Optimal	32	RAID 5	0	3/23	1	RG-R5
2	TargetVD-R6	20	WB	HI	4	Online	N/A	N/A	BACKUP	Optimal		RAID 6	0	0/0	0	RG-R6

Figure 5.6.12

- Click “Schedule clone” to set up the clone by schedule.

No.	Name	Size (GB)	Write	Priority	Bg rate	Status	Clone	Schedule	Type	Health	R %	RAID	#LUN	Snapshot space (GB)	#Snapshot	RG name
1	SourceVD_R5	20	WB	HI	4	Online	TargetVD-R6	N/A	RAID	Optimal		RAID 5	0	3/43	1	RG-R5
	Extend		WB	HI	4	Online	N/A	N/A	BACKUP	Optimal		RAID 6	0	0/0	0	RG-R6
	Parity check															
	Delete															
	Set property															
	Attach LUN															
	Detach LUN															
	List LUN															
	Clear done															
	Start done															
	Stop done															
	► Schedule done															
	Set snapshot space															
	Cleanup snapshot															
	Take snapshot															
	Auto snapshot															
	List snapshot															
	More information															

Figure 5.6.13

12. There are “**Set Clone schedule**” and “**Clear Clone schedule**” in this page. Please remember that “**Threshold**” and “**Restart the task an hour later if failed**” options in VD configuration will take effect after clone schedule has been set.

Virtual disk:SourceVD_R5

 Set Clone schedule

Scheduled time : 00:00

 Back up everyday

 Back up on a selected day in a week

 Sunday

 Monday

 Tuesday

 Wednesday

 Thursday

 Friday

 Saturday

 Back up on the 1st day in a month

 Clear Clone schedule

Figure 5.6.14

- **Run out of snapshot space while VD clone**

While the clone is processing, the increment data of this VD is over the snapshot space. The clone will complete, but the clone snapshot will fail. Next time, when trying to start clone, it will get a warning message “This is not enough of snapshot space for the operation”. At this time, the user needs to clean up the snapshot space in order to operate the clone process. Each time the clone snapshot failed, it means

that the system loses the reference value of incremental data. So it will start a full copy at next clone process.

When running out of snapshot space, the flow diagram of VD clone procedure will be like the following.

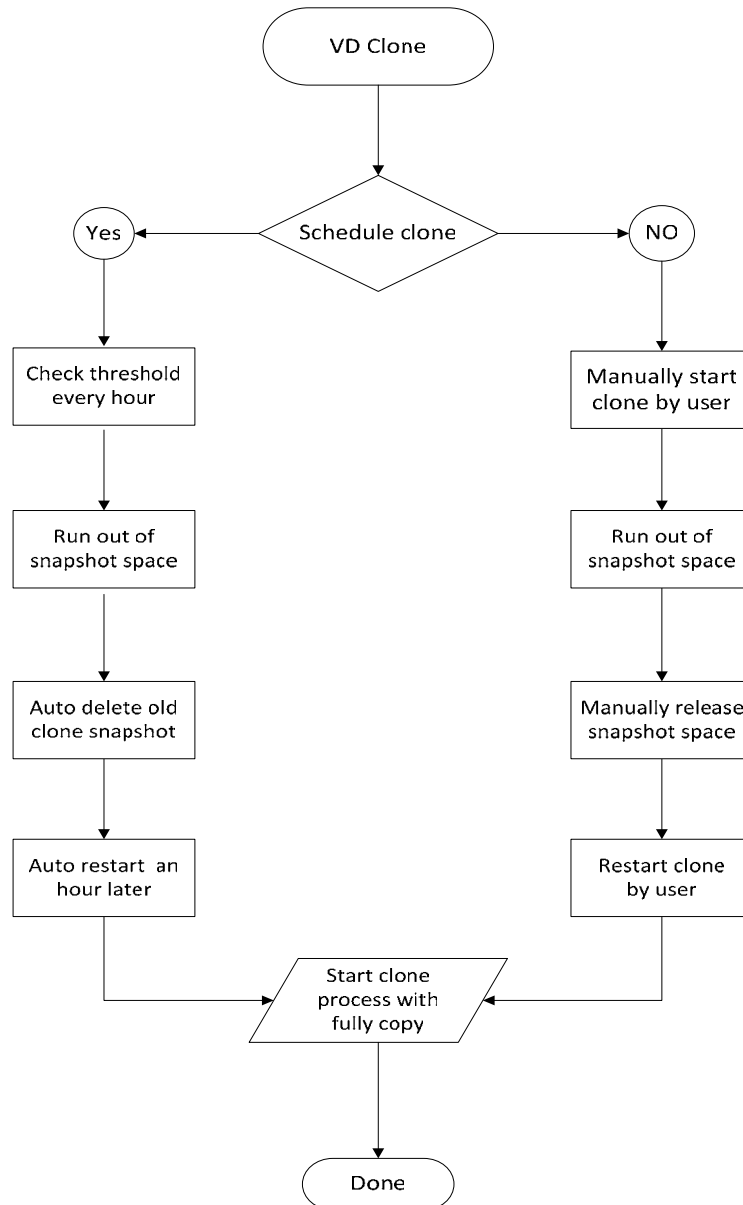


Figure 5.6.15

5.7 SAS JBOD expansion

5.7.1 Connecting JBOD

The iR16IS4ER has SAS JBOD expansion port to connect extra SAS JBOD controllers. When connecting to a SAS JBOD which can be detected, it displays tabs on the top in “/ Volume configuration / Physical disk”. For example, Local, JBOD 1 (vendor model), JBOD 2 (vendor model), ...etc. Local means disks in local

controller, and so on. The hard drives in JBOD can be used as local disks.

Local **JBOD 1 (iStorage iR16SAEJ v1.1.1)**

Slot	Size (GB)	RG name	Status	Health	Usage	Vendor	Serial	Type	Write cache	Standby	Readahead	Command queuing
1	1862		Online	Good	Free disk	WDC	WD-WMAY00026111	SATA2	Enabled	Disabled	Enabled	Enabled
2	1862		Online	Good	Free disk	WDC	WD-WMAUR0039716	SATA2	Enabled	Disabled	Enabled	Enabled
3	1862		Online	Good	Free disk	WDC	WD-WMAY00025408	SATA2	Enabled	Disabled	Enabled	Enabled
4	1862		Online	Good	Free disk	WDC	WD-WMAUR0014142	SATA2	Enabled	Disabled	Enabled	Enabled
5	1862		Online	Good	Free disk	WDC	WD-WMAY00016042	SATA2	Enabled	Disabled	Enabled	Enabled
6	1862		Online	Good	Free disk	WDC	WD-WMAY00032068	SATA2	Enabled	Disabled	Enabled	Enabled
7	1862		Online	Good	Free disk	WDC	WD-WMAUR0111016	SATA2	Enabled	Disabled	Enabled	Enabled
8	1862		Online	Good	Free disk	WDC	WD-WMAY00037129	SATA2	Enabled	Disabled	Enabled	Enabled

Figure 5.7.1

(Figure 5.7.1: Display all PDs in JBOD 1.)

“/ Enclosure management / S.M.A.R.T.” can display S.M.A.R.T. information of all PDs, including Local and all SAS JBODs.

Local								
Slot	HDD type	Read error rate	Spin up time	Reallocated sector count	Seek error rate	Spin up retries	Calibration retries	Temperature (C)
1	SATA2	200(51)	173(21)	200(140)	200(0)	100(0)	100(0)	30
2	SATA2	200(51)	167(21)	200(140)	100(0)	100(0)	100(0)	32
3	SATA2	200(51)	169(21)	200(140)	100(0)	100(0)	100(0)	31
4	SATA2	200(51)	166(21)	200(140)	200(0)	100(0)	100(0)	32
5	SATA2	200(51)	166(21)	200(140)	200(0)	100(0)	100(0)	32
6	SATA2	200(51)	169(21)	200(140)	200(0)	100(0)	100(0)	31
7	SATA2	200(51)	172(21)	200(140)	200(0)	100(0)	100(0)	31
8	SATA2	200(51)	177(21)	199(140)	200(0)	100(0)	100(0)	30

JBOD 1: iStorage iR16SAEJ v1.1.1 (WWN: 500137800290B23F)								
Slot	HDD type	Read error rate	Spin up time	Reallocated sector count	Seek error rate	Spin up retries	Calibration retries	Temperature (C)
1	SATA2	200(51)	169(21)	200(140)	200(0)	100(0)	100(0)	29
2	SATA2	200(51)	181(21)	200(140)	200(0)	100(0)	100(0)	30
3	SATA2	200(51)	169(21)	200(140)	200(0)	100(0)	100(0)	30
4	SATA2	200(51)	158(21)	200(140)	200(0)	100(0)	100(0)	31
5	SATA2	200(51)	163(21)	200(140)	200(0)	100(0)	100(0)	28
6	SATA2	200(51)	161(21)	200(140)	200(0)	100(0)	100(0)	30
7	SATA2	200(51)	161(21)	200(140)	200(0)	100(0)	100(0)	31
8	SATA2	183(51)	164(21)	152(140)	200(0)	100(0)	100(0)	29

Figure 5.7.2

(Figure 5.7.2: Disk S.M.A.R.T. information of Local and JBOD 1, although S.M.A.R.T. supports SATA disk only.)

SAS JBOD expansion has some constraints as described in the followings:

1. Up to 4 SAS JBODs can be cascaded.
2. Created RG can not use PDs which located in different systems. It means that RG can be composed of PDs which are all in Local or one SAS JBOD.
3. Global spare disk only supports all RGs which located in the same system.


5.7.2 Upgrade firmware of JBOD

To upgrade the firmware of JBOD, please follow the procedures.

- 1 There is a hidden web page for JBOD firmware upgrade. Please login Web UI as username admin first, and then add this URL to the browser. (http://Management IP/jbod_upg.php), for example:

http://192.168.10.50/jbod_upg.php

FOLLOW THE STEPS TO UPGRADE THE FIRMWARE OF JBOD

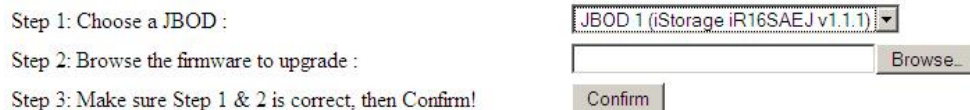

Step 1: Choose a JBOD :

Step 2: Browse the firmware to upgrade :

Step 3: Make sure Step 1 & 2 is correct, then Confirm!

Figure 5.7.2.1

- 2 Choose a JBOD which wants to upgrade.
- 3 Please prepare new firmware file in local hard drive, then click “**Browse**” to select the file. Click “**Confirm**”.
- 4 After finished upgrading, the system must reboot manually to make the new firmware took effect.

5.8 MPIO and MC/S

These features come from iSCSI initiator. They can be setup from iSCSI initiator to establish redundant paths for sending I/O from the initiator to the target.

1. **MPIO:** In Microsoft Windows server base system, Microsoft MPIO driver allows initiators to login multiple sessions to the same target and aggregate the duplicate devices into a single device. Each session to the target can be established using different NICs, network infrastructure and target ports. If one session fails, then another session can continue processing I/O without interruption to the application.

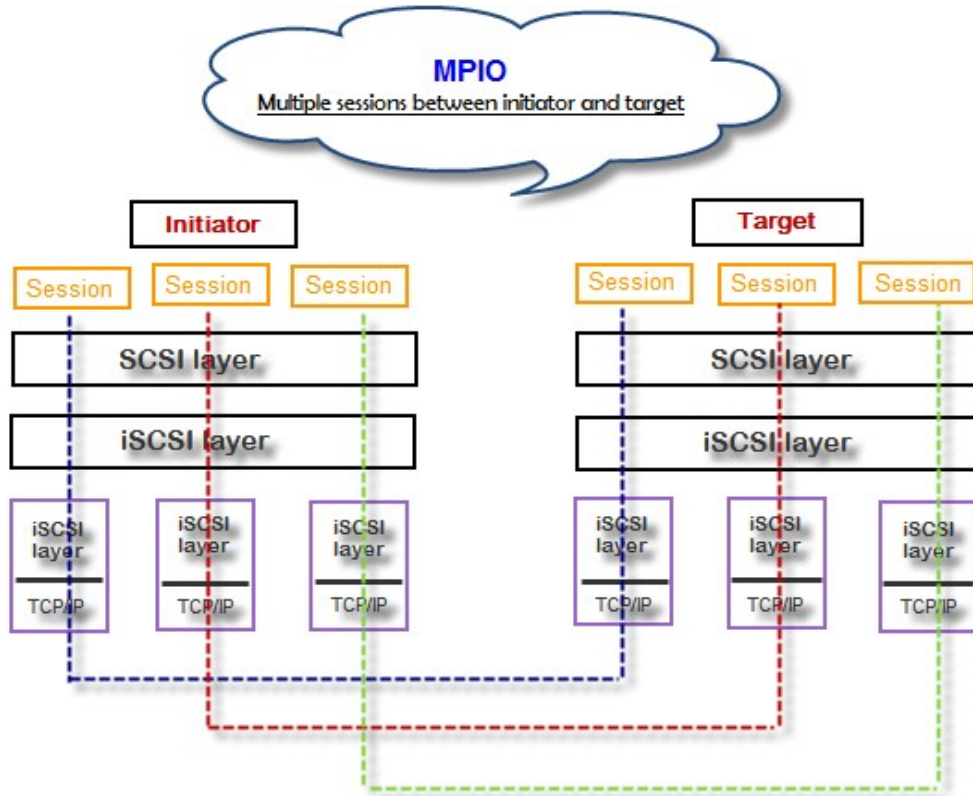


Figure 5.8.1

2. **MC/S:** MC/S (Multiple Connections per Session) is a feature of iSCSI protocol, which allows combining several connections inside a single session for performance and failover purposes. In this way, I/O can be sent on any TCP/IP connection to the target. If one connection fails, another connection can continue processing I/O without interruption to the application.

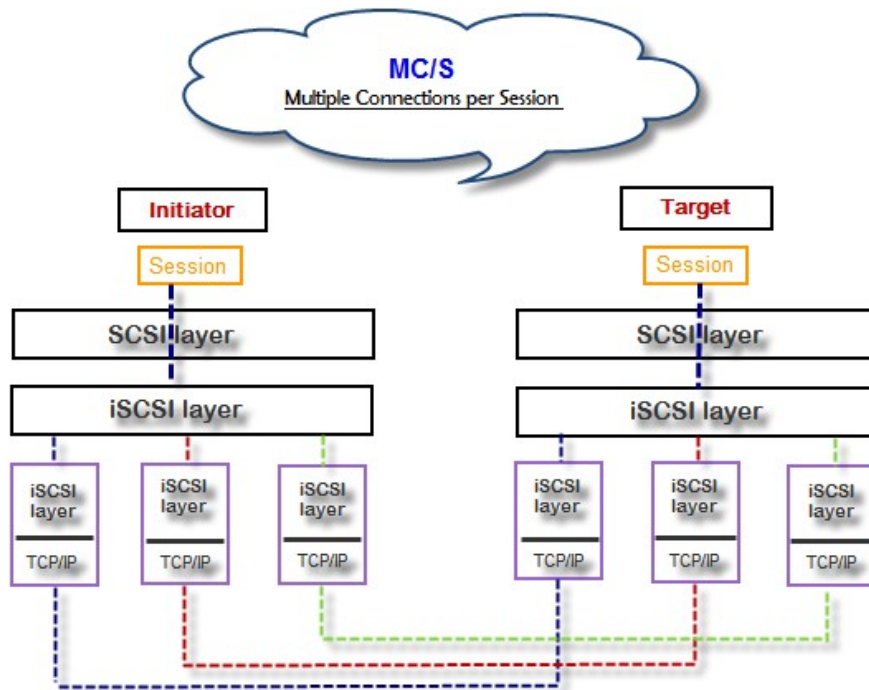


Figure 5.8.2

Difference:

MC/S is implemented on iSCSI level, while MPIO is implemented on the higher level. Hence, all MPIO infrastructures are shared among all SCSI transports, including Fiber Channel, SAS, etc. MPIO is the most common usage across all OS vendors. The primary difference between these two is which level the redundancy is maintained. MPIO creates multiple iSCSI sessions with the target storage. Load balance and failover occurs between the multiple sessions. MC/S creates multiple connections within a single iSCSI session to manage load balance and failover. Notice that iSCSI connections and sessions are different than TCP/IP connections and sessions. The above figures describe the difference between MPIO and MC/S.

There are some considerations when user chooses MC/S or MPIO for multipathing.

1. If user uses hardware iSCSI off-load HBA, then MPIO is the only one choice.
2. If user needs to specify different load balance policies for different LUNs, then MPIO should be used.
3. If user installs anyone of Windows XP, Windows Vista or Windows 7, MC/S is the only option since Microsoft MPIO is supported Windows Server editions only.
4. MC/S can provide higher throughput than MPIO in Windows system, but it consumes more CPU resources than MPIO.

5.9 Trunking and LACP

Link aggregation is the technique of taking several distinct Ethernet links to let them appear as a single link. It has a larger bandwidth and provides the fault tolerance ability. Beside the advantage of wide bandwidth, the I/O traffic remains operating until all physical links fail. If any link is restored, it will be added to the link group automatically. **iStoragePro** implements link aggregation as LACP and Trunking.

1. **LACP (IEEE 802.3ad):** The Link Aggregation Control Protocol (LACP) is a part of IEEE specification 802.3ad. It allows bundling several physical ports together to form a single logical channel. A network switch negotiates an automatic bundle by sending LACP packets to the peer. Theoretically, LACP port can be defined as active or passive. **iStoragePro** controller implements it as active mode which means that LACP port sends LACP protocol packets automatically. Please notice that using the same configurations between **iStoragePro** controller and gigabit switch.

The usage occasion of LACP:

- A. It's necessary to use LACP in a network environment of multiple switches. When adding new devices, LACP will separate the traffic to each path dynamically.
2. **Trunking (Non-protocol):** Defines the usage of multiple iSCSI data ports in parallel to increase the link speed beyond the limits of any single port.

The usage occasion of Trunking:

- A. This is a simple SAN environment. There is only one switch to connect the server and storage. And there is no extra server to be added in the future.
- B. There is no idea of using LACP or Trunking, uses Trunking first.
- C. There is a request of monitoring the traffic on a trunk in switch.

**Caution**

Before using trunking or LACP, the gigabit switch must support trunking or LACP and be enabled. Otherwise, the host cannot connect the link with the storage device.

Chapter 6 Troubleshooting

6.1 System buzzer

The system buzzer features are listed below:

1. The system buzzer alarms 1 second when the system boots up successfully.
2. The system buzzer alarms continuously when there is an error occurred. The alarm will be stopped after the error is resolved or is muted.
3. The alarm will be muted automatically when the error is resolved. E.g., when RAID 5 is degraded and the alarm rings immediately, the user changes / adds one physical disk for rebuilding. When the rebuilding is done, the alarm will be muted automatically.

6.2 Event notifications

- **PD events**

Level	Type	Description
INFO	PD inserted	Disk <slot> is inserted into system
WARNING	PD removed	Disk <slot> is removed from system
ERROR	HDD read error	Disk <slot> read block error
ERROR	HDD write error	Disk <slot> write block error
ERROR	HDD error	Disk <slot> is disabled
ERROR	HDD IO timeout	Disk <slot> gets no response
INFO	PD upgrade started	PD [<string>] starts upgrading firmware process.
INFO	PD upgrade finished	PD [<string>] finished upgrading firmware process.
WARNING	PD upgrade failed	PD [<string>] upgrade firmware failed.

- **HW events**

Level	Type	Description

WARNING	ECC single	Single-bit ECC error is detected at <address>
ERROR	ECC multiple	Multi-bit ECC error is detected at <address>
INFO	ECC dimm	ECC memory is installed
INFO	ECC none	Non-ECC memory is installed
INFO	SCSI bus reset	Received SCSI Bus Reset event at the SCSI Bus <number>
ERROR	SCSI host error	SCSI Host allocation failed
ERROR	SATA enable device fail	Failed to enable the SATA pci device
ERROR	SATA EDMA mem fail	Failed to allocate memory for SATA EDMA
ERROR	SATA remap mem fail	Failed to remap SATA memory io spcae
ERROR	SATA PRD mem fail	Failed to init SATA PRD memory manager
ERROR	SATA revision id fail	Failed to get SATA revision id
ERROR	SATA set reg fail	Failed to set SATA register
ERROR	SATA init fail	Core failed to initialize the SATA adapter
ERROR	SATA diag fail	SATA Adapter diagnostics failed
ERROR	Mode ID fail	SATA Mode ID failed
ERROR	SATA chip count error	SATA Chip count error
INFO	SAS port reply error	SAS HBA port <number> reply terminated abnormally
INFO	SAS unknown port reply error	SAS frontend reply terminated abnormally
INFO	FC port reply error	FC HBA port <number> reply terminated abnormally
INFO	FC unknown port reply error	FC frontend reply terminated abnormally

- EMS events**

Level	Type	Description
INFO	Power install	Power(<string>) is installed
ERROR	Power absent	Power(<string>) is absent
INFO	Power restore	Power(<string>) is restored to work.
ERROR	Power fail	Power(<string>) is not functioning
WARNING	Power detect	PSU signal detection(<string>)
INFO	Fan restore	Fan(<string>) is restored to work.
ERROR	Fan fail	Fan(<string>) is not functioning
INFO	Fan install	Fan(<string>) is installed
ERROR	Fan not present	Fan(<string>) is not present
ERROR	Fan over speed	Fan(<string>) is over speed
WARNING	Thermal level 1	System temperature(<string>) is higher.
ERROR	Thermal level 2	System Overheated(<string>)!!!
ERROR	Thermal level 2 shutdown	System Overheated(<string>)!!! The system will auto-shutdown immediately.
ERROR	Thermal level 2 CTR shutdown	The controller will auto shutdown immediately, reason [Overheated(<string>)].
WARNING	Thermal ignore value	Unable to update thermal value on <string>
WARNING	Voltage level 1	System voltage(<string>) is higher/lower.
ERROR	Voltage level 2	System voltages(<string>) failed!!!
ERROR	Voltage level 2 shutdown	System voltages(<string>) failed!!! The system will auto-shutdown immediately.
ERROR	Voltage level 2 CTR shutdown	The controller will auto shutdown immediately, reason [Voltage abnormal(<string>)].

INFO	UPS OK	Successfully detect UPS
WARNING	UPS fail	Failed to detect UPS
ERROR	UPS AC loss	AC loss for system is detected
ERROR	UPS power low	UPS Power Low!!! The system will auto-shutdown immediately.
WARNING	SMART T.E.C.	Disk <slot> S.M.A.R.T. Threshold Exceed Condition occurred for attribute <string>
WARNING	SMART fail	Disk <slot>: Failure to get S.M.A.R.T information
WARNING	RedBoot failover	RedBoot failover event occurred
WARNING	Watchdog shutdown	Watchdog timeout shutdown occurred
WARNING	Watchdog reset	Watchdog timeout reset occurred

- RMS events**

Level	Type	Description
INFO	Console Login	<username> login from <IP or serial console> via Console UI
INFO	Console Logout	<username> logout from <IP or serial console> via Console UI
INFO	Web Login	<username> login from <IP> via Web UI
INFO	Web Logout	<username> logout from <IP> via Web UI
INFO	Log clear	All event logs are cleared
WARNING	Send mail fail	Failed to send event to <email>.

- LVM events**

Level	Type	Description
INFO	RG create OK	RG <name> has been created.
INFO	RG create fail	Failed to create RG <name>.
INFO	RG delete	RG <name> has been deleted.
INFO	RG rename	RG <name> has been renamed as <name>.
INFO	VD create OK	VD <name> has been created.
INFO	VD create fail	Failed to create VD <name>.
INFO	VD delete	VD <name> has been deleted.
INFO	VD rename	Name of VD <name> has been renamed to <name>.
INFO	VD read only	Cache policy of VD <name> has been set as read only.
INFO	VD write back	Cache policy of VD <name> has been set as write-back.
INFO	VD write through	Cache policy of VD <name> has been set as write-through.
INFO	VD extend	Size of VD <name> extends.
INFO	VD attach LUN OK	VD <name> has been LUN-attached.
INFO	VD attach LUN fail	Failed to attach LUN to VD <name>.
INFO	VD detach LUN OK	VD <name> has been detached.
INFO	VD detach LUN fail	Failed to attach LUN from bus <number>, SCSI ID <number>, lun <number>.
INFO	VD init started	VD <name> starts initialization.
INFO	VD init finished	VD <name> completes initialization.
WARNING	VD init failed	Failed to complete initialization of VD <name>.
INFO	VD rebuild started	VD <name> starts rebuilding.
INFO	VD rebuild finished	VD <name> completes rebuilding.
WARNING	VD rebuild failed	Failed to complete rebuild of VD <name>.

INFO	VD migrate started	VD <name> starts migration.
INFO	VD migrate finished	VD <name> completes migration.
ERROR	VD migrate failed	Failed to complete migration of VD <name>.
INFO	VD scrub started	Parity checking on VD <name> starts.
INFO	VD scrub finished	Parity checking on VD <name> completes with <address> parity/data inconsistency found.
INFO	VD scrub aborted	Parity checking on VD <name> stops with <address> parity/data inconsistency found.
INFO	RG migrate started	RG <name> starts migration.
INFO	RG migrate finished	RG <name> completes migration.
INFO	RG move started	RG <name> starts move.
INFO	RG move finished	RG <name> completes move.
INFO	VD move started	VD <name> starts move.
INFO	VD move finished	VD <name> completes move.
ERROR	VD move failed	Failed to complete move of VD <name>.
INFO	RG activated	RG <name> has been manually activated.
INFO	RG deactivated	RG <name> has been manually deactivated.
INFO	VD rewrite started	Rewrite at LBA <address> of VD <name> starts.
INFO	VD rewrite finished	Rewrite at LBA <address> of VD <name> completes.
WARNING	VD rewrite failed	Rewrite at LBA <address> of VD <name> failed.
WARNING	RG degraded	RG <name> is in degraded mode.
WARNING	VD degraded	VD <name> is in degraded mode.
ERROR	RG failed	RG <name> is failed.
ERROR	VD failed	VD <name> is failed.
ERROR	VD IO fault	I/O failure for stripe number <address> in VD <name>.
WARNING	Recoverable read error	Recoverable read error occurred at LBA <address>-<address> of VD <name>.
WARNING	Recoverable write error	Recoverable write error occurred at LBA <address>-<address> of VD <name>.
ERROR	Unrecoverable read error	Unrecoverable read error occurred at LBA <address>-<address> of VD <name>.
ERROR	Unrecoverable write error	Unrecoverable write error occurred at LBA <address>-<address> of VD <name>.
ERROR	Config read fail	Config read failed at LBA <address>-<address> of PD <slot>.
ERROR	Config write fail	Config write failed at LBA <address>-<address> of PD <slot>.
ERROR	CV boot error adjust global	Failed to change size of the global cache.
INFO	CV boot global	The global cache is ok.
ERROR	CV boot error create global	Failed to create the global cache.
INFO	PD dedicated spare	Assign PD <slot> to be the dedicated spare disk of RG <name>.
INFO	PD global spare	Assign PD <slot> to Global Spare Disks.
WARNING	PD read error	Read error occurred at LBA <address>-<address> of PD <slot>.
WARNING	PD write error	Write error occurred at LBA <address>-<address> of PD <slot>.
WARNING	Scrub wrong parity	The parity/data inconsistency is found at LBA <address>-<address> when checking parity on VD <name>.
WARNING	Scrub data recovered	The data at LBA <address>-<address> is recovered when checking parity on VD <name>.
WARNING	Scrub recovered data	A recoverable read error occurred at LBA <address>-<address> when checking parity on VD <name>.
WARNING	Scrub parity recovered	The parity at LBA <address>-<address> is regenerated when checking parity on VD <name>.

INFO	PD freed	PD <slot> has been freed from RG <name>.
INFO	RG imported	Configuration of RG <name> has been imported.
INFO	RG restored	Configuration of RG <name> has been restored.
INFO	VD restored	Configuration of VD <name> has been restored.
INFO	PD scrub started	PD <slot> starts disk scrubbing process.
INFO	Disk scrub finished	PD <slot> completed disk scrubbing process.
INFO	Large RG created	A large RG <name> with <number> disks included is created
INFO	Weak RG created	A RG <name> made up disks across <number> chassis is created
INFO	RG size shrunk	The total size of RG <name> shrunk
INFO	VD erase finished	VD <name> finished erasing process.
WARNING	VD erase failed	The erasing process of VD <name> failed.
INFO	VD erase started	VD <name> starts erasing process.

- **Snapshot events**

Level	Type	Description
WARNING	Snap mem	Failed to allocate snapshot memory for VD <name>.
WARNING	Snap space overflow	Failed to allocate snapshot space for VD <name>.
WARNING	Snap threshold	The snapshot space threshold of VD <name> has been reached.
INFO	Snap delete	The snapshot VD <name> has been deleted.
INFO	Snap auto delete	The oldest snapshot VD <name> has been deleted to obtain extra snapshot space.
INFO	Snap take	A snapshot on VD <name> has been taken.
INFO	Snap set space	Set the snapshot space of VD <name> to <number> MB.
INFO	Snap rollback started	Snapshot rollback of VD <name> has been started.
INFO	Snap rollback finished	Snapshot rollback of VD <name> has been finished.
WARNING	Snap quota reached	The quota assigned to snapshot <name> is reached.
INFO	Snap clear space	The snapshot space of VD <name> is cleared

- **iSCSI events**

Level	Type	Description
INFO	iSCSI login accepted	iSCSI login from <IP> succeeds.
INFO	iSCSI login rejected	iSCSI login from <IP> was rejected, reason [<string>]
INFO	iSCSI logout recvd	iSCSI logout from <IP> was received, reason [<string>].

- **Battery backup events**

Level	Type	Description
INFO	BBM start syncing	Abnormal shutdown detected, start flushing battery-backed data (<number> KB).
INFO	BBM stop syncing	Abnormal shutdown detected, flushing battery-backed data finished

INFO	BBM installed	Battery backup module is detected
INFO	BBM status good	Battery backup module is good
INFO	BBM status charging	Battery backup module is charging
WARNING	BBM status fail	Battery backup module is failed
INFO	BBM enabled	Battery backup feature is <string>.
INFO	BBM inserted	Battery backup module is inserted
INFO	BBM removed	Battery backup module is removed

- **JBOD events**

Level	Type	Description
INFO	PD upgrade started	JBOD <name> PD [<string>] starts upgrading firmware process.
INFO	PD upgrade finished	JBOD <name> PD [<string>] finished upgrading firmware process.
WARNING	PD upgrade failed	JBOD <name> PD [<string>] upgrade firmware failed.
INFO	PD freed	JBOD <name> PD <slot> has been freed from RG <name>.
INFO	PD inserted	JBOD <name> disk <slot> is inserted into system.
Warning	PD removed	JBOD <name> disk <slot> is removed from system.
ERROR	HDD read error	JBOD <name> disk <slot> read block error
ERROR	HDD write error	JBOD <name> disk <slot> write block error
ERROR	HDD error	JBOD <name> disk <slot> is disabled.
ERROR	HDD IO timeout	JBOD <name> disk <slot> gets no response
INFO	JBOD inserted	JBOD <name> is inserted into system
WARNING	JBOD removed	JBOD <name> is removed from system
WARNING	SMART T.E.C	JBOD <name> disk <slot>: S.M.A.R.T. Threshold Exceed Condition occurred for attribute <string>
WARNING	SMART fail	JBOD <name> disk <slot>: Failure to get S.M.A.R.T information
INFO	PD dedicated spare	Assign JBOD <name> PD <slot> to be the dedicated spare disk of RG <name>.
INFO	PD global spare	Assign JBOD <name> PD <slot> to Global Spare Disks.
ERROR	Config read fail	Config read error occurred at LBA <address>-<address> of JBOD <name> PD <slot>.
ERROR	Config write fail	Config write error occurred at LBA <address>-<address> of JBOD <name> PD <slot>.
WARNING	PD read error	Read error occurred at LBA <address>-<address> of JBOD <name> PD <slot>.
WARNING	PD write error	Write error occurred at LBA <address>-<address> of JBOD <name> PD <slot>.
INFO	PD scrub started	JBOD <name> PD <slot> starts disk scrubbing process.
INFO	PD scrub completed	JBOD <name> PD <slot> completed disk scrubbing process.
WARNING	PS fail	Power Supply of <string> in JBOD <name> is FAIL
INFO	PS normal	Power Supply of <string> in JBOD <name> is NORMAL
WARNING	FAN fail	Cooling fan of <string> in JBOD <name> is FAIL
INFO	FAN normal	Cooling fan of <string> in JBOD <name> is NORMAL
WARNING	Volt warn OV	Voltage of <string> read as <string> in JBOD <name> is WARN OVER
WARNING	Volt warn UV	Voltage of <string> read as <string> in JBOD <name> is WARN UNDER
WARNING	Volt crit OV	Voltage of <string> read as <string> in JBOD <name> is CRIT OVER

WARNING	Volt crit UV	Voltage of <item> read as <string> in JBOD <name> is CRIT UNDER
INFO	Volt recovery	Voltage of <string> in JBOD <string> is NORMAL
WARNING	Therm warn OT	Temperature of <string> read as <string> in JBOD <name> is OT WARNING
WARNING	Therm warn UT	Temperature of <string> read as <string> in JBOD <name> is UT WARNING
WARNING	Therm fail OT	Temperature of <string> read as <string> in JBOD <name> is OT FAILURE
WARNING	Therm fail UT	Temperature of <string> read as <string> in JBOD <name> is UT FAILURE
INFO	Therm recovery	Temperature of <string> in JBOD <name> is NORMAL

- **System maintenance events**

Level	Type	Description
INFO	System shutdown	System shutdown.
INFO	System reboot	System reboot.
INFO	System console shutdown	System shutdown from <string> via Console UI
INFO	System web shutdown	System shutdown from <string> via Web UI
INFO	System button shutdown	System shutdown via power button
INFO	System LCM shutdown	System shutdown via LCM
INFO	System console reboot	System reboot from <string> via Console UI
INFO	System web reboot	System reboot from <string> via Web UI
INFO	System LCM reboot	System reboot via LCM
INFO	FW upgrade start	System firmware upgrade starts.
INFO	FW upgrade success	System firmware upgrade succeeds.
WARNING	FW upgrade failure	System firmware upgrade is failed.
ERROR	IPC FW upgrade timeout	System firmware upgrade timeout on another controller
INFO	Config imported	<string> config imported

- **HAC events**

Level	Type	Description
INFO	RG owner changed	The preferred owner of RG <name> has been changed to controller <number>.
INFO	Force CTR write through	Controller <number> forced to adopt write-through mode on failover.
INFO	Restore CTR cache mode	Controller <number> restored to previous caching mode on failback.
INFO	Failover complete	All volumes in controller <number> completed failover process.
INFO	Failback complete	All volumes in controller <number> completed failback

		process.
INFO	CTR inserted	Controller <number> is inserted into system
ERROR	CTR removed	Controller <number> is removed from system
ERROR	CTR timeout	Controller <number> gets no response
ERROR	CTR lockdown	Controller <number> is locked down
ERROR	CTR memory NG	Memory size mismatch
ERROR	CTR firmware NG	Firmware version mismatch
ERROR	CTR lowspeed NG	Low speed inter link is down
ERROR	CTR highspeed NG	High speed inter link is down
ERROR	CTR backend NG	SAS expander is down
ERROR	CTR frontend NG	FC IO controller is down
INFO	CTR reboot FW sync	Controller reboot, reason [Firmware synchronization completed]

- **Clone events**

Level	Type	Description
INFO	VD clone started	VD <name> starts cloning process.
INFO	VD clone finished	VD <name> finished cloning process.
WARNING	VD clone failed	The cloning in VD <name> failed.
INFO	VD clone aborted	The cloning in VD <name> was aborted.
INFO	VD clone set	The clone of VD <name> has been designated.
INFO	VD clone reset	The clone of VD <name> is no longer designated.
WARNING	Auto clone error	Auto clone task: <string>.
WARNING	Auto clone no snap	Auto clone task: Snapshot <name> is not found for VD <name>.

6.3 How to get support

If there are any problems to use **iR16IS4ER**, please fill in a **iStoragePro Support Form** on the following, and then send it to info@iStoragePro.com, the support team will answer the questions as soon as possible.

iStoragePro Support Form	
version: 1.1	
Customer information	
Customer name	
Contact email	
Target information	
Model name (*)	
Hardware version	MB (Main board): DB (Daughter board):
Serial number (1)	
Firmware version (*) (2)	
Backplane / Chassis model	
Backplane version	
Target configuration (*)	
RAID configuration (*) (3)	Attached file name:
Event log (*) (4)	Attached file name:
Target HDD	
HDD amount	
HDD vendor / model	
HDD firmware version	

Host information	
Server vendor / model	
OS (*)	
HBA (*)	
HBA BIOS	
Driver version (*)	
SW initiator version	
Others	
LAN Switch vendor / model	
Connect diagram	
Attached file name:	
Problem description (*)	
Reproduce step (*)	
Screenshot	
Attached file name:	
iStoragePro description	
<p>Fields marked as (*) are MUST. At least, these information are MUST to have.</p> <p>Fields marked as (1)(2)(3)(4), you can get them on the following descriptions.</p> <p>(1) In / Maintenance / Info / Controller serial no. or In / Maintenance / System information / Controller serial no.</p> <p>(2) In / Maintenance / Info / System information or</p>	

In / **Maintenance** / **System information** / **System information**

(3) In / **Maintenance** / **Config import & export** / **Export** or
In / **Maintenance** / **Import and export** / **Export**

(4) In / **System config** / **Event log** / **Download** or
In / **Maintenance** / **Event log** / **Download**

Other information is better to have.

Tracking number	
-----------------	--

Appendix

A. Certification list

- RAM

The iR16IS4ER RAM Spec: 240-pin, DDR2-533(PC4300), Reg.(register) or UB(Unbuffered), ECC, up to 4GB, 64-bit data bus width (and also 32-bit memory), x8 or x16 devices, 36-bit addressable, up to 14-bit row address and 10-bit column address.

Vendor	Model
ATP	AJ28K64E8BHE6S, 1GB DDR2-667 (Unbuffered, non-ECC) with SEC
ATP	AJ28K72G8BHE6S, 1GB DDR2-667 (Unbuffered, ECC) with SEC
ATP	AJ56K72G8BJE6S, 2GB DDR2-667 (Unbuffered, ECC) with Samsung
Kingston	KVR667D2E5/1G, 1GB DDR2-667 (Unbuffered, ECC) with Hynix
Kingston	KVR800D2E6/1G, 1GB DDR2 800 (Unbuffered, ECC) with Hynix
Kingston	KVR667D2E5/2G, 2GB DDR2-667 (Unbuffered, ECC) with Hynix
Kingston	KVR800D2E6/2G, 2GB DDR2-800 (Unbuffered, ECC) with ELPIDA
Unigen	UG12T7200L8DU-5AM, 1GB DDR2-533 (Unbuffered, ECC) with Elpida
Unigen	UG12T7200L8DR-5AC, 1GB DDR2-533 (Registered, ECC) with Elpida
Unigen	UG12T7200M8DU-5AL, 1GB DDR2-533 (Unbuffered, ECC) with Hynix
Unigen	UG12T7200L8DU-5AM, 1GB DDR2-533 (Unbuffered, ECC) with Hynix
Unigen	UG25T7200M8DU-5AM, 2GB DDR2-533 (Unbuffered, ECC) with Micron
Unigen	UG12T7200L8DU-6AM, 1GB DDR2-667 (Unbuffered, ECC) with Hynix
Unigen	UG12T7200M8DU-6AK, 1GB DDR2-667 (Unbuffered, ECC, Low profile) with Hynix
Unigen	UG25T7200M8DU-6AMe, 2GB DDR2-667 (Unbuffered, ECC) with Hynix
Unigen	UG25T7200M8DU-6AK, 2GB DDR2-667 (Unbuffered, ECC, Low profile) with Hynix

- iSCSI Initiator (Software)

OS	Software/Release Number
Microsoft Windows	Microsoft iSCSI Software Initiator Release v2.08 System Requirements: 1. Windows 2000 Server with SP4 2. Windows Server 2003 with SP2 3. Windows Server 2008 with SP2
Linux	The iSCSI Initiators are different for different Linux Kernels. 1. For Red Hat Enterprise Linux 3 (Kernel 2.4), install linux-iscsi-3.6.3.tar 2. For Red Hat Enterprise Linux 4 (Kernel 2.6), use the build-in iSCSI initiator iscsi-initiator-utils-4.0.3.0-4 in kernel 2.6.9 3. For Red Hat Enterprise Linux 5 (Kernel 2.6), use the build-in iSCSI initiator iscsi-initiator-utils-6.2.0.742-0.5.el5 in kernel 2.6.18

Mac	ATTO Xtend SAN iSCSI initiator v3.10 System Requirements: 1. Mac OS X v10.5 or later
-----	--

For ATTO Xtend SAN iSCSI initiator, it is not free. Please contact your local distributor.

- **GbE iSCSI HBA card**

Vendor	Model
HP	NC380T (PCI-Express, Gigabit, 2 ports, TCP/IP offload, iSCSI offload)
QLogic	QLA4010C (PCI-X, Gigabit, 1 port, TCP/IP offload, iSCSI offload)
QLogic	QLA4052C (PCI-X, Gigabit, 2 ports, TCP/IP offload, iSCSI offload)

- **GbE NIC**

Vendor	Model
HP	NC7170 (PCI-X, Gigabit, 2 ports)
HP	NC360T (PCI-Express, Gigabit, 2 ports, TCP/IP offload)
IBM	NetXtreme 1000 T (73P4201) (PCI-X, Gigabit, 2 ports, TCP/IP offload)
Intel	PWLA8492MT (PCI-X, Gigabit, 2 ports, TCP/IP offload)

- **GbE Switch**

Vendor	Model
Dell	PowerConnect 5324
Dell	PowerConnect 2724
Dell	PowerConnect 2708
HP	ProCurve 1800-24G

- **Hard drive**

SAS 3.5"

Vendor	Model
Hitachi	Ultrastar 15K147, HUS151436VLS300, 36GB, 15000RPM, SAS 3.0Gb/s, 16M
Hitachi	Ultrastar 15K300, HUS153073VLS300, 73GB, 15000RPM, SAS 3.0Gb/s, 16M (F/W: A410)
Seagate	Cheetah 15K.4, ST336754SS, 36.7GB, 15000RPM, SAS 3.0Gb/s, 8M
Seagate	Cheetah 15K.5, ST373455SS, 73.4GB, 15000RPM, SAS 3.0Gb/s, 16M
Seagate	Cheetah 15K.5, ST3146855SS, 146.8GB, 15000RPM, SAS 3.0Gb/s, 16M
Seagate	Cheetah 15K.6, ST3450856SS, 450GB, 15000RPM, SAS 3.0Gb/s, 16M (F/W: 003)
Seagate	Cheetah NS, ST3400755SS, 400GB, 10000RPM, SAS 3.0Gb/s, 16M
Seagate	Barracuda ES.2, ST31000640SS, 1TB, 7200RPM, SAS 3.0Gb/s, 16M (F/W: 0002)
Seagate	Cheetah NS.2, ST3600002SS, 600GB, 10000RPM, SAS 2.0, 6.0Gb/s, 16M (F/W: 0004)
Seagate	Cheetah 15K.7, ST3600057SS, 600GB, 15000RPM, SAS 2.0, 6.0Gb/s, 16MB (F/W: 0004)

Seagate	Constellation ES, ST31000424SS, 1TB, 7200RPM, SAS 2.0 6.0Gb/s, 16MB (F/W: 0005)
Seagate	Constellation ES, ST32000444SS, 2TB, 7200RPM, SAS 2.0 6.0Gb/s, 16MB (F/W: 0005)

SAS 2.5"

Vendor	Model
Seagate	Savvio 10K.3, ST9300603SS, 300GB, 10000RPM, SAS 2.0, 6.0Gb/s, 16M (F/W: 0003)
Seagate	Savvio 15K.2, ST9146852SS, 147GB, 15000RPM, SAS 2.0, 6.0Gb/s, 16M (F/W: 0002)
Seagate	Constellation, ST9500430SS, 500GB, 7200RPM, SAS 2.0, 6.0Gb/s, 16M (F/W: 0001)

SATA 3.5"

Vendor	Model
Hitachi	Deskstar 7K250, HDS722580VLSA80, 80GB, 7200RPM, SATA, 8M
Hitachi	Deskstar E7K500, HDS725050KLA360, 500GB, 7200RPM, SATA II, 16M
Hitachi	Deskstar 7K80, HDS728040PLA320, 40GB, 7200RPM, SATA II, 2M
Hitachi	Deskstar T7K500, HDT725032VLA360, 320GB, 7200RPM, SATA II, 16M
Hitachi	Deskstar P7K500, HDP725050GLA360, 500GB, 7200RPM, SATA II, 16M (F/W: K2A0AD1A)
Hitachi	Deskstar E7K1000, HDE721010SLA330, 1TB, 7200RPM, SATA 3.0Gb/s, 32MB, NCQ (F/W: ST60A3AA)
Hitachi	UltraStar A7K2000, HUA722020ALA330, 2TB, 7200RPM, SATA 3.0Gb/s, 32MB, NCQ (F/W: JKAOA20N)
Maxtor	DiamondMax Plus 9, 6Y080M0, 80GB, 7200RPM, SATA, 8M
Maxtor	DiamondMax 11, 6H500F0, 500GB, 7200RPM, SATA 3.0Gb/s, 16M
Samsung	SpinPoint P80, HDSASP0812C, 80GB, 7200RPM, SATA, 8M
Seagate	Barracuda 7200.7, ST380013AS, 80GB, 7200RPM, SATA 1.5Gb/s, 8M
Seagate	Barracuda 7200.7, ST380817AS, 80GB, 7200RPM, SATA 1.5Gb/s, 8M, NCQ
Seagate	Barracuda 7200.8, ST3400832AS, 400GB, 7200RPM, SATA 1.5Gb/s, 8M, NCQ
Seagate	Barracuda 7200.9, ST3500641AS, 500GB, 7200RPM, SATA 3.0Gb/s, 16M, NCQ
Seagate	Barracuda 7200.11, ST3500320AS, 500GB, 7200RPM, SATA 3.0Gb/s, 32M, NCQ
Seagate	Barracuda 7200.11, ST31000340AS, 1TB, 7200RPM, SATA 3.0Gb/s, 32M, NCQ
Seagate	Barracuda 7200.11, ST31500341AS, 1.5TB, 7200RPM, SATA 3.0Gb/s, 32M, NCQ (F/W: SD17)
Seagate	NL35.2, ST3400633NS, 400GB, 7200RPM, SATA 3.0Gb/s, 16M
Seagate	NL35.2, ST3500641NS, 500GB, 7200RPM, SATA 3.0Gb/s, 16M
Seagate	Barracuda ES, ST3500630NS, 500GB, 7200RPM, SATA 3.0Gb/s, 16M
Seagate	Barracuda ES, ST3750640NS, 750GB, 7200RPM, SATA 3.0Gb/s, 16M
Seagate	Barracuda ES.2, ST31000340NS, 1TB, 7200RPM, SATA 3.0Gb/s, 32M (F/W: SN06)
Seagate	SV35.5, ST3500410SV, 500GB, 7200 RPM, SATA 3.0Gb/s, 16M, NCQ (F/W: CV11)
Seagate	Constellation ES, ST31000524NS, 1TB, 7200RPM, SATA 3.0Gb/s, 32M, NCQ (F/W: SN11)
Western Digital	Caviar SE, WD800JD, 80GB, 7200RPM, SATA 3.0Gb/s, 8M
Western Digital	Caviar SE, WD1600JD, 160GB, 7200RPM, SATA 1.5G/s, 8M

Western Digital	Caviar RE2, WD4000YR, 400GB, 7200RPM, SATA 1.5Gb/s, 16M, NCQ
Western Digital	Caviar RE16, WD5000AAKS, 500GB, 7200RPM, SATA 3.0Gb/s, 16M
Western Digital	RE2, WD4000YS, 400GB, 7200RPM, SATA 3.0Gb/s, 16M
Western Digital	RE2, WD5000ABYS, 500GB, 7200RPM, SATA 3.0Gb/s, 16M, NCQ
Western Digital	RE2-GP, WD1000FYPS, 1TB, 7200RPM, SATA 3.0Gb/s, 16M
Western Digital	RE3, WD1002FBYS, 1000GB, 7200RPM, SATA 3.0Gb/s, 32M, NCQ (F/W: 03.00C05)
Western Digital	RE4, WD2002FYPS, 2TB, IntelliPower, SATA 3.0Gb/s, 64M, NCQ (F/W: 04.05G04)
Western Digital	RE4-GP, WD2002FYPS, 2TB, IntelliPower, SATA 3.0Gb/s, 64M, NCQ (F/W: 04.01G01)
Western Digital	RE4, WD2003FYYS, 2TB, 7200RPM, SATA 3.0Gb/s, 64M, NCQ (F/W: 01.01D01)
Western Digital	RE4, WD1003FBYX, 1TB, 7200RPM, SATA 3.0Gb/s, 64M, NCQ (F/W: 01.01V01)
Western Digital	RE4, WD5003ABYX, 500GB, 7200RPM, SATA 3.0Gb/s, 64M, NCQ (F/W: 01.01S01)
Western Digital	Raptor, WD360GD, 36.7GB, 10000RPM, SATA 1.5Gb/s, 8M
Western Digital	VelcoiRaptor, WD3000HLFS, 300GB, 10000RPM, SATA 3.0Gb/s, 16M (F/W: 04.04V01)

SATA 2.5"

Vendor	Model
Seagate	Constellation, ST9500530NS, 500GB, 7200RPM, SATA 3.0Gb/s, 32M (F/W: SN02)

Please visit **iStoragePro** website to get the newest certification list, or contact info@iStoragePro.com

B. Microsoft iSCSI initiator

Here is the step by step to setup Microsoft iSCSI Initiator. Please visit Microsoft website for latest iSCSI initiator. This example is based on Microsoft Windows Server 2008 R2.

- **Connect**

1. Run Microsoft iSCSI Initiator.
2. Click “**Discovery**” tab.
3. Click “**Add Portal...**”. Input IP address or DNS name of the target.

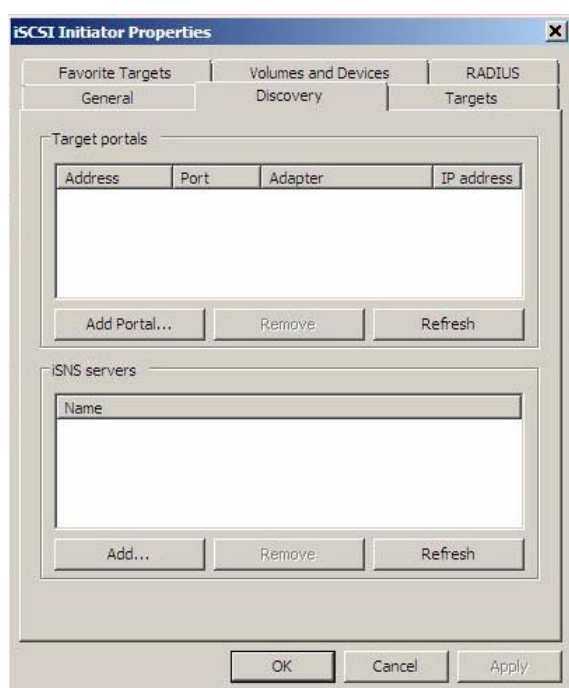


Figure B.1

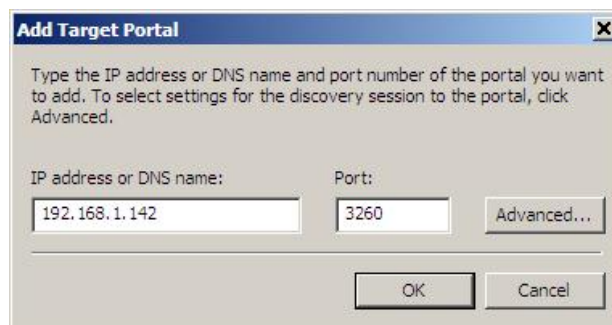


Figure B.2

4. Click “**OK**”

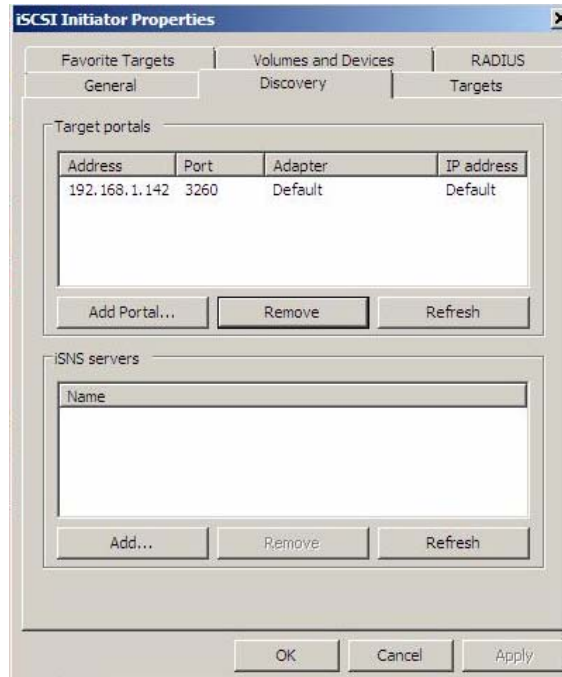


Figure B.3

5. Click **“Target”** tab.
Highlight the Targets Name.

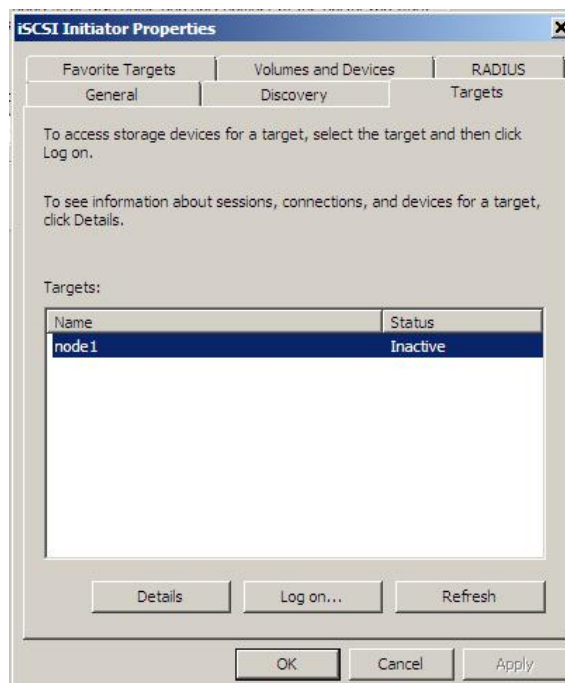


Figure B.4

6. Click **“Log on...”**.
Enable **“Automatically restore this connection when the computer starts”** checkbox.
Enable **“Enable multi-path”** checkbox.

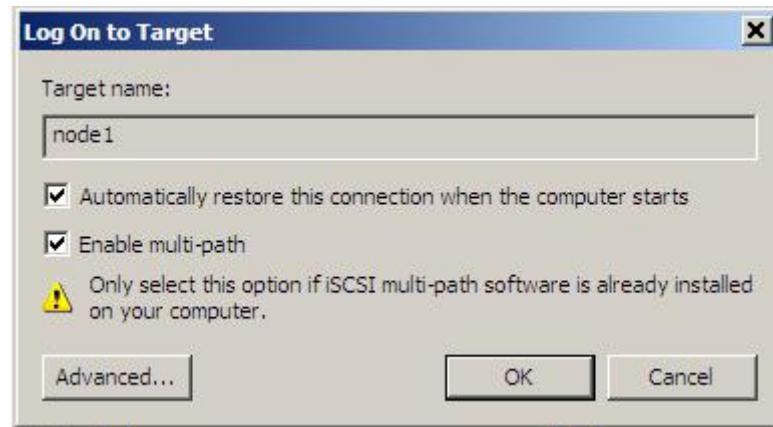


Figure B.5

7. Click **“Advanced...”**.
8. Select **“Local adapter:”**, **“Source IP:”** and **“Target portal:”**. And then click **“OK”**

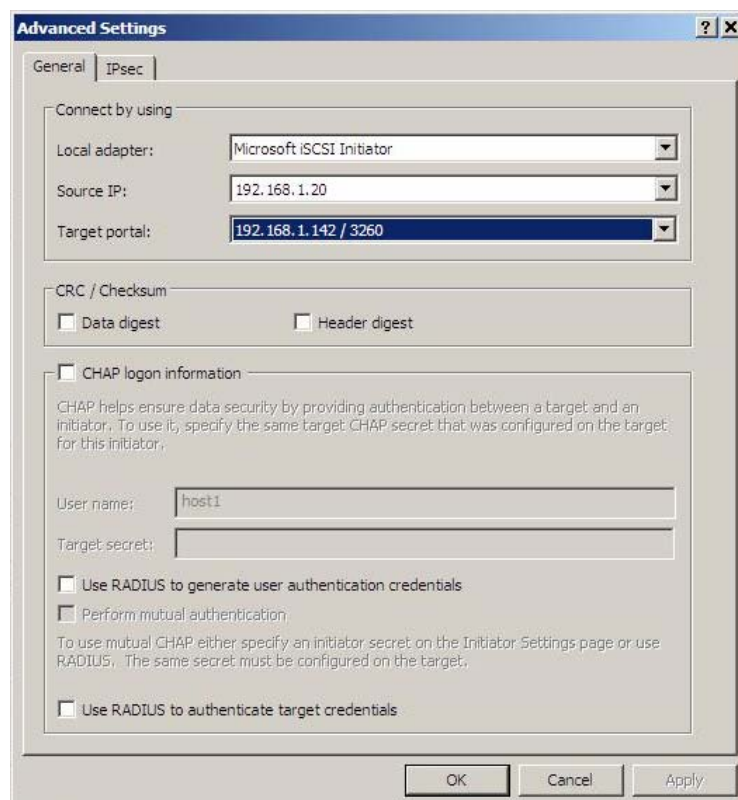


Figure B.6

9. Click **“OK”**

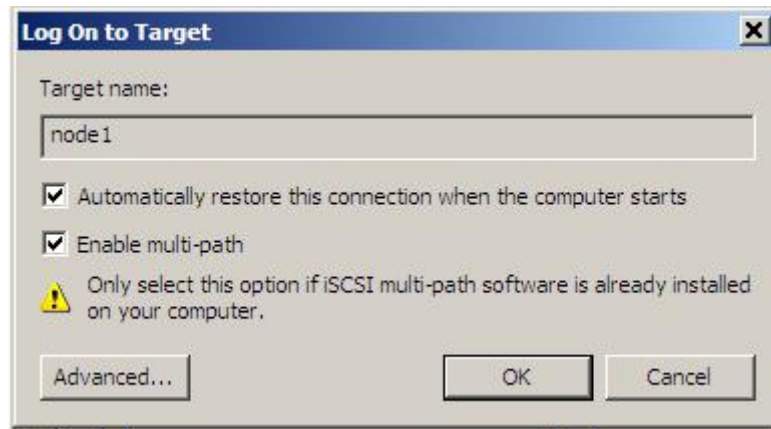


Figure B.7

10. Click **“OK”**. The iSCSI is now connected.

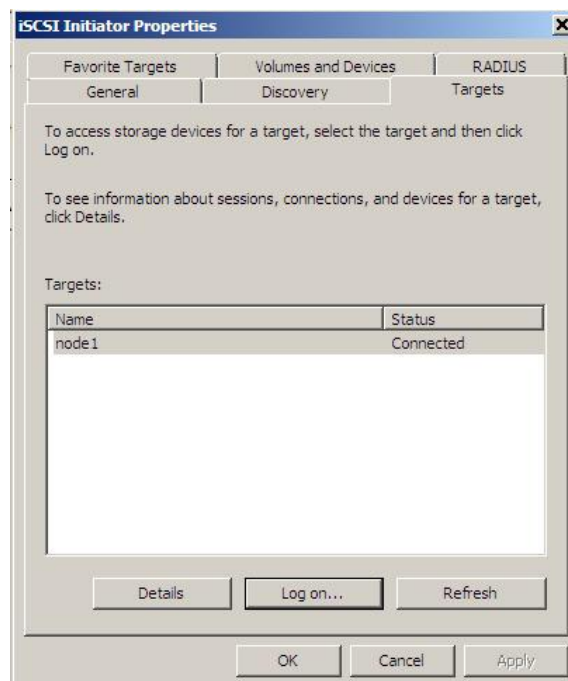


Figure B.8

- **MPIO**

11. If running MPIO, please continue.
12. Click “**Discovery**” tab to connect the second path.
13. Click “**Add Portal...**”. Input IP address or DNS name of the target.

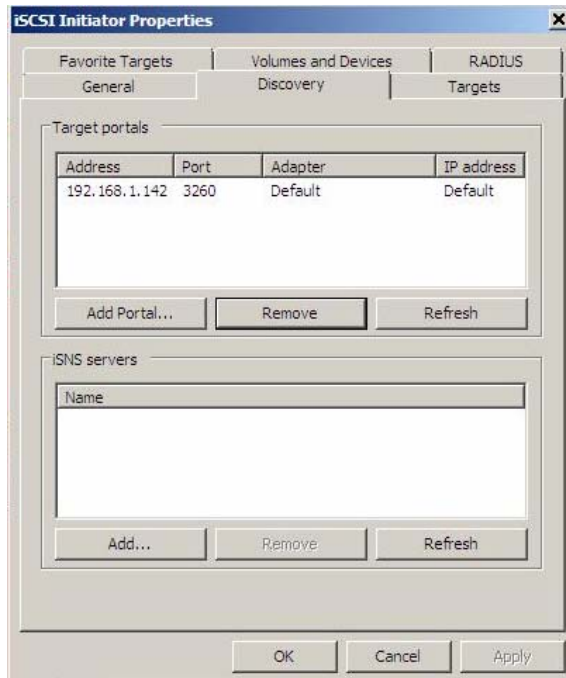


Figure B.9

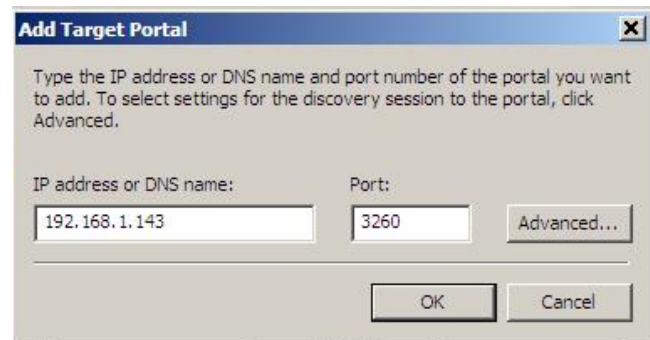


Figure B.10

14. Click “**OK**”.

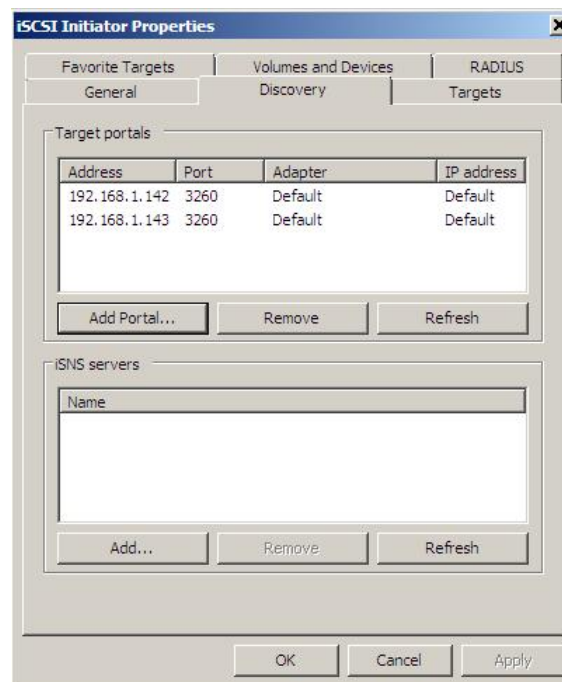


Figure B.11

15. Click **“Targets”** tab, select Targets Name, and then click **“Log On...”**.
16. Enable **“Enable multi-path”** checkbox. Then click **“Advanced”**.

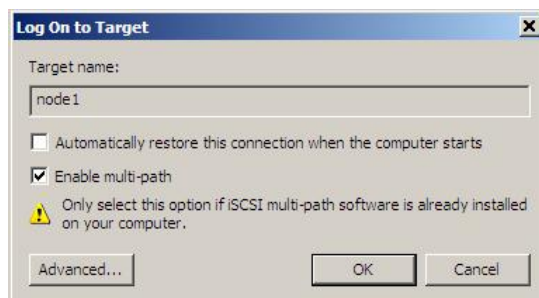


Figure B.12

17. Select **“Local adapter:”**, **“Source IP:”** and **“Target portal:”**. And then click **“OK”**

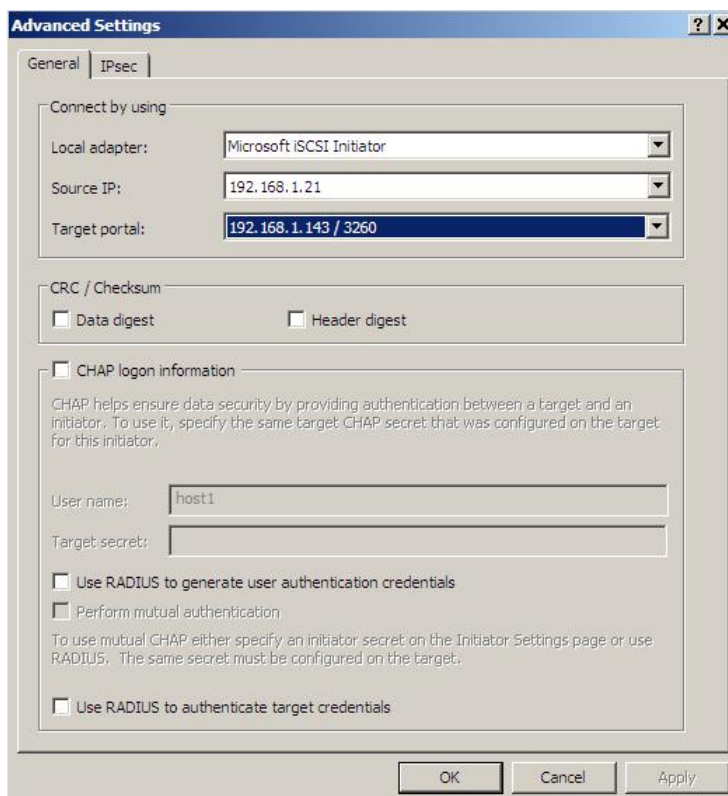


Figure B.13

18. Click **“OK”**

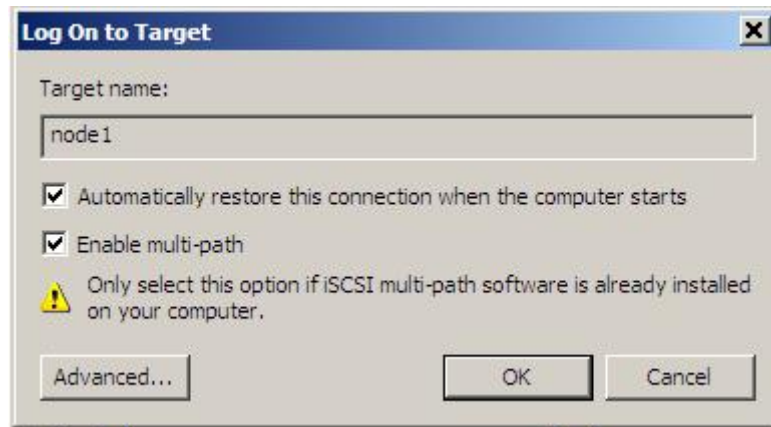


Figure B.14

19. Done, it can connect to an iSCSI disk with MPIO.

- **MC/S**

20. If running MC/S, please continue.

21. On **“Targets”** tab, select one target name, click **“Details”**.

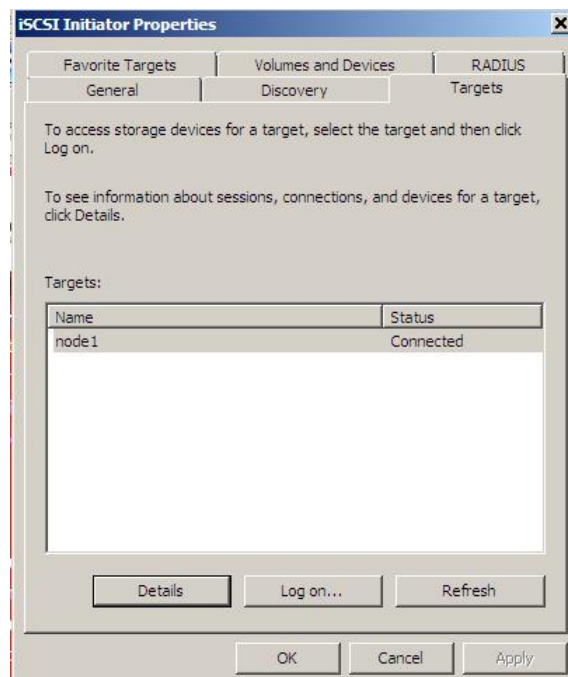


Figure B.15

22. Click **“Connections...”**.

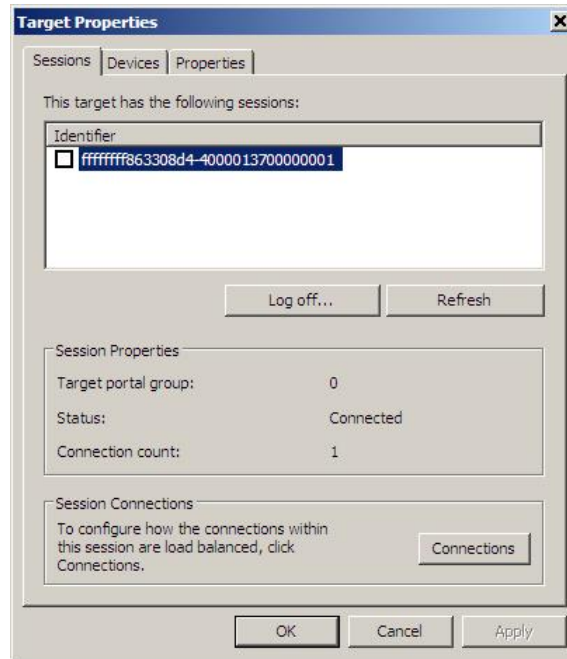


Figure B.16

23. Click **“Add”**.

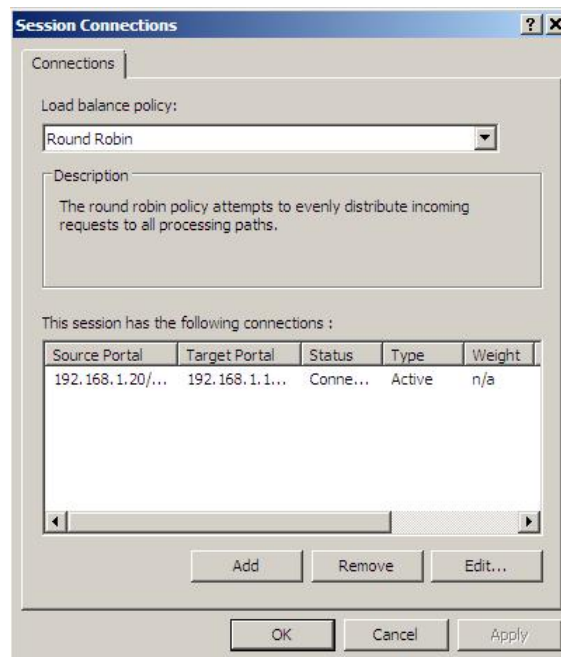


Figure B.17

24. Click **“Advanced...”**.

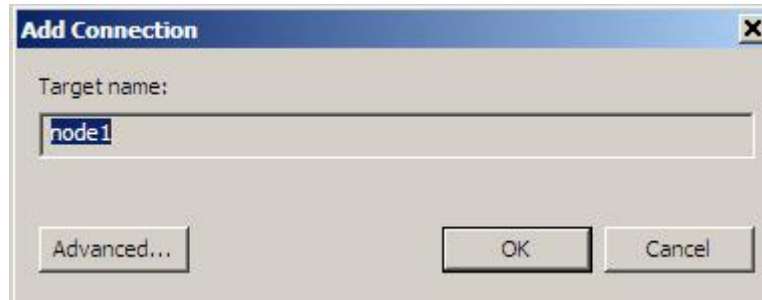


Figure B.18

25. Select **"Source IP:"** and **"Target portal:"**.
26. Click **"OK"**

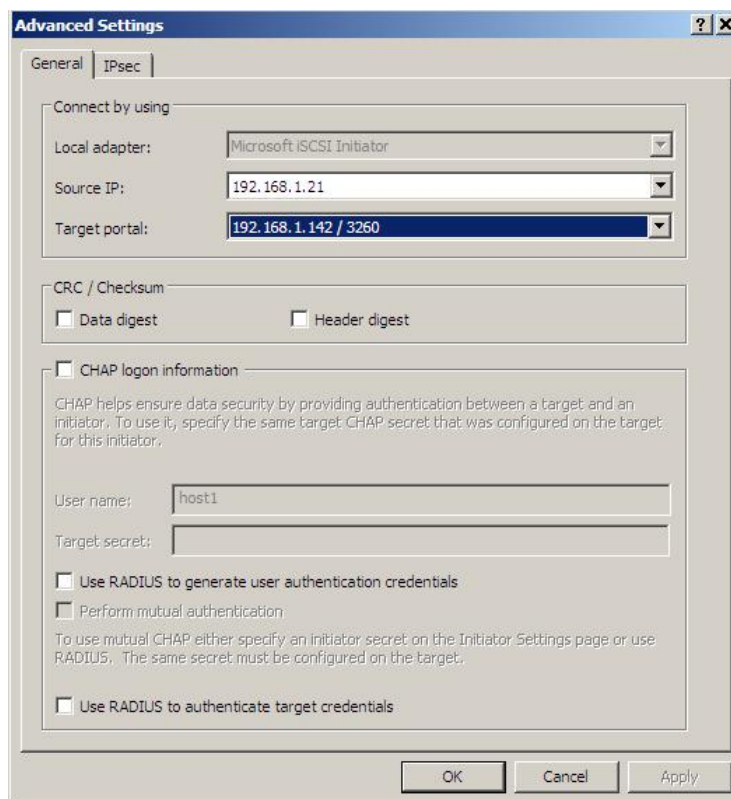
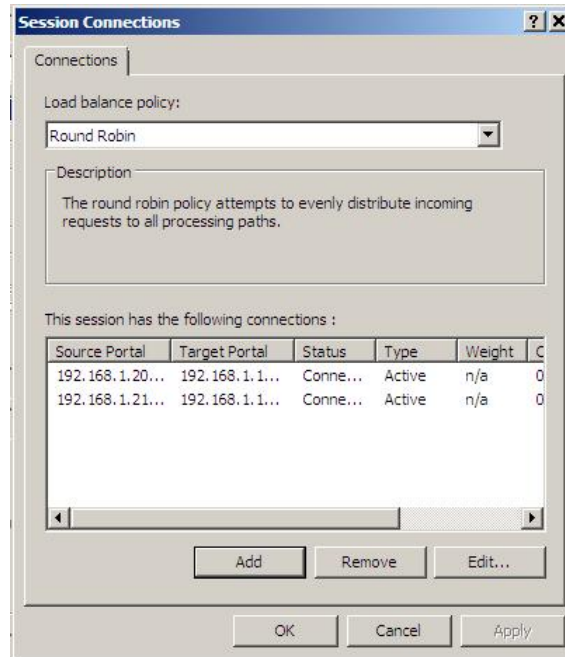


Figure B.19

27. Click **"OK"**

**Figure B.20**

28. Done, it can connect to an iSCSI disk with MC/S.

System information

	iR16IS4ER
SW version	1.0.8p2